


### Models

AC2-T: Auxiliary switches for L, T, and R actuators.




AC2-T

### Technical Specification

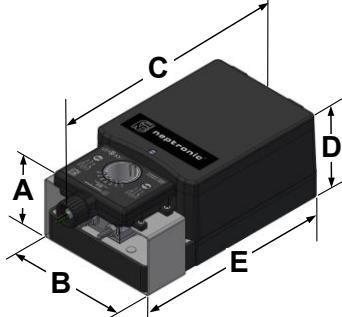Description	AC2-T
Actuator Compatibility	Neptronic L, T, and R series actuators
Power Supply	125VAC, 5A Resistive or 250VAC, 3A Resistive
Electrical Connection	Cable 39.5" (1m), 6 x 18AWG, FT1 with 1/2" conduit connector
Purpose and Action of Control	Type 1 operating control
Construction of Control	Independently mounted, accessory
Pollution Degree	2
Impulse Voltage	4000V
Dimensions	<p>A = 3.7" (94mm)          B = 5.3" (135mm)          C = 10.7" (272mm)          D = 3.6" or 3.8" (91mm or 97mm)          E = 9.1" (231mm)</p> 


### Wiring Diagram

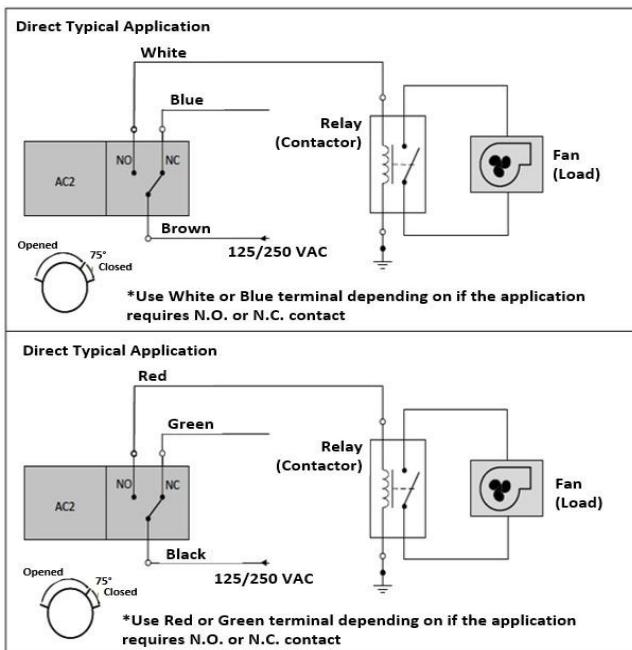


*\*The auxiliary switch comes factory preset: 10° - 80°*

## Mounting Instruction

1. Slide the bracket onto the actuator and secure it by inserting the two bolts from the bottom into the threaded holes of the actuator (supplied).

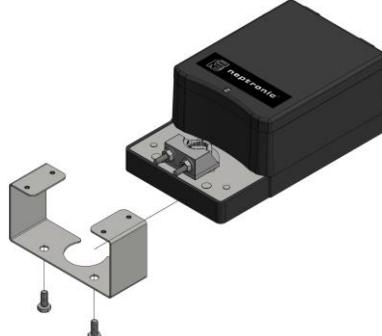

2. Using the four screws (supplied), secure the auxiliary switch onto the bracket. Ensure that the actuator adaptor is properly aligned with the auxiliary adaptor.

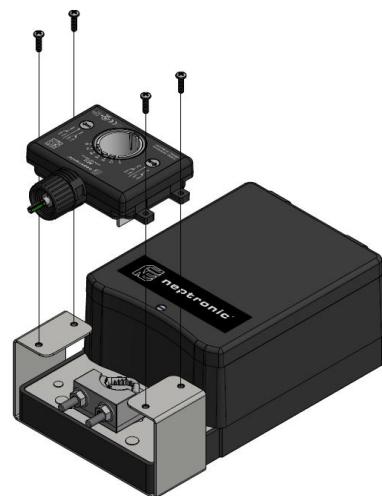

## Actuator Positioning

1. Using a flathead screwdriver, turn the left arrow on the auxiliary switch so that the arrowhead is aligned with the arrow on the wiring diagram.
2. Turn the dial on the auxiliary switch to the desired position for the actuator lower contact.
3. Using a flathead screwdriver, turn the right arrow on the auxiliary switch so that the arrowhead is aligned with the arrow on the wiring diagram.
4. Turn the dial on the auxiliary switch to the desired position for the actuator's upper contact.



15° Position



Recycling at end of life: please return this product to your Neptronic local distributor for recycling. If you need to find the nearest Neptronic authorized distributor, please consult [www.neptronic.com](http://www.neptronic.com).