

Specification and Installation Instructions

#### Model SHS20

**Description**The SHS20 is a wall mounted high limit humidistat capable of monitoring and controlling relative humidity for applications using a room distribution system. Its primary function is to act as an On/Off high limit protection for humidifiers equipped with a space distribution unit (SDU).

#### **Features**

- On/Off high limit humidistat with on-board setpoint adjustment (20 to 90%RH)
- Built-in humidity sensor
- Plastic cover for wall mount installation
- 24Vac or 24Vdc
- 1 dry contact output (normally open)



**Technical Specifications** 

Specifications	SHS20
Power supply	24 Vac or Vdc ±10%
Power consumption	1 VA
Electrical connection	0.8 mm <sup>2</sup> [18 AWG] minimum
Humidity sensor precision	±3% at 40 %RH and 23°C [73°F]
High limit setpoint range	20 to 90 %RH
Operating temperature	32°F to 104°F [0°C to 40°C]
Storage temperature	14°F to 122°F [-10°C to +50°C]
Relative humidity	0 to 95 %RH
Enclosure protection	IP 30 (EN 60529)
Weight	0.13 lb [60 g]
Dimensions  A = 2.85" (72mm) B = 4.85" (123mm) C = 1.00" (25mm) D = 2.36" (60mm) E = 3.27" (83mm) F = 1.02" (26mm)	

SHS20-200327-ESA Page | 1




Specification and Installation Instructions

### **Mounting Instructions**




CAUTION: Remove power to avoid a risk of malfunction.

- A. Remove the captive screw that's holding the base and the front cover of the unit together.
- B. Lift the front cover of the unit to separate it from the base.
- C. Pull all wires through the holes in the base.
- D. Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- E. Mount the front cover on the base and secure using the screw.

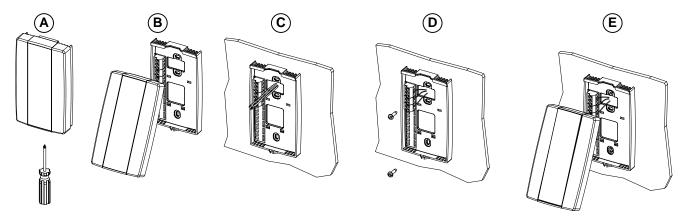

#### **PCB Overview**

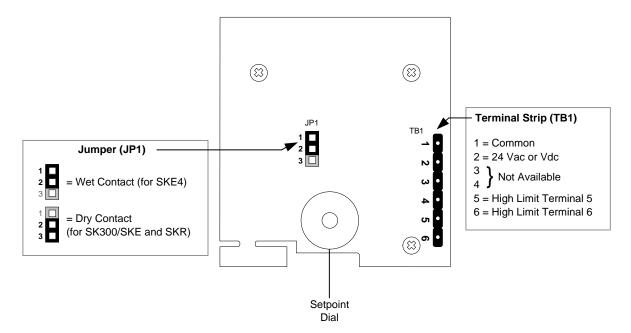




Specification and Installation Instructions


#### **Wiring Diagrams**

**SKE4 Humidifier** 

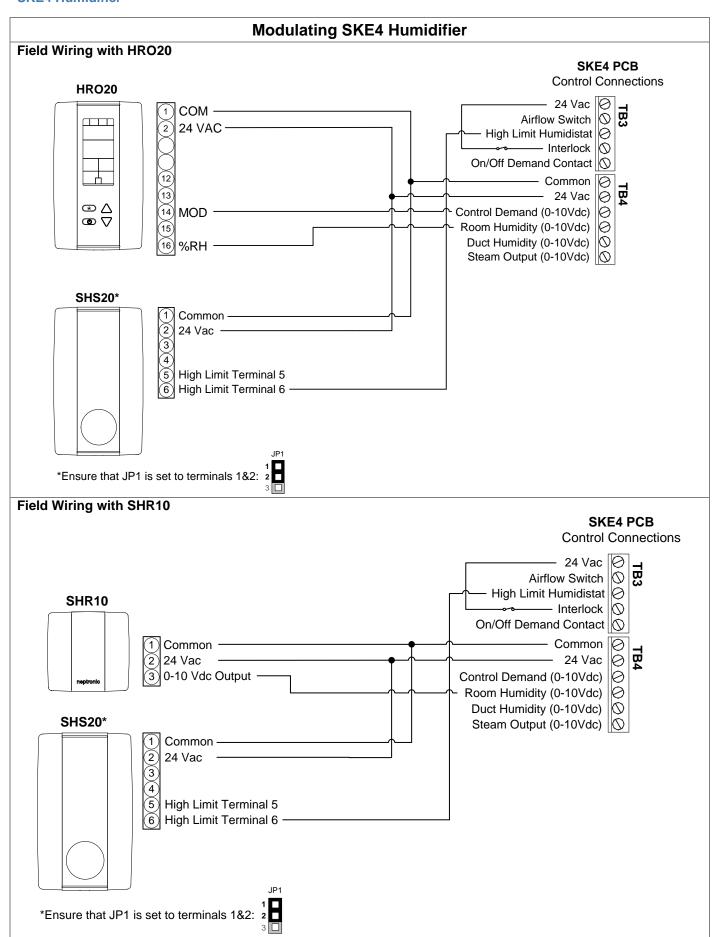




Specification and Installation Instructions

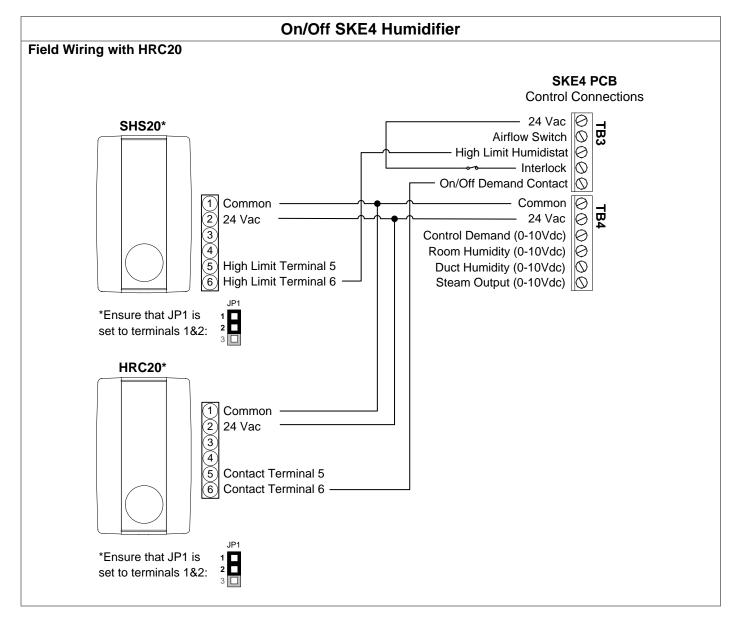




Specification and Installation Instructions

#### SK300/SKE Humidifier

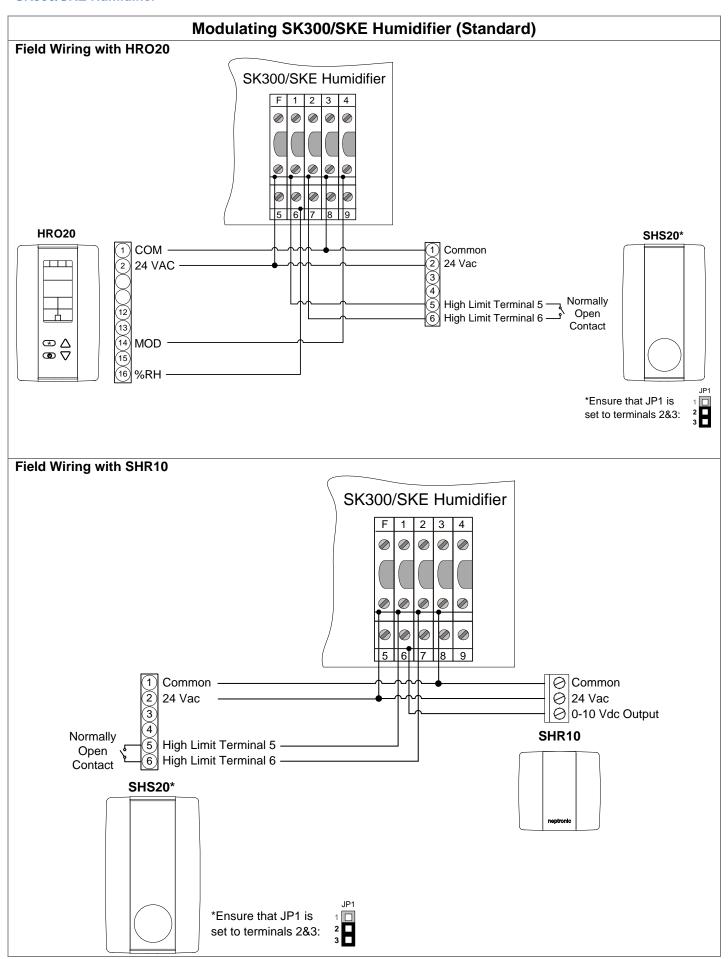




Specification and Installation Instructions

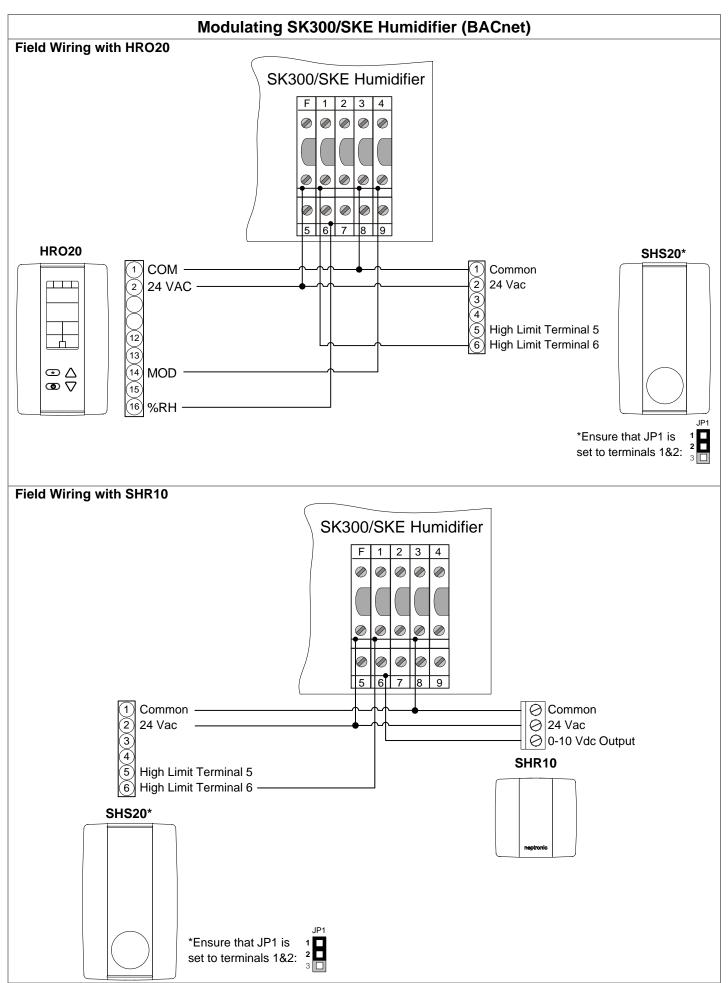




Specification and Installation Instructions

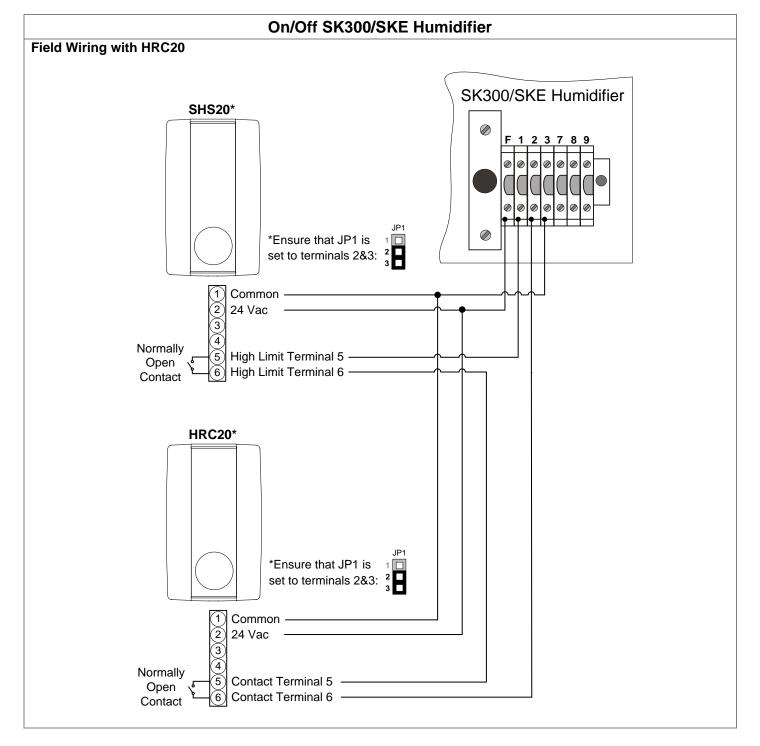




Specification and Installation Instructions

#### **SKR Humidifier**

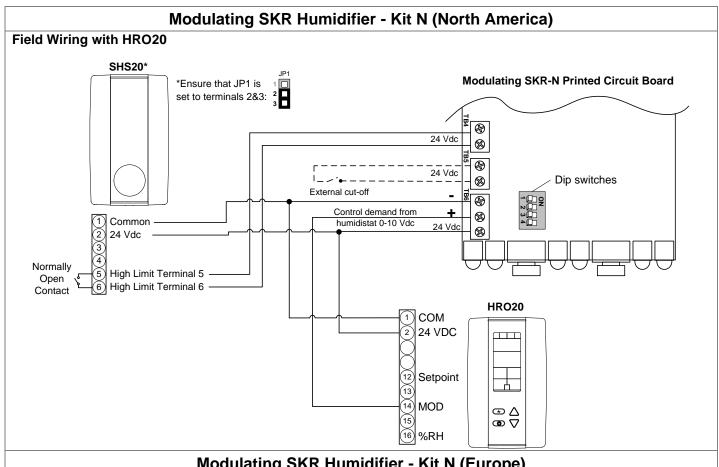


#### Modulating SKR Humidifier - Kit N (Europe)

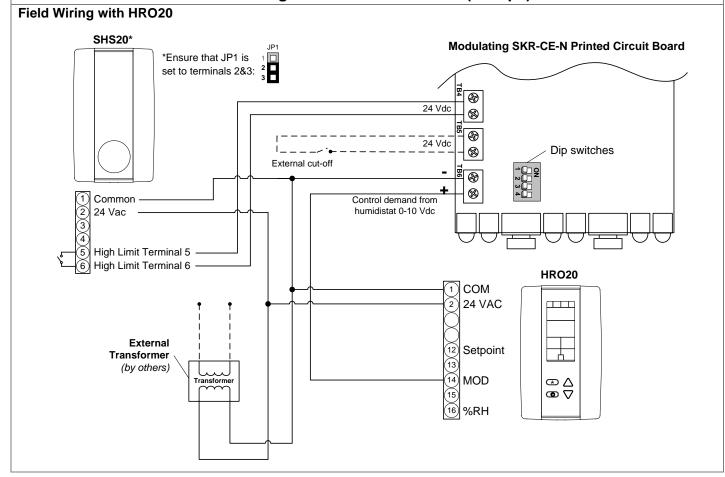



Specification and Installation Instructions

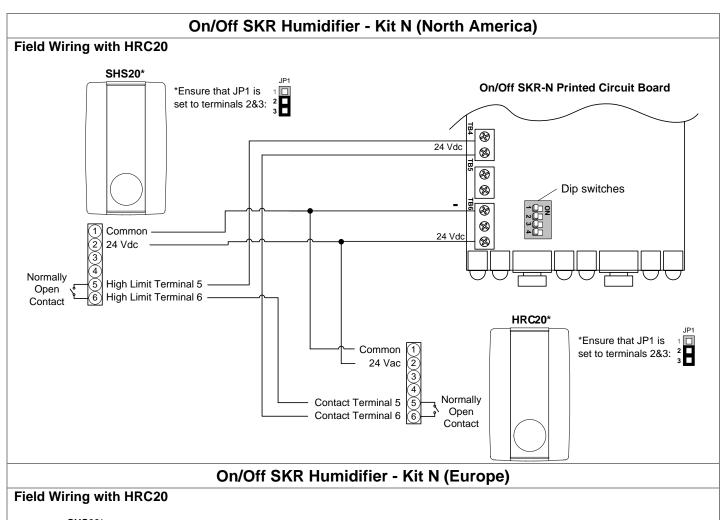

#### SHS20\* Modulating SKR-CE-N Printed Circuit Board \*Ensure that JP1 is set to terminals 2&3: 2 **(B)** 24 Vdc 8 **(P)** ⊗ Dip switches Common 24 Vac High Limit Terminal 5 High Limit Terminal 6 HRC20\* \*Ensure that JP1 is \*Ensure that JP1 is set to terminals 2&3: 2 3 Common External 24 Vac Transformer (by others) Normally Contact Terminal 5 Open Contact Terminal 6

Notes	





Recycling at end of life: please return this product to your Neptronic local distributor for recycling. If you need to find the nearest Neptronic authorized distributor, please consult www.neptronic.com.



# neptronic

400 Lebeau blvd, Montreal, Qc, H4N 1R6, Canada www.neptronic.com
Toll free in North America: 1-800-361-2308

Tel.: (514) 333-1433 Fax: (514) 333-3163

Customer service fax: (514) 333-1091 Monday to Friday: 8:00am to 5:00pm (Eastern time)