
# Temperature window sensor

# **Installation instruction**

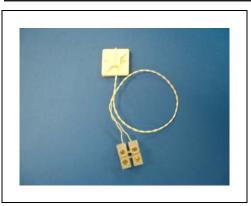

### Feature:

 
Temperature sensor

 
OTW

- Self adhesive to stick on window.
- To be installed in association with Neptronic<sup>®</sup> room (HRM) or duct (HDM) humidistat

**OTW Technical Data Electrical connection** 2 twisted wires AWG28, length 7.5" [19mm], connected to 2 poles terminal. Signal Variable resistance -58°F to +212°F [-50° C to +100° C] Rating -58°F to +212°F [-50° C to +100° C] **Ambient temperature** -58°F to +212°F [-50° C to +100° C] Storage temperature **Relative Humidity** 5 to 95 % non condensing. Weight 0.01lb [5g]

#### **Dimensions**






### Wiring Diagrams


Connection to HRM or HDM (Humidifier SK300 or SKE series)

## HRM/HDM terminal

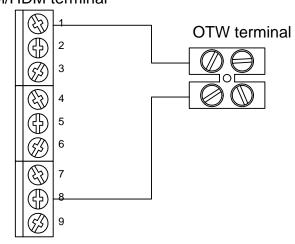

Connect **OTW** to terminal #1 & 8 of the HRM or HDM.

## Connection to SKR

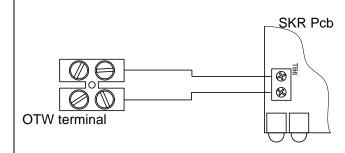

Connect **OTW** to terminal TB6 of the SKR Printed circuit board.