



## Models

Model	Temp	RH
TSU00-110	•	
TSU00-111	•	•

## Description

The TSU is a standalone wall-mount controller with a built-in temperature sensor. The unit is designed for simple and accurate control of a fan coil unit. Its field configurable algorithms enable versatile implementation of required control sequences.

Featuring an external humidity sensor input for accurate humidity control, this comprehensive unit also provides a dehumidification sequence compensated by auto activation of reheat output.

The controller is available with an additional humidity sensor, providing more functionality for the terminal device.



TSU00 Series

## Features

- Fan control: 1, 2 or 3-speed (auto/on), or analog (ECM)
- Optional internal/external humidity sensor input for simple and accurate humidity control
- Dehumidification sequence compensated by auto activation of reheat output
- Real time clock (RTC) with 24-hour backup
- 7-day programmable schedule
- Precise temperature control with configurable PI (Proportional-Integral) function
- Selectable internal or external temperature sensor
- Low limit set protection (10°C / 50°F)
- Occupancy and night set back (NSB) mode
- Select direction on outputs
- Select controller's default display
- Multi-level lockable access menu and setpoint
- Selectable Fahrenheit or Celsius scale
- Option of pulse/floating/on-off output on binary outputs
- Internal/external occupancy input
- Compressor anti-cycling delay (configurable)
- ΔT control (on request)

## Onboard Sensors

- Temperature sensor (°C/°F)
- Humidity sensor (%RH), select models




## Technical Specifications

Description	TSU Series
<b>Temperature Sensor</b>	
Setpoint Range	10°C to 40°C [50°F to 104°F]
Control Accuracy	Temperature: ±0.4°C [0.8°F]
Display Resolution	±0.1°C [0.2°F]
<b>Humidity Sensor (select models)</b>	
Setpoint Range	10% to 90% RH
Control Accuracy	±3.5% RH
Display Resolution	0.1%
<b>Other</b>	
Inputs	2 Universal Inputs (0-10Vdc, 10KΩ sensor, dry contact)
Outputs	5 Binary Outputs (OptoFET, 250mA max) 2 Analog Outputs (0-10Vdc, adjustable)
Power supply	22 to 26 Vac 50/60Hz
Power consumption	1 VA max
Proportional band	0.5°C to 5°C [1°F to 9°F] adjustable (heat/cool/reheat independent)
Dead band	0.0°C to 5°C [0.0°F to 9°F] adjustable (heat/cool/reheat independent)
Electrical connection	0.8 mm² [18 AWG] minimum
Operating temperature	0°C to 50°C [32°F to 122°F]
Storage temperature	-30°C to 50°C [-22°F to 122°F]
Relative Humidity	5 to 95% noncondensing
Degree of protection of housing	IP 30 (EN 60529)
Weight	135 g. [0.30 lb]
Dimensions: A = 4.88"   124mm B = 3.25"   83mm C = 1.75"   44mm D = 0.96"   24mm E = 2.07"   53mm F = 2.36"   60mm G = 3.28"   83mm H = 0.78"   20mm	<p>The technical drawing illustrates the physical dimensions of the TSU Series controller. The front panel dimensions are: A (height) = 4.88" / 124mm, B (width) = 3.25" / 83mm, C (depth) = 1.75" / 44mm, D (top thickness) = 0.96" / 24mm, E (bottom thickness) = 2.07" / 53mm, F (left side thickness) = 2.36" / 60mm, G (right side thickness) = 3.28" / 83mm, and H (bottom thickness) = 0.78" / 20mm. The rear panel dimensions are: A (height) = 4.88" / 124mm, B (width) = 3.25" / 83mm, C (depth) = 1.75" / 44mm, and D (top thickness) = 0.96" / 24mm.</p>



### Wiring

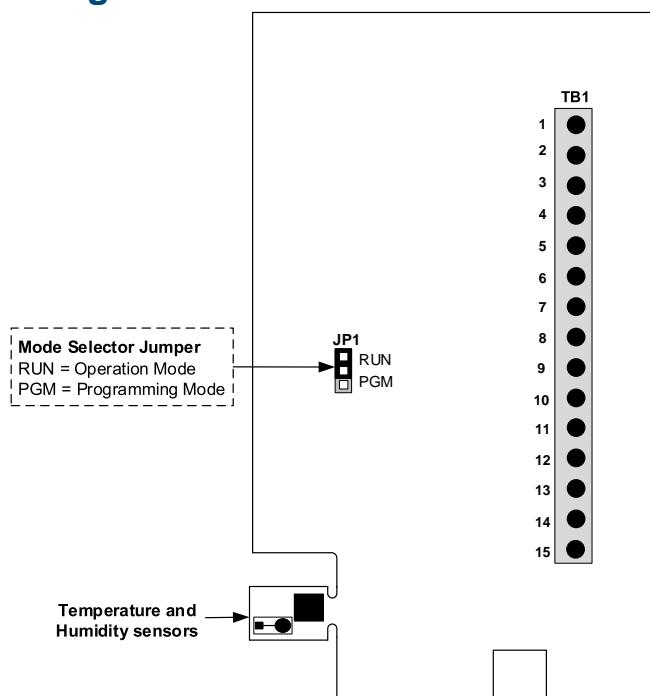

We strongly recommend that all Neptronic products be wired to a separate grounded transformer and that transformer shall service only Neptronic products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.

### Terminal Description

Terminals	Analog Option			
	Fan analog	1-Speed Fan	2-Speed Fan	3-Speed Fan
1 COM (PWR)			Common (power input)	
2 24 Vac (PWR)			24 Vac (power input)	
3 COM (BO)			Common (for binary output)	
4 N/A			N/A	
5 N/A			N/A	
6 BO3		select any ramp*		
7 BO4		select any ramp*		Fan (speed 3)
8 BO5	select any ramp*		Fan (speed 2)	Fan (speed 2)
9 BO6	select any ramp*	Fan (speed 1)	Fan (speed 1)	Fan (speed 1)
TB1 10 BO7		select any ramp*		
11 AO2	Fan Speed option • Modulating 0-10Vdc for ECM Motors • Steps of 3,6,9V for 3 Speed			select any ramp*
12 AO3		select any ramp*		
13 COM		Common		
14 UI1	Universal Input selection: • 0-10 Vdc (External sensor, humidity, CO <sub>2</sub> ) • 10K Ohm (External sensor, changeover) • Dry Contact**			
15 UI2				

\* = select from any of the following ramps:

- Cooling 1 w/ fan
- Cooling 2 w/ fan
- Heating 1 w/ fan
- Heating 2 w/ fan
- Heating 2 without fan
- Cool/Heat 1 w/ fan
- COR (changeover) w/ fan
- Humidify w/ fan
- CO<sub>2</sub> Alarm
- Off

\*\* = select from any of the following:

- Off
- Override
- Flow Switch
- Local/Remote Selector Switch
- Overheat
- Dirty Filter
- Window & Door Contacts
- Occupancy & NSB Sensor
- Changeover Input



## Wiring - 2 Pipe Terminal Description Details

Terminals	Analog				On/Off									
	Fan analog	1-Speed Fan	2-Speed Fan	3-Speed Fan	Fan analog	1-Speed Fan	2-Speed Fan	3-Speed Fan						
1	COM (PWR)	Common (power input)				Common (power input)								
2	24 Vac (PWR)	24 Vac (power input)				24 Vac (power input)								
3	COM (BO)	Common (for binary output)				Common (for binary output)								
4	N/A	N/A				N/A								
5	N/A	N/A				N/A								
6	BO3	select any ramp*				Changeover with fan (CO)								
7	BO4	select any ramp*			Fan (speed 3)	select any ramp*		Fan (speed 3)						
8	BO5	select any ramp*		Fan (speed 2)	Fan (speed 2)	select any ramp*	Fan (speed 2)	Fan (speed 2)						
9	BO6	select any ramp*	Fan (speed1)	Fan (speed1)	Fan (speed1)	select any ramp*	Fan (speed1)	Fan (speed1)						
10	BO7	Heating Ramp 1 (Hr1)				Heating Ramp 1 (Hr1)								
11	AO2	Fan Speed option †	Heating Ramp 1 (Hr1)			Fan Speed option †	Heating Ramp 1 (Hr1)							
12	AO3	Changeover with fan (CO)				select any ramp*								
13	COM	Common				Common								
14	UI1	Changeover Input (SENs)				Changeover Input (SENs)								
15	UI2	Occupancy/Night Setback (OCC/nSb) External Temperature Sensor (t10.0) External Humidity Sensor (HU)				Occupancy/Night Setback (OCC/nSb) External Temperature Sensor (t10.0) External Humidity Sensor (HU)								

Terminals	Floating							
	Fan analog	1-Speed Fan	2-Speed Fan	3-Speed Fan				
1	COM (PWR)	Common (power input)						
2	24 Vac (PWR)	24 Vac (power input)						
3	COM (BO)	Common (for binary output)						
4	N/A	N/A						
5	N/A	N/A						
6	BO3	Cooling Ramp 1 (Cr1)						
7	BO4	select any ramp*	Heating Ramp 1 (Hr1)					
8	BO5	select any ramp*		Fan (speed 2)	Fan (speed 2)			
9	BO6	select any ramp*	Fan (speed1)	Fan (speed1)	Fan (speed1)			
10	BO7	select any ramp*						
11	AO2	Fan Speed option †	Heating Ramp 1 (Hr1)					
12	AO3	select any ramp*						
13	COM	Common						
14	UI1	Changeover Input (SENs)						
15	UI2	Occupancy/Night Setback (OCC/nSb) External Temperature Sensor (t10.0) External Humidity Sensor (HU)						

\* = select from any of the following ramps:

- Cooling 1 w/ fan
- Cooling 2 w/ fan
- Heating 1 w/ fan
- Heating 2 w/ fan
- Heating 2 without fan
- Cool/Heat 1 w/ fan
- COR (changeover) w/ fan
- Humidify w/ fan
- CO<sub>2</sub> Alarm
- Off

† = Fan Speed Option:

- Modulating: 0-10Vdc for ECM Motors
- Steps of 3,6,9V for 3 Speed



## Wiring - 4 Pipe Terminal Description Details

Terminals		Cool: Analog Heat: Analog				Cool: On/Off Heat: On/Off						
		Fan analog	1-Speed Fan	2-Speed Fan	3-Speed Fan	Fan analog	1-Speed Fan	2-Speed Fan	3-Speed Fan			
1	COM (PWR)	Common (power input)				Common (power input)						
2	24 Vac (PWR)	24 Vac (power input)				24 Vac (power input)						
3	COM (BO)	Common (for binary output)				Common (for binary output)						
4	N/A	N/A				N/A						
5	N/A	N/A				N/A						
6	BO3	select any ramp*				Cooling Ramp 1 (Cr1)						
7	BO4	select any ramp*			Fan (speed 3)	select any ramp*	Heating Ramp 1 (Hr1)					
8	BO5	select any ramp*		Fan (speed 2)	Fan (speed 2)	select any ramp*	Fan (speed 2)	Fan (speed 2)				
9	BO6	select any ramp*	Fan (speed1)	Fan (speed1)	Fan (speed1)	select any ramp*	Fan (speed1)	Fan (speed1)	Fan (speed1)			
10	BO7	Heating Ramp 1 (Hr1)				select any ramp*						
11	AO2	Cooling Ramp 1 (Cr1)				Fan Speed option †	select any ramp*					
12	AO3	Heating Ramp 1 (Hr1)				Heating Ramp 1 (Hr1)						
13	COM	Common				Common						
14	UI1	Occupancy/Night Setback (OCC/nSb)				Occupancy/Night Setback (OCC/nSb)						
15	UI2	External Temperature Sensor (t10.0) External Humidity Sensor (HU)				External Temperature Sensor (t10.0) External Humidity Sensor (HU)						

\* = select from any of the following ramps:

† = Fan Speed Option:

- Cooling 1 w/ fan
- Cooling 2 w/ fan
- Heating 1 w/ fan
- Heating 2 w/ fan
- Heating 2 without fan
- Cool/Heat 1 w/ fan
- COR (changeover) w/ fan
- Humidify w/ fan
- CO<sub>2</sub> Alarm
- Off
- Modulating: 0-10Vdc for ECM Motors
- Steps of 3,6,9V for 3 Speed

## Interface




	Network Communication		User Lock		Programming Mode (Technician Setting)
	Alarm Status		Energy Saving Mode (NSB/OCC)		Time
°C °F %RH	°C: Celsius Scale °F: Fahrenheit Scale %RH: Humidity	A	Automatic Mode		Cooling
	Heating		Fan		Humidify/De-humidify



## Mounting Instructions


**!** CAUTION: Remove power to avoid a risk of malfunction.

- A. Remove the captive screw that's holding the base and the front cover of the unit together.
- B. Lift the front cover of the unit to separate it from the base.
- C. Pull all wires through the holes in the base.
- D. Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- E. Mount the control module on the base and secure using the screw.

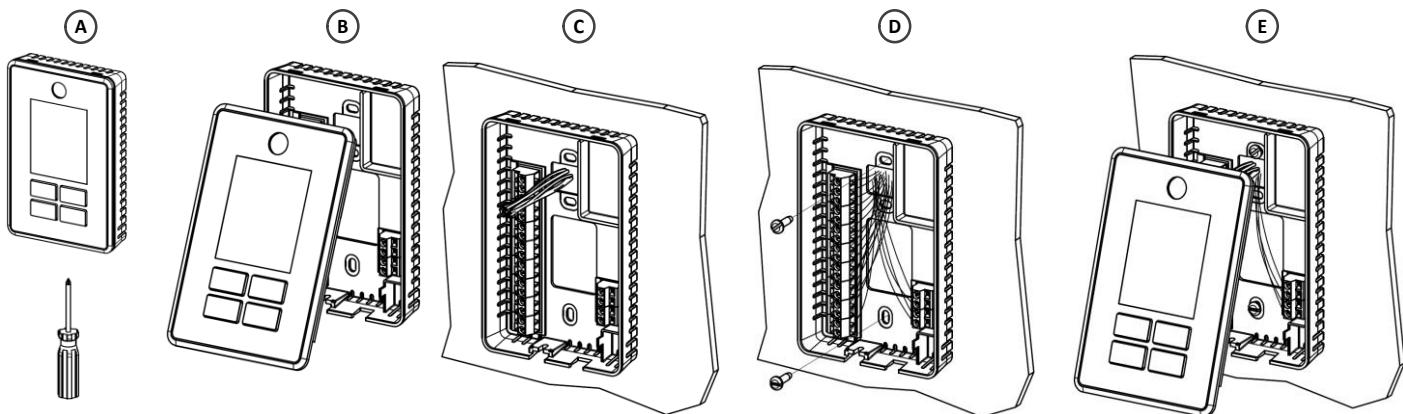

## Programming Mode

**i** The Mode Selector jumper JP1 must be set to the PGM position (Programming Mode). Refer to the Wiring section on page 3. To exit, set the jumper back to the RUN position (Operation Mode). Changes are saved as soon as they are made.

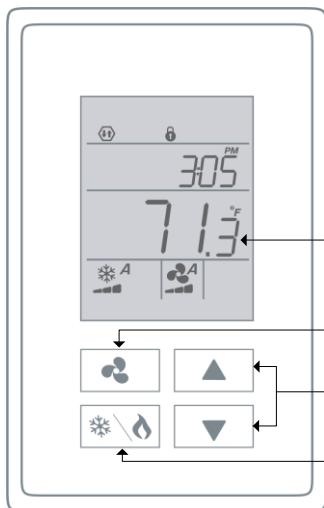

## Symbols used in this Manual

Icon	Description	Icon	Description	Icon	Description	Icon	Description
	Temperature		Heating		Cooling		Humidity
	Fan		Analog Output 2		Analog Output 3		Time
	Binary Output 3		Binary Output 4		Binary Output 5		Binary Output 6
	Binary Output 7		Universal Input 1		Universal Input 2		Night Set Back
	Occupancy		Valve		Lock		Carbon Dioxide



## Setpoint and User Control

### 1. "INTERN TEMP SENSOR OFFSET"



Range:	0°C to 50°C	[32°F to 122°F]
Offset:	Max. ± 5°C	[± 9°F]
Increment:	0.1°C	[0.2°F]

Compare the displayed temperature reading with a known value from a thermometer or other temperature sensing device. To offset or calibrate the sensor, use the arrow buttons to set the desired temperature reading. This is useful for controllers installed in areas where the temperature read is slightly different than the room's actual temperature. For example, a controller placed right under the air diffuser.

### 2. "MINIMUM USER SETPNT"



Default:	15°C	[59°F]
Range:	10°C to 40°C	[50°F to 104°F]
Increment:	0.5°C	[1.0°F]

In Operation mode, you cannot decrease the setpoint to less than the value set as the minimum user point. The minimum value is restricted by the maximum value set at Step 3, "Maximum User Setpnt". In other words, the value that is set as the minimum cannot be greater than the maximum value.

### 3. "MAXIMUM USER SETPNT"



Default:	30°C	[86°F]
Range:	10°C to 40°C	[50°F to 104°F]
Increment:	0.5°C	[1.0°F]

In Operation mode, you cannot increase the setpoint to more than the value set as the maximum user point. The maximum value is restricted by the minimum value set at Step 2, "Minimum User Setpnt". In other words, the value that is set as the maximum cannot be less than the minimum value.

### 4. "USER SETPNT LOCKED"



Default:	No (Unlocked)
Range:	No (Unlocked), yES (Locked)

If set to **No**, the user setpoint option is not locked and the user can adjust the desired temperature setpoint. If set to **yES**, the user setpoint option is locked and the user cannot set the desired temperature setpoint. A lock symbol appears to indicate that the setpoint is locked.

### 5. "USER SETPNT"



Default:	22°C	[72°F]
Range:	10°C to 40°C	[50°F to 104°F]
Increment:	0.5°C	[1.0°F]

Set the desired temperature setpoint within the defined range. If the setpoint option was locked at Step 4, "User Setpnt locked", a lock symbol is displayed. The setpoint value is restricted by the minimum at Step 2, "Minimum User Setpnt" and maximum at Step 3, "Maximum User Setpnt" values. In other words, the setpoint should be within the minimum and maximum setpoint range.

### 6. "TEMP CONTROL MODE"



Default:	Auto (Automatic)
Range:	Auto (Automatic), HEAt (Heating Only), COOL (Cooling Only), On (Cooling or Heating), CLHt (Automatic only)

Select the control mode that you want to authorize to the user. To authorize all the available modes, select Auto (Automatic Mode). The cooling and heating symbols are also displayed. The selection made at this step determines the options available via the Control Mode (see page 31).

### 7. "ENABLE ON OFF CONTROL MODE"



Default:	yES (Enable)
Range:	yES (Enable), No (Disable)

If set to **yES**, the user can set the unit to "Off" via the Control Mode (see page 31). If set to **No**, the "Off" selection does not appear in the Control Mode.

**8. "DISPLAY INFO"**

Default:	t - Hu %RH °C (temperature, humidity, and cooling heating demand)
Range:	t - Hu %RH °C (temperature, humidity), StP %RH °C (temperature, humidity setpoint), OFF (no display), t - Hu %RH °C (temperature, humidity, and cooling heating demand), StP %RH °C (temperature, humidity setpoint, and cooling heating demand)

---

Select the desired information to appear on the display.

**Keypad Lock Settings****9. "KEYPAD UPPER LEFT LOCKED"**

Default:	No (Disable)
Range:	yES (Enable), No (Disable)

---

If set to **yES**, the button is locked and cannot be used by the user. If set to **No**, the button is unlocked and can be used by the user.

**10. "KEYPAD LOWER LEFT LOCKED"**

Default:	No (Disable)
Range:	yES (Enable), No (Disable)

---

If set to **yES**, the button is locked and cannot be used by the user. If set to **No**, the button is unlocked and can be used by the user.

**11. "KEYPAD ARROWS LOCKED"**

Default:	No (Disable)
Range:	yES (Enable), No (Disable)

---

If set to **yES**, the and buttons are locked and cannot be used by the user. If set to **No**, the and buttons are unlocked and can be used by the user.

**Heat Pump Settings****12. "HEAT PUMP OPTION"**

Default:	OFF (Disable)
Range:	ON (Enable), OFF (Disable)

---

This option is not applicable for TSU models.

**Valve Settings****13. "VALVE SIZE"**

Default:	1"
Range:	1/2", 3/4", 1"

---

Select the desired valve size in inches from the available options.

**Analog Output 2 (AO2)****14. "AO2 RAMP"**

Default:	Hr1 (Heating Ramp 1)
Range:	Cr1, Cr2, Hr1, Hr2 (heat with fan), Hr2 (heat without fan), CH1, HU, CO2, 6w, dto, VFdt, VFdp, FAN, OFF, COr

---

Select the desired signal from the available options.

- *Cr1 (Cooling Ramp 1) or Cr2 (Cooling Ramp 2). The Cr1 and Cr2 ramps are used for cooling. If selected, the controller performs cooling based on the cooling proportional, integral, and dead band values.*
- *Hr1, Hr2 (heat with fan), or Hr2 (heat without fan). The Hr1 and Hr2 ramps are used for heating. If selected, the controller performs heating based on the heating proportional, integral, and dead band values.*
- *CH1 (Cooling and Heating). If selected, the controller performs cooling regularly. If another output is set to heat, it performs heating regularly.*
- *HU (Humidify). If selected, the controller modulates the output based on the humidify demand.*
- *CO2 (Carbon dioxide). If selected, the controller will activate or deactivate the output based on carbon dioxide levels.*
- *6W (6-way Valve). If selected, the controller will modulate the 6-way valve depending on the heating or cooling demand.*




- **dto** (Delta temperature control). If selected, the controller will modulate the  $\Delta T$  control based on the inlet and outlet temperature of the water inside the fan coil unit.
- **VFdt** (VFD Temp Loop). If selected, the controller will modulate the VFD fan based on the selected temperature input.
- **VFdP** (VFD Pressure Loop). If selected, the controller will modulate the static pressure based on the reading and the pressure setpoint.
- **FAN**. If selected, the controller modulates the output based on the Fan demand.
- **OFF**. If selected, the controller does not use the output.
- **COr** (Changeover). If selected, the controller will modulate heating and cooling, as appropriate.

If you select **OFF**, Steps 15 to 17 will not be available.

If you select **VFdt** or **VFdP**, Steps 25 to 30 will not be available.

If you select **CH1**, Step 24, "Minimum Cool 1 Heat 1 Percent" will be available.

If you select **FAN**, Step 25, "Fan Spd Signal" will not be available.

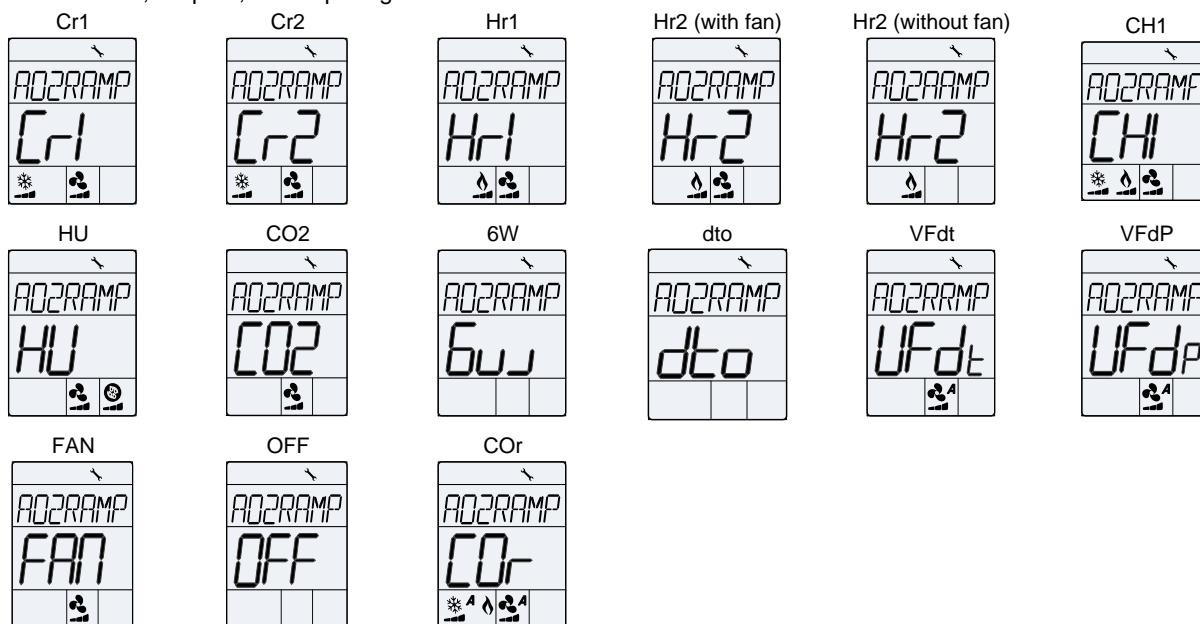

### 15. "AO2 MINIMUM VOLTAGE"



Default:	0.0 Volt
Range:	0.0 to 10.0 Volts
Increment:	0.1 Volt

This option does not appear if the signal ramp for AO2 is set to **OFF** (Step 14, "AO2 Ramp"). Select the desired minimum voltage ("zero" value) for the AO2 ramp. The minimum value is restricted by the maximum value at Step 16, "AO2 Maximum Voltage". In other words, the minimum value should be less than the maximum value.

### 16. "AO2 MAXIMUM VOLTAGE"



Default:	10.0 Volts
Range:	0.0 to 10.0 Volts
Increment:	0.1 Volt

This option does not appear if the signal ramp for AO2 is set to **OFF** (Step 14, "AO2 Ramp"). Select the desired maximum voltage ("span" value) for the AO2 ramp. The maximum value is restricted by the minimum value at Step 15, "AO2 Minimum Voltage". In other words, the maximum value should not be less than the minimum value.

### 17. "AO2 DIRREV"



Default:	dir (Direct)
Range:	dir (Direct), rEV (Reverse)

This option does not appear if the signal ramp for AO2 is set to **OFF** (Step 14, "AO2 Ramp"). Set the direction of the analog signal to either Direct (e.g. 0 to 10Vdc), or Reverse (e.g. 10 to 0Vdc).



## 18. "AO2 SIGNAL TYPE"



Default: ANLg (Analog Output)  
Range: ANLg (Analog Output), OnOF (On/Off), PuLs (Pulsing)

This option does not appear if the signal ramp for AO2 is set to OFF (Step 14, "AO2 Ramp"). Set the signal type for AO2 to either Analog Output, On/Off or Pulsing.

## Analog Output 3 (AO3)

## 19. "AO3 RAMP"



Default: Hr1 (Heating Ramp 1)  
Range: Cr1, Cr2, Hr1, Hr2 (heat with fan), Hr2 (heat without fan), CH1, HU, CO2, 6W, dto, OFF, COr


Select the desired signal from the available options. The AO2 input signal has priority over AO3.

- Cr1 (Cooling Ramp 1) or Cr2 (Cooling Ramp 2). The Cr1 and Cr2 ramps are used for cooling. If selected, the controller performs cooling based on the cooling proportional, integral, and dead band values.
- Hr1, Hr2 (heat with fan), or Hr2 (heat without fan). The Hr1 and Hr2 ramps are used for heating. If selected, the controller performs heating based on the heating proportional, integral, and dead band values.
- CH1 (Cooling and Heating). If selected, the controller performs cooling regularly. If another output is set to heat, it performs heating regularly.
- HU (Humidify). If selected, the controller modulates the output based on the humidify demand.
- CO2 (Carbon dioxide). If selected, the controller will activate or deactivate the output based on carbon dioxide levels.
- 6W (6-way Valve). If selected, the controller will modulate the 6-way valve depending on the heating or cooling demand.
- dto (Delta temperature control). If selected, the controller will modulate the ΔT control based on the inlet and outlet temperature of the water inside the fan coil unit.
- OFF. If selected, the controller does not use the output.
- COr (Changeover). If selected, the controller will modulate heating and cooling, as appropriate.

If you select OFF, Steps 20 to 23 will not be available.

If you select CH1, Step 24, "Minimum Cool 1 Heat 1 Percent" will be available.

If you select FAN, Step 25, "Fan Spd Signal" will not be available.

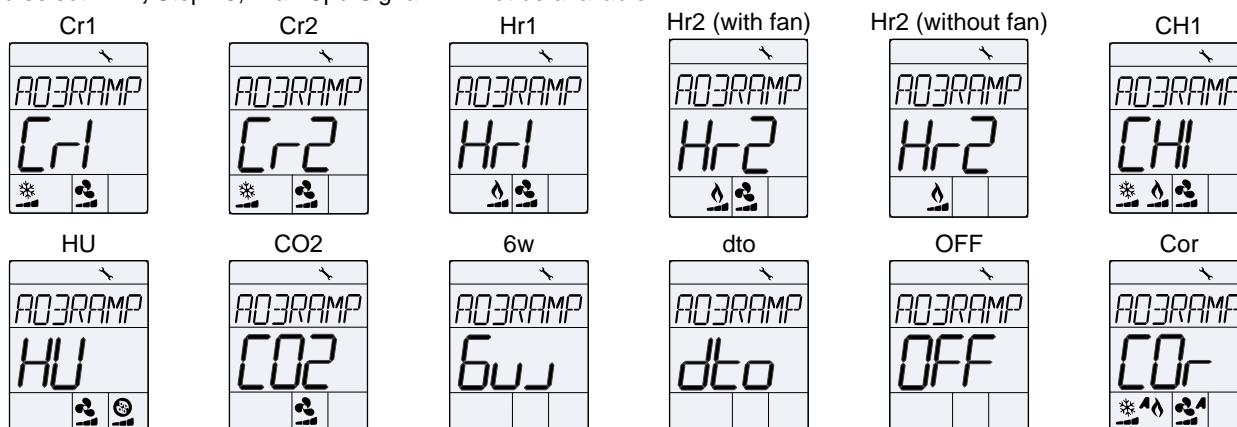

## 20. "AO3 MINIMUM VOLTAGE"



Default: 0.0 Volt  
Range: 0.0 to 10.0 Volts  
Increment: 0.1 Volt

This option does not appear if the signal ramp for AO3 is set to OFF (Step 19, "AO3 Ramp"). Select the desired minimum voltage ("zero" value) for the AO3 ramp. The minimum value is restricted by the maximum value at Step 21, "AO3 Maximum Voltage". In other words, the minimum value should be less than the maximum value.

## 21. "AO3 MAXIMUM VOLTAGE"



Default: 10.0 Volts  
Range: 0.0 to 10.0 Volts  
Increment: 0.1 Volt

This option does not appear if the signal ramp for AO3 is set to OFF (Step 19, "AO3 Ramp"). Select the desired maximum voltage ("span" value) for the AO3 ramp. The maximum value is restricted by the minimum value at Step 20, "AO3 Minimum Voltage". In other words, the maximum value should not be less than the minimum value.



## 22. "AO3 DIRREV"



Default: dir (Direct)  
Range: dir (Direct), rEV (Reverse)

This option does not appear if the signal ramp for AO3 is set to **OFF** (Step 19, "AO3 Ramp"). Set the direction of the analog signal to either Direct (e.g. 0 to 10Vdc), or Reverse (e.g. 10 to 0Vdc).

## 23. "AO3 SIGNAL TYPE"



Default: ANLg (Analog Output)  
Range: ANLg (Analog Output), OnOF (On/Off), PuLs (Pulsing)

This option does not appear if the signal ramp for AO3 is set to **OFF** (Step 19, "AO3 Ramp"). Set the signal type for AO3 to either Analog Ouptut, On/Off or Pulsing.

## 24. "MINIMUM COOL 1 HEAT 1 PERCENT"



Default: 0 %  
Range: 0 to 100%  
Increment: 5 %

This option appears if you have selected **CH1** at Step 14, "AO2 Ramp" or at Step 19, "AO3 Ramp". Set the percentage at which the controller sets the CH1 output during heating, provided another output has also been set to heating.

## Fan Settings

## 25. "FAN SPD SIGNAL"



Default: 3  
Range: 1, 2, 3

This option does not appear if you have selected **FAN** at Step 14, "AO2 Ramp". Select the desired number of fan speed contacts. The fan symbol is also displayed.

## 26. "FAN SPEED OPTION"



Default: Std (Standard)  
Range: AdV (Advanced), Std (Standard)

Select between the Standard (Neptronic) and Advanced (OE1) fan speed specifications. The fan symbol is also displayed.

## 27. "ENABLE FAN CONTRL MODE"



Default: No (Disable)  
Range: yES (Enable), No (Disable)

This option appears only if you have selected **Adv** at Step 26, "Fan Speed Option". Select to enable or disable the fan control mode option. If you select **No**, the Fan Speed Selection Mode option is not available in Control Mode. The fan symbol is also displayed.

## 28. "HIDE FAN DISPLAY INFO"



Default: No (Disable)  
Range: yES (Enable), No (Disable)

Select to enable or disable the fan display information. If you select **Yes**, the Fan demand (fan icon) does not appear on the display and the Fan Speed Selection Mode is disabled. The fan symbol is also displayed.

## 29. "FAN AUTO MODE"



Default: yES (Enable)  
Range: yES (Enable), No (Disable)

If set to **yES**, the user can set the fan speed to "Automatic" via the Fan Speed Selection Mode (see page 32). If set to **No**, the "Automatic" speed does not appear in the Fan Speed Selection Mode. The fan symbol is also displayed.

If you select **yES**, Step 30 "Fan Auto Timeout Seconds" will be available.

If you select **No**, Step 30 "Fan Auto Timeout Seconds" will not be available.

**30. "FAN AUTO TIMEOUT SECONDS"**

Default: 120 seconds  
 Range: 0 to 255 seconds  
 Increment: 1 second

This option appears only if you have selected **yES** at Step 29, "Fan Auto Mode". Select the desired value for the automatic shutoff delay when there is no demand. The fan symbol is also displayed.

**31. "DAMPING FACTOR TIME IN SECONDS"**

Default: 0 second  
 Range: 0 to 255 seconds  
 Increment: 1 second

Select the desired damping factor value for the fan. The fan symbol is also displayed.


**Binary Output 3 (BO3)****32. "BO3 RAMP"**

Default: Hr1 (Heating Ramp 1)  
 Range: Cr1, Cr2, Hr1, Hr2 (heat with fan), Hr2 (heat without fan), CH1, HU, CO2, OFF, COr

Select the desired ramp from the available options.

- Cr1 (Cooling Ramp 1) or Cr2 (Cooling Ramp 2). The Cr1 and Cr2 ramps are used for cooling. If selected, the controller performs cooling based on the cooling proportional, integral, and dead band values.
- Hr1, Hr2 (heat with fan), or Hr2 (heat without fan). The Hr1 and Hr2 ramps are used for heating. If selected, the controller performs heating based on the heating proportional, integral, and dead band values.
- CH1 (Cooling and Heating). If selected, the controller performs cooling regularly. If another output is set to heat, it performs heating regularly.
- HU (Humidify). If selected, the controller modulates the output based on the humidify demand.
- CO2 (Carbon dioxide). If selected, the controller will activate or deactivate the output based on carbon dioxide levels.
- OFF. If selected, the controller does not use the output.
- COr (Changeover). If selected, the controller will modulate heating and cooling, as appropriate.

If you select **OFF**, Steps 33 to 36 will not be available.

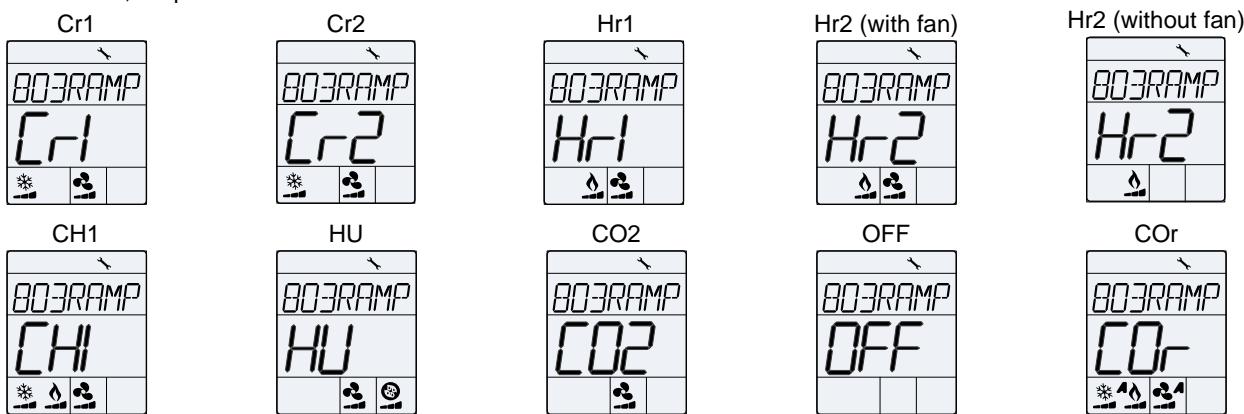**33. BO3 CLOSE PERCENT"**

Default: 50% of the demand  
 Range: 15 to 80%  
 Increment: 1%

This option does not appear if the signal ramp for BO3 is set to **OFF** (Step 32, "BO3 Ramp"). Select the percentage at which you want BO3 to close (at % of demand of the ramp selected at Step 32, "BO3 Ramp").

**34. "BO3 OPEN PERCENT"**

Default: 25% of the demand  
 Range: 0 to (BO3 Close)-4%  
 Increment: 1%

This option does not appear if the signal ramp for BO3 is set to **OFF** (Step 32, "BO3 Ramp"). Select the percentage at which you want BO3 to open (at % of demand of the ramp selected at Step 32, "BO3 Ramp").

**35. "BO3 DIRREV"**

Default: dir (Direct)  
Range: dir (Direct), rEV (Reverse)

---

This option does not appear if the signal ramp for BO3 is set to **OFF** (Step 32, "BO3 Ramp"). Set the direction of the binary signal to either Direct or Reverse.

**36. "BO3 CONTACT DELAY MINUTES"**

Default: 0 minute  
Range: 0 to 15 minutes  
Increment: 1 minute

---

This option does not appear if the signal ramp for BO3 is set to **OFF** (Step 32, "BO3 Ramp"). Select the closing delay for BO3 output.

**37. "BO3 SIGNAL TYPE"**

Default: OnOF (On/Off)  
Range: tPm (Pulsing), OnOF (On/Off), FLot (Floating)

---

This option does not appear if the signal ramp for BO3 is set to **OFF** (Step 32, "BO3 Ramp"). Select the signal type for BO3 to either Pulsing, On/Off or Floating.

## Binary Output 4 (BO4)

The Binary Output 4 settings appear only if you have selected either fan speed 1 or 2 at Step 25, "Fan Spd Signal" or VFdP, VFdt or FAN at Step 14, "AO2 Ramp".

**38. "BO4 RAMP"**

Default: OFF  
Range: Cr1, Cr2, Hr1, Hr2 (heat with fan), Hr2 (heat without fan), CH1, HU, CO2, OFF, COr

---

Select the desired ramp from the available options. Same as BO3 options.

If you select **OFF**, Steps 39 to 42 will not be available.

**39. "BO4 CLOSE PERCENT"**

Default: 20% of the demand  
Range: 15 to 80%  
Increment: 1%

---

This option does not appear if the signal ramp for BO4 is set to **OFF** (Step 38, "BO4 Ramp"). Select the percentage at which you want BO4 to close (at % of demand of the ramp selected at Step 38, "BO4 Ramp").

**40. "BO4 OPEN PERCENT"**

Default: 0% of the demand  
Range: 0 to (BO4 Close)-4%  
Increment: 1%

---

This option does not appear if the signal ramp for BO4 is set to **OFF** (Step 38, "BO4 Ramp"). Select the percentage at which you want BO4 to open (at % of demand of the ramp selected at Step 38, "BO4 Ramp").

**41. "BO4 DIRREV"**

Default: dir (Direct)  
Range: dir (Direct), rEV (Reverse)

---

This option does not appear if the signal ramp for BO4 is set to **OFF** (Step 38, "BO4 Ramp"). Set the direction of the binary signal to either Direct or Reverse.

**42. "BO4 CONTACT DELAY MINUTES"**

Default: 0 minute  
Range: 0 to 15 minutes  
Increment: 1 minute

---

Select the closing delay for BO4 output.

**43. "BO4 SIGNAL TYPE"**

Default: OnOF (On/Off)  
Range: tPm (Pulsing), OnOF (On/Off), FLot (Floating)

---

This option does not appear if the signal ramp for BO4 is set to **OFF** (Step 38, "BO4 Ramp"). Select the signal type BO4 to either Pulsing or On/Off. If BO3 signal type is set to Floating, then BO4 signal type will also be set to Floating.

**Binary Output 5 (BO5)**

The Binary Output 5 settings appear only if you have selected either fan speed 1 at Step 25, "Fan Spd Signal" or VFdP, VFdt or FAN at Step 14, "AO2 Ramp".

**44. "BO5 RAMP"**

Default: OFF  
Range: Cr1, Cr2, Hr1, Hr2 (heat with fan), Hr2 (heat without fan), CH1, HU, CO2, OFF, COr

---

Select the desired ramp from the available options. Same as BO3 options.

If you select **OFF**, Steps 45 to 48 will not be available.

**45. "BO5 CLOSE PERCENT"**

Default: 20% of the demand  
Range: 15 to 80%  
Increment: 1%

---

This option does not appear if the signal ramp for BO5 is set to **OFF** (Step 44, "BO5 Ramp"). Select the percentage at which you want BO5 to close (at % of demand of the ramp selected at Step 44, "BO5 Ramp").

**46. "BO5 OPEN PERCENT"**

Default: 0% of the demand  
Range: 0 to (BO5 Close)-4%  
Increment: 1%

---

This option does not appear if the signal ramp for BO5 is set to **OFF** (Step 44, "BO5 Ramp"). Select the percentage at which you want BO5 to open (at % of demand of the ramp selected at Step 44, "BO5 Ramp").

**47. "BO5 DIRREV"**

Default: dir (Direct)  
Range: dir (Direct), rEV (Reverse)

---

This option does not appear if the signal ramp for BO5 is set to **OFF** (Step 44, "BO5 Ramp"). Set the direction of the binary signal to either Direct or Reverse.

**48. "BO5 CONTACT DELAY MINUTES"**

Default: 0 minute  
Range: 0 to 15 minutes  
Increment: 1 minute

---

This option does not appear if the signal ramp for BO5 is set to **OFF** (Step 44, "BO5 Ramp"). Select the closing delay for BO5 output.

**49. "BO5 SIGNAL TYPE"**

Default: OnOF (On/Off)  
Range: tPm (Pulsing), OnOF (On/Off), FLot (Floating)

---

This option does not appear if the signal ramp for BO5 is set to **OFF** (Step 44, "BO5 Ramp"). Select the signal type for BO5 to either Pulsing, On/Off or Floating.



## Binary Output 6 (BO6)

The Binary Output 6 settings appear only if you have selected either FAN, VFdt or VFdp at Step 14, "AO2 Ramp".

### 50. "BO6 RAMP"



Default:	OFF
Range:	Cr1, Cr2, Hr1, Hr2 (heat with fan), Hr2 (heat without fan), CH1, HU, CO2, 6w, dto, VFdt, VFdp, OFF, COr

Select the desired ramp from the available options. Same as BO3 options. The VFdt and VFdp options are available only if you have selected them at Step 14, "AO2 Ramp".

If you select **OFF**, Steps 51 to 54 will not be available.

- **6W (6-way Valve)**. If selected, the controller will modulate the 6-way valve depending on the heating or cooling demand.
- **dto (Delta temperature control)**. If selected, the controller will modulate the  $\Delta T$  control based on the inlet and outlet temperature of the water inside the fan coil unit.
- **VFdt (VFD Temp Loop)**. If selected, the controller will modulate the VFD fan based on the selected temperature input.
- **VFdp (VFD Pressure Loop)**. If selected, the controller will modulate the static pressure based on the reading and the pressure setpoint.

### 51. "BO6 CLOSE PERCENT"



Default:	20% of the demand
Range:	15 to 80%
Increment:	1%

This option does not appear if the signal ramp for BO6 is set to **OFF** (Step 50, "BO6 Ramp"). Select the percentage at which you want BO6 to close (at % of demand of the ramp selected at Step 50, "BO6 Ramp").

### 52. "BO6 OPEN PERCENT"



Default:	0% of the demand
Range:	0 to (BO6 Close)-4%
Increment:	1%

This option does not appear if the signal ramp for BO6 is set to **OFF** (Step 50, "BO6 Ramp"). Select the percentage at which you want BO6 to open (at % of demand of the ramp selected at Step 50, "BO6 Ramp").

### 53. "BO6 DIRREV"



Default:	dir (Direct)
Range:	dir (Direct), rEV (Reverse)

This option does not appear if the signal ramp for BO6 is set to **OFF** (Step 50, "BO6 Ramp"). Set the direction of the binary signal to either Direct or Reverse.

### 54. "BO6 CONTACT DELAY MINUTES"



Default:	0 minute
Range:	0 to 15 minutes
Increment:	1 minute

This option does not appear if the signal ramp for BO6 is set to **OFF** (Step 50, "BO6 Ramp"). Select the closing delay for BO6 output.

### 55. "BO6 SIGNAL TYPE"



Default:	OnOF (On/Off)
Range:	tPm (Pulsing), OnOF (On/Off), FLot (Floating)

This option does not appear if the signal ramp for BO6 is set to **OFF** (Step 50, "BO6 Ramp"). Select the signal type for BO6 to either Pulsing or On/Off. If the BO5 signal type is set to Floating, then BO6 signal type will also be set to Floating.

## Binary Output 7 (BO7)

### 56. "BO7 RAMP"



Default:	OFF
Range:	Cr1, Cr2, Hr1, Hr2 (heat with fan), Hr2 (heat without fan), CH1, HU, CO2, OFF, COr

Select the desired ramp from the available options. Same as BO3 options.

If you select **OFF**, Steps 57 to 61 will not be available.

**57. "BO7 CLOSE PERCENT"**

Default:	20% of the demand
Range:	15 to 80%
Increment:	1%

This option does not appear if the signal ramp for BO7 is set to **OFF** (Step 56, "BO7 Ramp"). Select the percentage at which you want BO7 to close (at % of demand of the ramp selected at Step 56, "BO7 Ramp").

**58. "BO7 OPEN PERCENT"**

Default:	0% of the demand
Range:	0 to (BO6 Close)-4%
Increment:	1%

This option does not appear if the signal ramp for BO6 is set to **OFF** (Step 56, "BO7 Ramp"). Select the percentage at which you want BO7 to open (at % of demand of the ramp selected at Step 56, "BO7 Ramp").

**59. "BO7 DIRREV"**

Default:	dir (Direct)
Range:	dir (Direct), rEV (Reverse)

This option does not appear if the signal ramp for BO7 is set to **OFF** (Step 56, "BO7 Ramp"). Set the direction of the binary signal to either Direct or Reverse.

**60. "BO7 CONTACT DELAY MINUTES"**

Default:	0 minute
Range:	0 to 15 minutes
Increment:	1 minute

This option does not appear if the signal ramp for BO7 is set to **OFF** (Step 56, "BO7 Ramp"). Select the closing delay for BO7 output.

**61. "BO7 SIGNAL TYPE"**

Default:	OnOF (On/Off)
Range:	tPm (Pulsing), OnOF (On/Off), FLot (Floating)

This option does not appear if the signal ramp for BO7 is set to **OFF** (Step 56, "BO7 Ramp"). Select the signal type for BO7 to either Pulsing, On/Off or Floating.

## Proportional and Deadband Settings

**62. "CH OVER PROP BAND"**

Default:	2.0°C [4°F]
Range:	0.5°C to 5.0°C [1°F to 9°F]
Increment:	0.5°C [1°F]

Select the desired proportional band value of the changeover ramp. The cooling \* and heating ♦ symbols are also displayed.

**63. "CH OVER DEAD BAND"**

Default:	0.3°C [0.6°F]
Range:	0.0°C to 5.0°C [0°F to 9°F]
Increment:	0.1°C [0.2°F]

Select the desired dead band value of the changeover ramp. The cooling \* and heating ♦ symbols are also displayed.

**64. "HEAT 1 PROP BAND"**

Default:	2.0°C [4°F]
Range:	0.5°C to 5.0°C [1°F to 9°F]
Increment:	0.5°C [1°F]

Select the desired proportional band value of the heating ramp 1. The heating ♦ symbol is also displayed.

**65. "HEAT 1 DEAD BAND"**

Default:	0.3°C [0.6°F]
Range:	0.0°C to 5.0°C [0°F to 9°F]
Increment:	0.1°C [0.2°F]

Select the desired dead band value of the heating ramp 1. The heating ♦ symbol is also displayed.

**66. "HEAT 2 PROP BAND"**

Default:	2.0°C	[4°F]
Range:	0.5°C to 5.0°C	[1°F to 9°F]
Increment:	0.5°C	[1°F]

Select the desired proportional band value of the heating ramp 2. The heating ♫ symbol is also displayed.

**67. "HEAT 2 DEAD BAND"**

Default:	0.3°C	[0.6°F]
Range:	0.0°C to 5.0°C	[0°F to 9°F]
Increment:	0.1°C	[0.2°F]

Select the desired dead band value of the heating ramp 2. The heating ♫ symbol is also displayed.

**68. "COOL 1 PROP BAND"**

Default:	2.0°C	[4°F]
Range:	0.5°C to 5.0°C	[1°F to 9°F]
Increment:	0.5°C	[1°F]

Select the desired proportional band value of the cooling ramp 1. The cooling ♦ symbol is also displayed.

**69. "COOL 1 DEAD BAND"**

Default:	0.3°C	[0.6°F]
Range:	0°C to 5.0°C	[0°F to 9°F]
Increment:	0.1°C	[0.2°F]

Select the desired dead band value of the cooling ramp 1. The cooling ♦ symbol is also displayed.

**70. "COOL 2 PROP BAND"**

Default:	2.0°C	[4°F]
Range:	0.5°C to 5.0°C	[1°F to 9°F]
Increment:	0.5°C	[1°F]

Select the desired proportional band value of the cooling ramp 2. The cooling ♦ symbol is also displayed.

**71. "COOL 2 DEAD BAND"**

Default:	0.3°C	[0.6°F]
Range:	0.0°C to 5.0°C	[0°F to 9°F]
Increment:	0.1°C	[0.2°F]

Select the desired dead band value of the cooling ramp 2. The cooling ♦ symbol is also displayed.

**72. "COOLING ANTI CYCLE MINUTES"**

Default:	2 minutes
Range:	0 to 15 minutes
Increment:	1 minute

To protect the compressor, set the delay in minutes before activating or reactivating the cooling output. The cooling ♦ symbol is also displayed.

**73. "HEATING INTEGRAL TIME IN SECONDS"**

Default:	0 seconds
Range:	0 to 250 seconds
Increment:	5 seconds

Select the desired value for heating integration factor compensation. The heating ♫ symbol is also displayed.

**74. "COOLING INTEGRAL TIME IN SECONDS"**

Default:	0 seconds
Range:	0 to 250 seconds
Increment:	5 seconds

Select the desired value for cooling integration factor compensation. The cooling ♦ symbol is also displayed.

**75. "CL HT SWITCH TIMER MINUTES"**

Default:	0 minutes
Range:	0 to 120 minutes
Increment:	1 minute

Time required in minutes before a changeover can take place. The cooling ♦ and heating ♫ symbols are also displayed.



## Universal Input 1 (UI1)

### 76. "UI1 SIGNAL TYPE"



Default: OFF  
Range: OFF, t10.0, SENs, noCL, noHt, OAS, t10V, CO2, OCC, nSb, oVrd, win, door, dFt, FLS, oVht, SEL, FrFb, HU, P10V, t012, dt1t, dt1u, dt0t, dt0u

Select the input signal type for UI1(Universal Input 1).

- OFF. If selected, the controller does not use the input.
- t10.0. If selected, the controller uses a 10kΩ type III external temperature sensor. If you select t10.0, Step 86, "Extern Temp Sensor Offset" will be available.
- SENs. If selected, heating mode activates when the temperature read by the external sensor is above the Changeover Setpoint and cooling mode activates when the temperature read by the external sensor is below the Changeover Setpoint. If you select SENs, Step 87, "CH Over Setpt" will be available.
- NoCL. If selected, the heating mode activates when the contact is closed and cooling mode activates when the contact is opened.
- NoHt. If selected, the cooling mode activates when the contact is closed and heating mode activates when the contact is opened.
- OAS. If selected, the controller uses a 10kΩ type III outside air sensor. Note that the temperature read cannot be used as the control temperature.
- t10v. If selected, the controller uses a 0 to 10 Vdc external temperature sensor. If you select t10v, Step 77, "UI1 Minimum Voltage", 84, "Extern Temp Minimum", 85, "Extern Temp Maximum", 86, "Extern Temp Sensor Offset" will be available.
- CO2. If selected, the controller uses a 0 to 10 Vdc CO<sub>2</sub> sensor. If you select CO2, Step 88, "CO2 Maximum Range" will be available.
- OCC. If selected, the controller activates the occupancy status.
- nSb. If selected, the controller activates the night set back status.
- oVrd. If selected, the controller activates an alarm to indicate that there has been an override and the controller is forced into OFF mode.
- win. If selected, the controller activates an alarm to indicate that the window is open. If you select win, Steps 102, "Window Open Mode" and 103, "Window Fan Mode" will be available.
- door. If selected, the controller activates an alarm to indicate that the door is open. If you select door, Steps 104, "Door Open Mode" and 105, "Door Fan Mode" will be available.
- dFt. If selected, the controller activates an alarm to indicate that the filter is dirty.
- FLS. If selected, the controller activates an alarm to indicate that the airflow is absent. The controller shuts off all outputs.
- oVht. If selected, the controller activates an alarm to indicate that the heating equipment has overheated. The controller shuts off the heating outputs.
- SEL. If selected, the controller activates the Local mode. The controller shuts off fan outputs.
- FrFb. If selected, the controller senses the pulse feedback of the ECM motor.
- HU. If selected, the controller activates the humidity mode.
- P10V (Pressure 0-10V). If selected, the controller uses a 0 to 10Vdc pressure static sensor. If you select P10V, Step 77, "UI1 Minimum Voltage" and Step 91, "Pressur Maximum Range" will be available.
- t012 (Extern Temp TT012). If selected, the controller uses a 10kΩ type 24 external temperature sensor. If you select t012, Step 86, "Extern Temp Sensor Offset" will be available.
- dt1t (Delta Temp Inlet 10K). If selected, the controller uses a 10K type 3 temperature sensor. The controller selects this temperature as the inlet temperature in the ΔT control mode.
- dt1u (Delta Temp Inlet 0-10V). If selected, the controller uses a 0 to 10 Vdc temperature sensor. The controller selects this temperature as the inlet temperature in the ΔT control mode.
- dt0t (Delta Temp Outlet 10K). If selected, the controller uses a 10K type 3 temperature sensor. The controller selects this temperature as the outlet temperature in the ΔT control mode.
- dt0u (Delta Temp Outlet 0-10V). If selected, the controller uses a 0 to 10 Vdc temperature sensor. The controller selects this temperature as the outlet temperature in the ΔT control mode.

If you select one of the following options: OFF, t10.0, SENs, noCL, noHt, OAS, t10V, CO2, HU, P10V, or t012, Steps 78 and 79 will not be available.



#### 77. "UI1 MINIMUM VOLTAGE"



Default: 2.0  
 Range: 0.0, 2.0

This option appears only if you have selected either P10V or t10V at Step 76, "UI1 Signal Type". Select the minimum voltage for UI1.

#### 78. "UI1 CONTACT"



Default: NO (Normally Open)  
 Range: NO (Normally Open), NC (Normally Close)

This option appears only if you have selected any one of the options: OCC, nSb, oVrd, win, door, dFt, FLS, oVht, SEL at Step 76, "UI1 Signal Type". Select the desired contact option.

#### 79. "UI1 DELAY SECONDS"



Default: 120 seconds  
 Range: 0 to 3600 seconds  
 Increment: 10 seconds

This option appears if you have selected any one of the options: oVrd, win, door, dFt, FLS, oVht, SEL at Step 76, "UI1 Signal Type". Set the delay in seconds before the state of input for UI1 is changed.



## Universal Input 2 (UI2)

### 80. "UI2 SIGNAL TYPE"



Default:	OFF
Range:	OFF, t10.0, SENs, noCL, noHt, OAS, t10V, CO2, OCC, nSb, oVrd, win, door, dFt, FLS, oVht, SEL, HU, P10V, t012

Select the input signal type for UI2 (Universal Input 2). Same options as Step 76, "UI1 Signal Type".

- *The UI1 input signal has priority over UI2. If you select the same input signal type as UI1, UI2 will not be functional.*

If you select one of the following options: **OFF**, **noCL**, **noHt**, **OAS** or **HU**, Steps 81 to 89 will not be available.

If you select **t10.0**, Steps 81 to 85 will not be available.

If you select **t10V**, Steps 82 and 83 will not be available.

If you select **SENs**, Steps 81 to 86 will not be available.

If you select **CO2**, Steps 81 to 100 will not be available.

If you select **P10V** or **t10V**, Step 81, "UI2 Minimum Voltage" will be available.

If you select **P10V**, Step 91, "Pressur Maximum Range" will be available.

### 81. "UI2 MINIMUM VOLTAGE"



Default:	2.0
Range:	0.0, 2.0

This option appears only if you have selected either **P10V** or **t10V** at Step 80, "UI2 Signal Type". Select the minimum voltage for UI2.

### 82. "UI2 CONTACT"



Default:	NO (Normally Open)
Range:	NO (Normally Open), NC (Normally Close)

This option appears only if you have selected any one of the options: **OCC**, **nSb**, **oVrd**, **win**, **door**, **dFt**, **FLS**, **oVht**, **SEL** at Step 80, "UI2 Signal Type". Select the desired contact option.

### 83. "UI2 DELAY SECONDS"



Default:	120 seconds
Range:	0 to 3600 seconds
Increment:	10 seconds

This option appears if you have selected any one of the options: **oVrd**, **win**, **door**, **dFt**, **FLS**, **oVht**, **SEL** at Step 80, "UI2 Signal Type". Set the delay in seconds before the state of input for UI2 is changed.

## Temperature Settings

### 84. "EXTERN TEMP MINIMUM"



Default:	0°C [32°F]
Range:	-40.0°C to 0°C [-40°F to 32°F]
Increment:	0.5°C [1°F]

This option appears only if you have selected **t10V** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the minimum external temperature value. The minimum value is restricted by the maximum value set at Step 85, "Extern Temp Maximum". In other words, the value that is set as the minimum cannot be greater than the maximum value.

### 85. "EXTERN TEMP MAXIMUM"



Default:	50°C [122°F]
Range:	50°C to 100°C [122°F to 212°F]
Increment:	0.5°C [1°F]

This option appears only if you have selected **t10V** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the maximum external temperature value. The maximum value is restricted by the minimum value set at Step 84, "Extern Temp Minimum". In other words, the value that is set as the maximum cannot be less than the minimum value.

**86. "EXTERN TEMP SENSOR OFFSET"**

Range:	-40.0°C to 100°C	[-40°F to 212°F]
Offset:	Max. ± 5°C	[± 9°F]
Increment:	0.1°C	[0.2°F]

This option appears only if you have selected **t10.0**, **t10V**, or **t012** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". The display shows the temperature read by the external temperature sensor. Adjust the offset by comparing it with a known value (e.g. thermometer). If the sensor is not connected or short circuited, the unit displays the sensor's limit.

**87. "CH OVER SETPNT"**

Default:	24.0°C	[75°F]
Range:	10.0°C to 40.0°C	[50°F to 104°F]
Increment:	0.5°C	[1°F]

This option appears only if you have selected **SENs** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the desired changeover temperature setpoint. Note that the heating mode activates when the temperature read by the external sensor is above the changeover setpoint and cooling mode activates when the temperature read by the external sensor is below the changeover setpoint.

## CO<sub>2</sub> Sensor Settings

**88. "CO2 MAXIMUM RANGE"**

Default:	2000 PPM
Range:	100 to 5000 PPM
Increment:	50 PPM

This option appears only if you have selected **CO2** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the maximum range value for carbon dioxide (CO<sub>2</sub>).

**89. "CO2 SETPNT"**

Default:	800 PPM
Range:	100 to 2000 PPM
Increment:	10 PPM

This step appears only if you have selected **CO2** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Indicates the maximum limit of the CO<sub>2</sub> concentration beyond which an alarm is activated. The setpoint value is restricted by the maximum range at Step 88, "CO<sub>2</sub> Maximum Range".

**90. "DISPLAY CO2"**

Default:	No (Disable)
Range:	No (Disable), YES (Enable)

This step appears only if you have selected **CO2** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select whether to enable or disable the display of the CO<sub>2</sub> value.

## VFD Pressure Settings

The VFD Pressure Settings appear only if you have selected VFdP at Step 14, "AO2 Ramp" and P10V at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type".

**91. "PRESSUR MAXIMUM RANGE"**

Default:	2000 Pa
Range:	200 to 200.0 Pa
Increment:	50 Pa

This option appears if you have selected **P10V** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the maximum range for pressure. If the value is higher than 10,000, the value will be divided by 100 and shows a decimal point. For example, 10,000 will be displayed as **100.0** and 10050 will be displayed as **100.5**.

**92. "VFD PRESSUR SETPNT"**

Default:	500 Pa
Range:	100 to pressure maximum range (value set at Step 91)
Increment:	1 Pa

Select the setpoint value for VFD pressure. If the value is higher than 10,000, the value will be divided by 100 and shows a decimal point. The increment is displayed as 0.1. The fan symbol is also displayed.

**93. "VFD PRESSUR DEAD BAND"**

Default: 50 Pa  
Range: 0 to 100 Pa  
Increment: 1 Pa

---

Select the desired dead band value for VFD pressure. The fan  symbol is also displayed.

**94. "VFD PRESSUR PROP BAND"**

Default: 200 Pa  
Range: 100 to 500 Pa  
Increment: 1 Pa

---

Select the desired proportional band value for VFD pressure. The fan  symbol is also displayed.

**95. "VFD PRESSUR INTGRAL SECONDS"**

Default: 0 seconds  
Range: 0 to 250 seconds  
Increment: 5 seconds

---

Select the desired value for VFD pressure integral seconds. The fan  symbol is also displayed.

## VFD Temperature Settings

The VFD Temperature Settings appear only if you have selected VFdt at Step 14, "AO2 Ramp".

**96. "VFD TEMP SETPNT"**

Default: 22.0°C [72°F]  
Range: 10.0°C to 40.0°C [50°F to 104°F]  
Increment: 0.5°C [1°F]

---

Select the desired VFD temperature setpoint. The fan  symbol is also displayed.

**97. "VFD TEMP DEAD BAND"**

Default: 0.3°C [0.6°F]  
Range: 0.0°C to 5.0°C [0°F to 9°F]  
Increment: 0.1°C [0.2°F]

---

Select the desired VFD temperature dead band value. The fan  symbol is also displayed.

**98. "VFD TEMP PROP BAND"**

Default: 2.0°C [3.6°F]  
Range: 0.5°C to 5.0°C [1°F to 9°F]  
Increment: 0.1°C [0.2°F]

---

Select the desired VFD temperature proportional band value. The fan  symbol is also displayed.

**99. "VFD TEMP INTGRAL SECONDS"**

Default: 0 seconds  
Range: 0 to 250 seconds  
Increment: 5 seconds

---

Select the desired value for VFD temperature integral seconds. The fan  symbol is also displayed.

**100. "VFD TEMP CONTROL SOURCE"**

Default: itS (internal)  
Range: itS (internal), EtS (External)

---

Select the source for VFD temperature control.

- *itS. If selected, the controller will be controlled by its internal temperature sensor.*
- *EtS. If selected, the controller will be controlled by an external temperature sensor.*



## Temperature Control Source Settings

### 101. "TEMP CONTROL SOURCE"



Default: itS (internal)  
Range: itS (internal), EtS (External)

Select the source for temperature control.

- *itS. If selected, the controller will be controlled by its internal temperature sensor.*
- *EtS. If selected, the controller will be controlled by an external temperature sensor.*

## Window and Door Settings

### 102. "WINDOW OPEN MODE"



Default: StP (Setpoint/override enabled)  
Range: StP (Setpoint/override enabled), OFF

This option appears only if you have selected **win** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". The alarm  $\Delta$  symbol is also displayed.

- *StP. If selected, the controller uses the NSB/No Occupancy setpoints when the window is open.*
- *OFF. If selected, the controller is forced into OFF mode when the window is open.*

### 103. "WINDOW FAN MODE"



Default: AUto (Automatic)  
Range: AUto (Automatic), LO (Low), mEd (Medium), HI (High)

This option appears only if you have selected **win** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the fan speed mode when the window is open. The fan  $\bullet$  and alarm  $\Delta$  symbols are also displayed.

### 104. "DOOR OPEN MODE"



Default: StP (Setpoint/override enabled)  
Range: StP (Setpoint/override enabled), OFF

This option appears only if you have selected **door** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type".

- *StP. If selected, the controller uses the NSB/No Occupancy setpoints when the door is open.*
- *OFF. If selected, the controller is forced into OFF mode when the door is open.*

### 105. "DOOR FAN MODE"



Default: AUto (Automatic)  
Range: AUto (Automatic), LO (Low), mEd (Medium), HI (High)

This option appears only if you have selected **door** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the fan speed when the door is open. The fan  $\bullet$  and alarm  $\Delta$  symbols are also displayed.

## Night Set Back (NSB)

### 106. "NSB OVERRIDE DELAY MINUTES"



Default: 120 minutes  
Range: 0 to 180 minutes  
Increment: 15 minutes

This option appears only if you have selected **nSb** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". When in Night Set Back (NSB) Mode, the user can override Night Set Back (NSB) (see page 32) for the duration of this delay. To disable night set back override, set the delay to 0. The moon  $\downarrow$  symbol is displayed to indicate Night Set Back (NSB) Mode.

### 107. "NSB FAN MODE"



Default: AUto (Automatic)  
Range: AUto (Automatic), LO (Low), mEd (Medium), HI (High)

This option appears only if you have selected **nSb** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the fan speed mode for night set back. The fan  $\bullet$  symbol is also displayed.



## 108. "NSB MODE"



Default: StP (Setpoint/override enabled)  
Range: StP (Setpoint/override enabled), OFF

This option appears only if you have selected **nSb** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type".

- *StP. If selected, the controller uses the NSB setpoints when in Night Set Back (NSB) Mode. (see page 32).*
- *OFF. If selected, the controller is forced into OFF mode when in Night Set Back (NSB) Mode. (see page 32).*

## 109. "NSB HEATING SETPNT"



Default: 16°C [61°F]  
Range: 10°C to 40°C [50°F to 104°F]  
Increment: 0.5°C [1°F]

This option appears only if you have selected **nSb** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the heating setpoint that will be used when the system is in Night Set Back (NSB) Mode (see page 32). The heating setpoint value is restricted by the cooling setpoint value at Step 110, "NSB Cooling Setpnt". The moon ☽ and heating ♦ symbols are also displayed.

## 110. "NSB COOLING SETPNT"



Default: 28°C [82°F]  
Range: 10°C to 40°C [50°F to 104°F]  
Increment: 0.5°C [1°F]

This option appears only if you have selected **nSb** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the cooling setpoint that will be used when the system is in Night Set Back (NSB) Mode (see page 32). The cooling setpoint value is restricted by the heating setpoint value at Step 109, "NSB Heating Setpnt". The moon ☽ and cooling \* symbols are also displayed.

## Occupancy (OCC)

## 111. "OCC MINIMUM TIME IN MINUTES"



Default: 30 minutes  
Range: 0 to 240 minutes  
Increment: 1 minute

This option appears only if you have selected **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the minimum time in minutes the controller must remain in the occupied state before it can be enabled to enter or re-enter the No Occupancy Mode (see page 32). The moon ☽ symbol is also displayed.

## 112. "NO OCC OVERRIDE DELAY MINUTES"



Default: 120 minutes  
Range: 0 to 180 minutes  
Increment: 15 minutes

This option appears only if you have selected **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". When in no occupancy mode, the user can override the No Occupancy Mode (see page 32) up to the duration of this delay by pressing the ☽ button. To disable the no occupancy override, set the delay to 0. The moon ☽ symbol is displayed to indicate the No Occupancy Mode .

## 113. "NO OCC FAN MODE"



Default: AUto (Automatic)  
Range: AUto (Automatic), LO (Low), mEd (Medium), HI (High)

This option appears only if you have selected **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the fan speed mode for no occupancy mode. The fan ☁ symbol is also displayed.

## 114. "NO OCC MODE"



Default: StP (Setpoint/override enabled)  
Range: StP (Setpoint/override enabled), OFF

This option appears only if you have selected **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". The moon ☽ symbol is also displayed.

- *StP. If selected, the controller uses the No OCC setpoints when in No Occupancy Mode (see page 32).*
- *OFF. If selected, the controller is forced into OFF mode when in No Occupancy Mode (see page 32).*

If you select **OFF**, Steps 115 and 116 will not be available.



## 115. "NO OCC HEATING SETPNT"



Default:	16°C	[61°F]
Range:	10°C to 40°C	[50°F to 104°F]
Increment:	0.5°C	[1°F]

This option appears only if you have selected **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the heating setpoint that will be used when the system is in Night Set Back (NSB) Mode/No Occupancy Mode/Window Open Mode/Door Open Mode. The heating setpoint value is restricted by the cooling setpoint value at Step 116, "No OCC Cooling Setpnt". The moon and heating symbols are also displayed.

## 116. "NO OCC COOLING SETPNT"



Default:	28°C	[82°F]
Range:	10°C to 40°C	[50°F to 104°F]
Increment:	0.5°C	[1°F]

This option appears only if you have selected **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Set the heating setpoint that will be used when the system is in Night Set Back (NSB) Mode/No Occupancy Mode/Window Open Mode/Door Open mode. The cooling setpoint value is restricted by the heating setpoint value at Step 115, "No OCC Heating Setpnt". The moon and cooling symbols are also displayed.

## Humidity Settings

The Humidity Settings appear only for the following conditions: if you have selected **HU** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type" or for the models with the built-in humidity sensor, unless otherwise specified.

## 117. "EXTERN HUMIDITY SENSOR OFFSET"



Offset:	± 5%
Range:	10% RH to 90% RH
Increment:	0.1% RH

This option appears only if you have selected **HU** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". The display shows the relative humidity percentage read by the external humidity sensor. Adjust the offset by comparing it with a known value humidistat. If the sensor is not connected or short circuited, unit displays the sensor's limits. The humidify symbol is also displayed.

## 118. "INTERN HUMIDITY SENSOR OFFSET"



Offset:	± 5%
Range:	10% RH to 90% RH
Increment:	0.1% RH

This option appears only for models with the humidity sensor. Compare the displayed humidity percentage reading with a known value from a humidistat. This is useful for the humidistats installed in areas where the humidity reading is slightly different than the room's actual humidity. For example, a humidistat placed right under the air diffuser. The humidify symbol is also displayed.

## 119. "HUMIDITY CONTROL MODE"



Default:	OFF
Range:	OFF, Auto (Automatic humidify and dehumidify), dEHU (dehumidify only), Hu (humidify only)

- **OFF (Disabled).** If selected, the controller disables all humidify and dehumidify functions.
- **Auto (Automatic humidify and dehumidify).** If selected, the ramp of atleast one analog or binary must be set to **Hu** (humidify) and another output must be set to **COOI** (cooling).
- **dEHU (Dehumidify only).** If selected, the ramp of at least one analog or binary output must be set to **COOI** (cooling).
- **Hu (Humidify only).** If selected, the ramp of at least one analog or binary output must be set to **Hu** (humidify).

If you select **OFF**, Steps 122 to 131 will not be available.

If you select **Hu** or **deHU**, Step 122, "Humidity User Setpnt Minimum" will be available.

## 120. "DISPLAY HUMIDITY"



Default:	No
Range:	No, Yes

This option appears only if you have selected **OFF** at Step 119, "Humidity Control Mode". Select whether to display humidity value or not. If set to No, the controller will not show the humidity value and if set to Yes, it will display the humidity value.



## 121. "HUMIDITY CONTROL SOURCE"



Default: Erh  
Range: Erh, irh

This option appears only for models with the built-in humidity sensor, while also having selected **HU** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the source for humidity control.

- *Irh. If selected, the controller will be controlled by its internal humidity sensor.*
- *Erh. If selected, the controller will be controlled by an external humidity sensor.*

## 122. "HUMIDITY USER SETPNT MINIMUM"



Default: 30% RH  
Range: 10% RH to 90% RH  
Increment: 0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode". In Operation Mode, you cannot decrease the setpoint to less than the value set as the minimum humidity setpoint. The minimum value is restricted by the maximum value set at Step 123, "Humidity User Setpnt Maximum". In other words, the value that is set as the minimum cannot be greater than the maximum value.

## 123. "HUMIDITY USER SETPNT MAXIMUM"



Default: 65% RH  
Range: 10% RH to 90% RH  
Increment: 0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode". In Operation mode, you cannot increase the setpoint to more than the value set as the maximum humidity setpoint. The maximum value is restricted by the minimum value set at Step 122, "Humidity User Setpnt Minimum". In other words, the value that is set as the maximum cannot be less than the minimum value.

## 124. "HUMIDITY USER SETPNT LOCKED"



Default: No (Unlocked)  
Range: No (Unlocked), Yes (Locked)

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode". If set to **No**, the user setpoint option is not locked and the user can adjust the desired humidity setpoint. If set to **Yes**, the user setpoint option is locked and the user cannot set the desired humidity setpoint. A lock symbol appears to indicate that the setpoint is locked.

## 125. "HUMIDITY USER SETPNT"



Default: 40% RH  
Range: 10% RH to 90% RH  
Increment: 0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode". Set the desired humidity setpoint. If the setpoint option was locked at Step 124, "Humidity User Setpnt Locked", a lock symbol is displayed. The setpoint value is restricted by the minimum at Step 122, "Humidity User Setpnt Minimum" and maximum at Step 123, "Humidity User Setpnt Maximum" values.

## 126. "NSB HUMIDIF SETPNT"



Default: 30% RH  
Range: 10% RH to 65% RH  
Increment: 0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode", and also **nSb** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Adjust the humidify setpoint during Night Set Back (NSB) Mode. The humidify setpoint is restricted by the dehumidify value at Step 127, "NSB Dehumi- Setpnt". The moon and humidify symbols are also displayed.

## 127. "NSB DEHUMI- SETPNT"



Default: 45% RH  
Range: 10% RH to 65% RH  
Increment: 0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode", and also **nSb** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Adjust the dehumidify setpoint during Night Set Back (NSB) Mode. The dehumidify setpoint is restricted by the humidify setpoint at Step 126, "NSB Humidif Setpnt". The moon and dehumidify symbols are also displayed.

**128. "NO OCC HUMIDIF SETPNT"**


Default:	30% RH
Range:	10% RH to 65% RH
Increment:	0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode", and also **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Adjust the humidify setpoint during No Occupancy Mode. The humidify setpoint is restricted by the dehumidify value at Step 129, "No OCC Dehumi - Setpnt". The moon  and humidify  symbols are also displayed.

**129. "NO OCC DEHUMI - SETPNT"**


Default:	45% RH
Range:	10% RH to 65% RH
Increment:	0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode", and also **OCC** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Adjust the dehumidify setpoint during No Occupancy Mode. The dehumidify setpoint is restricted by the humidify setpoint at Step 128, "No OCC Humidif Setpnt". The moon  and dehumidify  symbols are also displayed.

**130. "HUMIDITY PROP RAMP"**


Default:	5% RH
Range:	3% RH to 10% RH
Increment:	0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode". Set the desired proportional ramp value for the humidity control. This value applies to both humidification and dehumidification.

**131. "HUMIDITY DEAD BAND"**


Default:	1% RH
Range:	0% RH to 5% RH
Increment:	0.5% RH

This option appears only if you have selected **AuTo**, **Hu** or **deHU** at Step 119, "Humidity Control Mode". Set the desired dead band value for the humidity control. This value applies to both humidification and dehumidification.

## Anti Freeze

**132. "ENABLE ANTI FREEZE PROTECT"**


Default:	No (Disable)
Range:	No (Disable), Yes (Enable)

If this option is enabled, heating starts automatically when the temperature drops to 4°C [39°F], even if the controller is in Cooling or OFF mode. Once the temperature reaches 5°C [41°F], the heating stops.

## Delta Temperature

**133. "ENABLE DELTA TEMP MODE"**


Default:	OFF
Range:	On, OFF

Select whether to enable or disable the ΔT control based on the inlet and outlet temperature of the water inside the fan coil unit.

## Backlight Adjustment

**134. "USER BACK LIGHT ADJUST"**


Default:	50
Range:	0 to 100
Increment:	5

Select the backlight level in the user mode (controller is in operation). Use the  and  buttons to increase or decrease the backlight level.

**135. "OCC BACK LIGHT ADJUST"**


Default: 50  
 Range: 0 to 100  
 Increment: 5

Select the backlight level in the occupied mode (controller is idle and occupancy state is active). Use the ▲ and ▼ buttons to increase or decrease the backlight level.

**136. "NO OCC BACK LIGHT ADJUST"**


Default: 50  
 Range: 0 to 100  
 Increment: 5

Select the backlight level in the not occupied mode (controller is idle and occupancy state is inactive). Use the ▲ and ▼ buttons to increase or decrease the backlight level.


## Scheduling Mode Settings

This menu is accessible through normal operation mode. The Mode Selector Jumper (JP1) must be set to the RUN position (Operation Mode).

1. Press and hold the button for 5 seconds. The "ENTER PASSWORD" screen appears.
2. Enter the password (367) within 1 minute. Use the ▲ and ▼ arrow keys to increase or decrease the value and the buttons to toggle between the digits. If you enter the wrong password, the controller displays "Error" and returns to Operation Mode.

Use the same menu operations as described in Programming Mode on page 6.

The controller will return to normal mode if you navigate through the entire menu and do not make any selection, or if you do not press any key for 5 minutes. The changed values will be saved automatically.

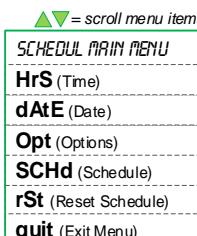

## Time

**1. "SET TIME DISPLAY FORMAT"**


Default: 12  
 Range: 12 hours, 24 hours

Select the desired time format.

**2. "SET HOURS"**


Range: 00 to 23 hours  
 Increment: 1 hour

Select the time in hours.

**3. "SET MINUTES"**


Range: 0 to 59 minutes  
 Increment: 1 minute

Select the time in minutes.

## Date

**4. "ENTER YEAR"**


Default: 2020  
 Range: 2009 to 2099  
 Increment: 1 year

Select the year.

**5. "ENTER MONTH"**

Range: 01 to 12  
Increment: 1 month

---

Select the month.

**6. "SET DAY"**

Range: 01 to 31 days  
Increment: 1 day

---

Select the day.

**Options****7. "USED TIME SCHEDUL"**

Default: No  
Range: Yes, No

---

Select whether to schedule events or not. If set to No, then you will proceed to the quit option. If set to Yes, then you will proceed to Step 8, "Schedul Default Value".

**8. "SCHEDUL DEFAULT VALUE"**

Default: OCC  
Range: OFF, OCC (Occupancy), nOCC (Non-Occupancy)

---

Select the default occupancy mode for the schedule.

**Schedule****9. "SELECT DAY OF WEEK"**

Default: mo  
Range: mo (Monday), tu (Tuesday), wE (Wednesday), th (Thursday), Fr (Friday), SA (Saturday), Su (Sunday)

---

Select the day of the week.

**10. "E1 00:00"**

Range: E1 to E6,  
00 to 23 hours,  
00,15, 30, 45 minutes,  
OFF, OCC (Occupancy), nOCC (Non-Occupancy), --- (Null)  
Increment: 1

---

Select the parameters to schedule an event. Select the event number, followed by the time (hours and minutes) and occupancy mode. If --- (Null) is selected, then the controller will remain turned off and the event will be unused. To exit the Event menu, press the button.

**Reset Schedule****11. "RESET SCHEDUL"**

Default: nO  
Range: yES, nO

---

Select whether to reset and delete the scheduled events or not.



## Sensor Offset Menu

This menu is accessible through normal operation mode. The Mode Selector Jumper (JP1) must be set to the RUN position (Operation Mode).

1. Press the and keys for 5 seconds. The "ENTER PASSWORD" screen appears.
2. Enter the password (372) within 1 minute. Use the and arrow keys to increase or decrease the value and the , buttons to toggle between the digits. If you enter the wrong password, the controller displays "Error" and returns to Operation Mode.

Use the same menu operations as described in Programming Mode on page 6.

The controller will return to normal mode if you navigate through the entire menu and do not make any selection, or if you do not press any key for 5 minutes. The changed values will be saved automatically.

### 1. "INTERN TEMP SENSOR OFFSET"



Range:	0°C to 50°C	[32°F to 122°F]
Offset:	Max. ± 5°C	[± 9°F]
Increment:	0.1°C	[0.2°F]

Compare the displayed temperature reading with a known value from a thermometer or other temperature sensing device. To offset or calibrate the sensor, use the arrow buttons to set the desired temperature reading. This is useful for controllers installed in areas where the temperature read is slightly different than the room's actual temperature. For example, a controller placed right under the air diffuser.

### 2. "EXTERN TEMP SENSOR OFFSET"



Range:	-40.0°C to 100°C	[-40°F to 212°F]
Offset:	Max. ± 5°C	[± 9°F]
Increment:	0.1°C	[0.2°F]

This option appears only if you have selected **t10.0** or **t10V** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". The display shows the temperature read by the external temperature sensor. Adjust the offset by comparing it with a known value (e.g. thermometer). If the sensor is not connected or short circuited, the unit displays the sensor's limit.

### 3. "EXTERN HUMIDITY SENSOR OFFSET"



Offset:	± 5%
Range:	10% RH to 90% RH
Increment:	0.1% RH

This option appears if the controller is set to use an external humidity sensor. The display shows the relative humidity percentage read by the external humidity sensor. Adjust the offset by comparing it with a known value humidistat. If the sensor is not connected or short circuited, unit displays the sensor's limits. The humidify symbol is also displayed.

### 4. "VFD PRESSUR SETPNT"



Default:	500 Pa
Range:	100 to pressure maximum range
Increment:	1 Pa

This option appears only if you have selected **VfdP** at Step 14 "AO2 Ramp", and **P10V** at Step 76, "UI1 Signal Type" or Step 80, "UI2 Signal Type". Select the setpoint value for VFD pressure. The fan symbol is also displayed.

### 5. "VFD TEMP SETPNT"




Default:	22.0°C	[72°F]
Range:	10.0°C to 40.0°C	[50°F to 104°F]
Increment:	0.5°C	[1°F]

This option appears only if you have selected **Vfdt** at Step 14 "AO2 Ramp". Select the setpoint value for VFD pressure. The fan symbol is also displayed.



## Operation Mode

The Mode Selector Jumper JP1 must be set to the RUN position (Operation Mode). Refer to the Wiring section on page 3.

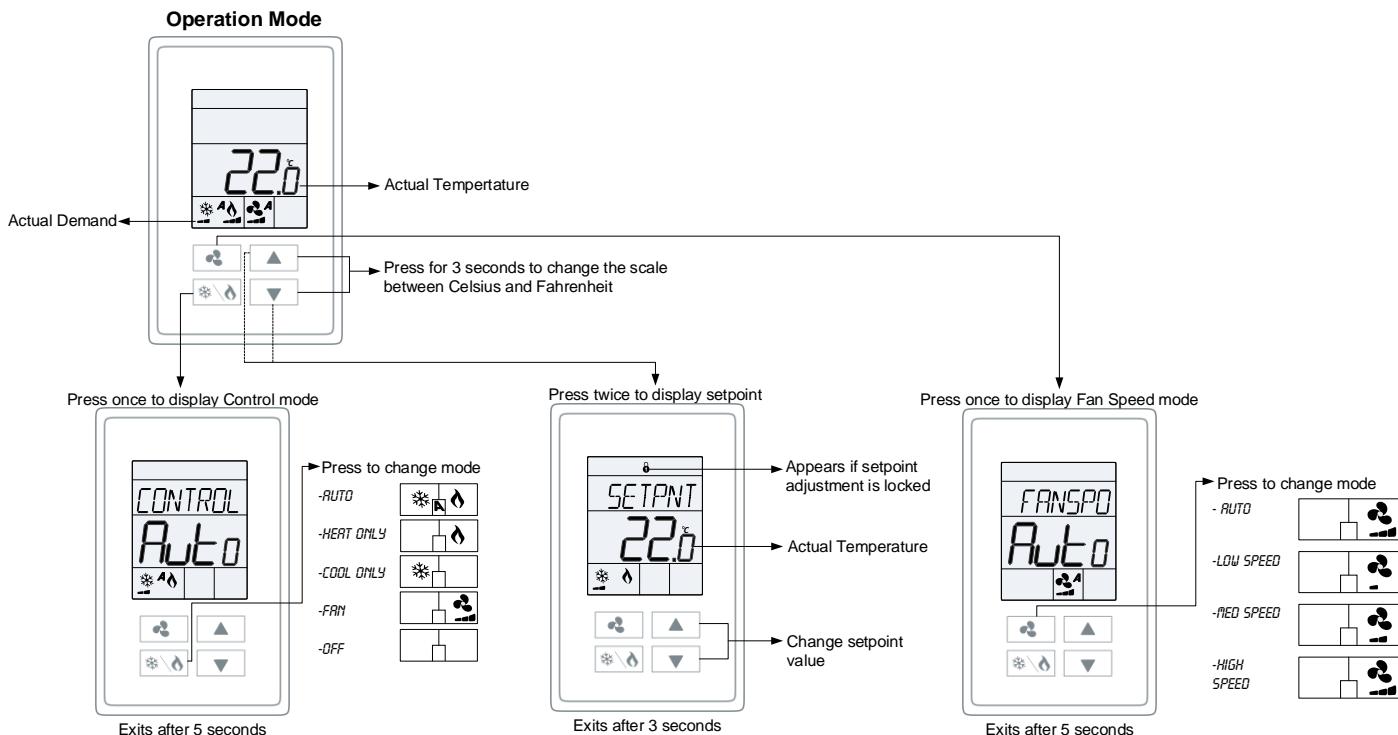

## Power Up

Upon power up, the LCD illuminates and all segments appear for 2 seconds. The controller then displays its current version for 2 seconds.

## LCD Backlight

Pressing any key illuminates the LCD for 4 seconds.

## Default Display

The controller displays temperature and humidity readings or setpoints, with or without demand according to the selection made at Step 8, "Display Info". If a humidity sensor is not used, the temperature values will always be displayed. If a sensor is disconnected or short circuited, then the unit displays the sensor's limits. To toggle the temperature scale between °C and °F, press both the up ▲ and down ▼ arrow keys for 3 seconds.

## Temperature Setpoint Display and Adjustment

To display the setpoint, press the ▲ or ▼ key twice. The setpoint appears for 3 seconds. To adjust the setpoint, press the arrow keys while the setpoint is displayed. If the setpoint adjustment has been locked (Step 5, "User Setpt"), the lock symbol appears.

## Humidity Setpoint Display and Adjustment

To access the Humidity setpoint, press the button for 5 seconds. The humidity setpoint will be displayed for 5 seconds. To adjust the setpoint, press the ▲ and ▼ keys while the setpoint is displayed. The unit automatically exits this menu if you do not press any key for 3 seconds. The changed values will be saved automatically.

## Control Mode

To access the Control Mode, press the key. The Control Mode appears for 5 seconds. Press the key to scroll through the following control modes. These options can vary depending on the options selected at the following:

Step 6, "Temp Control Mode"

Step 7, "Enable On Off Control Mode"

Step 26, "Fan Speed Option"

- Auto (Automatic Cooling or Heating)
- Cooling only (on, with cooling symbol)
- Heating only (on, with heating symbol)
- FAN (on, with fan symbol)
- OFF (if it is not disabled in Programming Mode)

## Fan Speed Selection Mode

To access the Fan Speed selection mode, press the  key. The mode appears for 5 seconds. These options can vary depending on the fan speed signal and auto mode settings at Step 29 "Fan Auto Mode" and Step 25, "Fan Spd Signal". If in No Occupancy mode, the  button now serves as the override button.

The Fan Speed Selection Mode is not available when VFD analog output is used and if **Yes** is selected at Step 28 "Hide Fan Display Info".

- Automatic speed. This option is available if you have selected **yES** (Enable) at Step 29, "Fan Auto Mode" in Programming Mode.
- Low speed
- Medium speed
- High speed
- OFF. OFF is not selectable by the user, it appears only if the "Control Mode" is "OFF" and it indicates that the user cannot change the speed of the fan.

## Night Set Back (NSB) Mode

This function is only available if you have set input to **nSb** (Night Set Back contact). If the contact is triggered, the controller enters NSB Mode (the  symbol appears) and uses the NSB setpoints defined at Steps 109, "NSB Heating Setpnt", 110, "NSB Cooling Setpnt" and 107, "NSB Fan Mode". Press any key to override NSB for the delay defined at Step 106, "NSB Overide Delay Minutes". The  symbol flashes to indicate that the NSB mode is overridden (during this time the standard setpoints are used).

## No Occupancy Mode

This function is only available if you have set input to **OCC** (occupancy contact). If the contact is triggered and the minimum occupancy time defined at Step 111, "OCC Minimum Time In Minutes" has elapsed, the controller enters Occupancy Mode (the  symbol appears) and uses the OCC setpoints defined at Steps 115, "No OCC Heating Setpnt", 116 "No OCC Cooling Setpnt" and 113, "No OCC Fan Mode".

Press the fan  button to override no occupancy. Each time you press the  button, 15 minutes are added to the override up to a maximum defined by Step 112, "No OCC Override Delay Minutes". Press the fan  button until "0" is displayed to disable the override. The  icon will flash and the remaining override time will be displayed in minutes.

## Backlight Level Adjustment

Press and hold the  and  buttons for 5 seconds and enter the password **367** to gain access to the backlight level adjustment settings. Use the  and  keys to adjust the backlight level in three modes: User (controller is in operation), Occupied (controller is idle and occupancy state is active) and Not Occupied (controller is idle and occupancy state is inactive). Press the  key to save any changes.



Recycling at end of life: please return this product to your Neptronic local distributor for recycling. If you need to find the nearest Neptronic authorized distributor, please consult [www.neptronic.com](http://www.neptronic.com).