


# SKD DIRECT STEAM INJECTION HUMIDIFIER

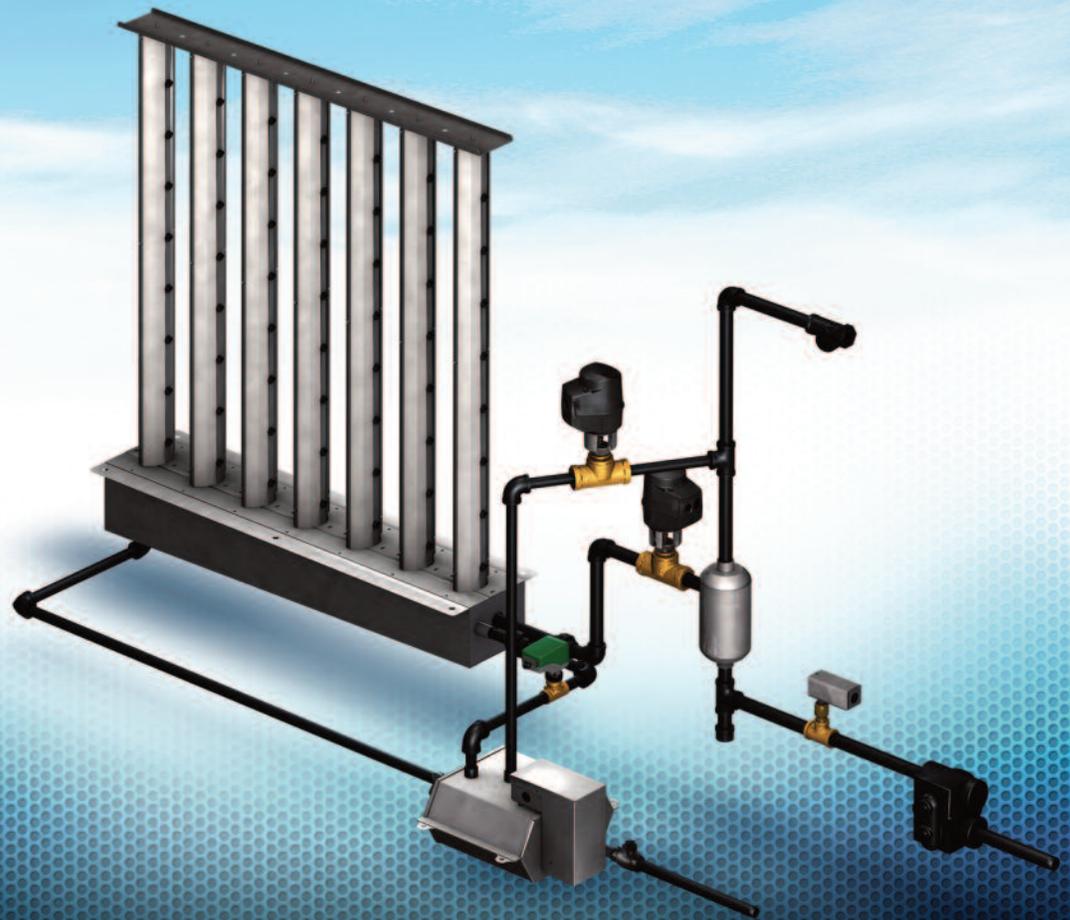

**neptronic**<sup>®</sup>  
[www.neptronic.com](http://www.neptronic.com)

The SKD direct steam injection system uses low pressure steam from an in-house boiler to humidify the air.

## SKD Advantages

- ▶ Custom designed to meet your specific steam capacity and non-wetting distance requirements.
- ▶ 5 steam distribution configurations available: Multi-Steam™, Multi-Steam™ HD, or Jacketed (Single Tube, Multi-Tube, or Mini Rack)
- ▶ Unique Electronic Steam Controller (ESC) manages the sequence of operation to optimize energy efficiency and prevent condensate ejection
- ▶ NEW: Optional patent-pending pressurized condensate return (PCR) system. No gravity drain – no maintenance – returns condensate to steam source.

## Typical Applications

The SKD steam injection system is the ultimate solution for applications where clean low pressure steam is available, such as:


- ▶ Hospitals / Health Care
- ▶ Museums
- ▶ Laboratories
- ▶ Universities
- ▶ Airports



## Typical Installation

Every SKD Steam Injection Humidifier comes with all required accessories for a complete installation. Depending on the selected configuration, we will supply:

- ▶ Isolating valve
- ▶ Steam control valve
- ▶ Temperature sensors
- ▶ Steam separator
- ▶ Strainer
- ▶ Steam traps
- ▶ ESC controller

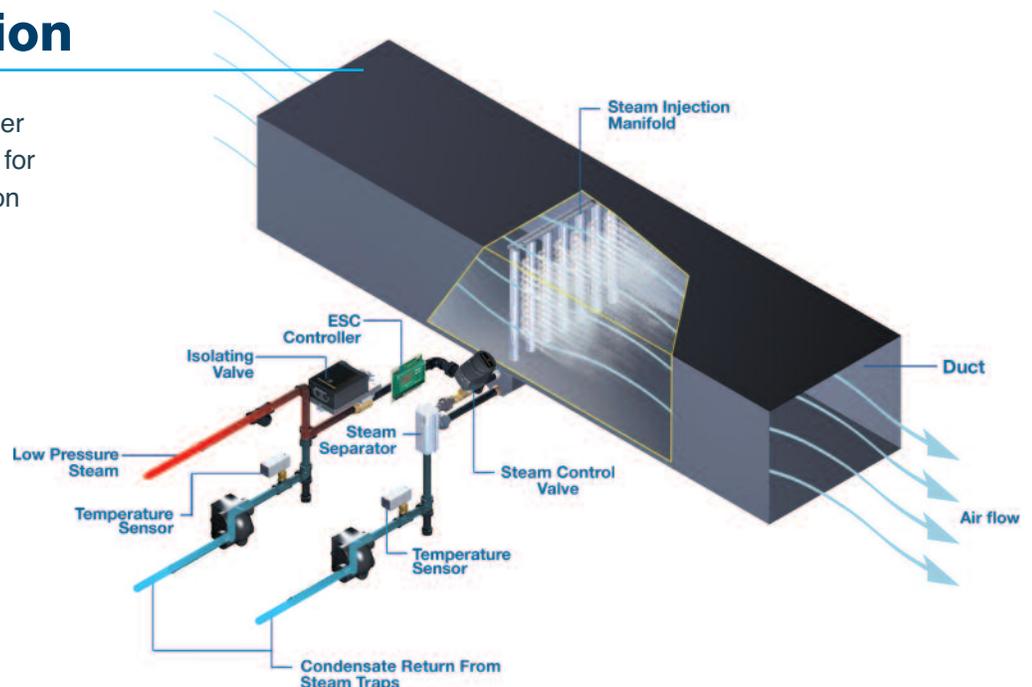

# System Overview

## Steam Separator

Supplies condensate-free steam to the steam control valve, while discharging condensate to the steam trap.



## Temperature Sensor

Monitors steam temperature and detects abnormal condensate level to ensure safe operation.



## F&T Steam Trap

Eliminates condensate from the steam line.



## Steam Control Valve

Provides full modulation of the low pressure steam flow for a better control of the humidity level.




## Steam Distribution System

### Multi-Steam Configuration

- Multi-Steam™ SD
- Multi-Steam™ HD

### Jacketed Tube Configuration

- Single Tube
- Multi-Tube
- Mini Rack

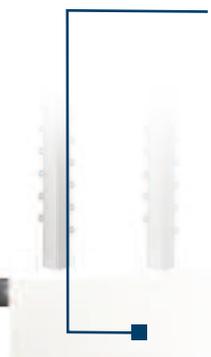


## Isolating Valve

Controls steam supply to the jacket in a Multi-Tube configuration, (mandatory as per ASHRAE standard 90.1 for all jacketed tube configurations)



## PCR

Optional patent-pending pressurized condensate return (PCR) system. No gravity drain – no maintenance – returns condensate to steam source.

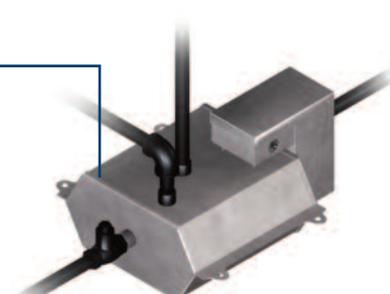

## ESC Controller

Unique in the Industry.



- ▶ Microprocessor-based field configurable controller
- ▶ Centralized wiring of sensors, valves and humidity controls
- ▶ Easy start-up and diagnostics
- ▶ 4 buttons and large LCD for simple configuration
- ▶ Factory pre-configured operating temperature range
- ▶ Automated linear capability by adjusting the control valve stroke to supply the appropriate steam capacity
- ▶ 24 Vac operation
- ▶ BACnet or Modbus compatible

## Multi-Steam Distribution

This configuration consists of multiple vertical dispersion tubes mounted on a single horizontal header. Upon a demand for humidity, the ESC controller slowly opens the steam modulating valve feeding steam to the dispersion tubes through a single horizontal header. The steam escapes the dispersion system through multiple nozzles on the vertical tubes and mixes with the airflow to maintain the desired humidity level.

### Common Features

- ▶ Medium to high capacity applications: 7 to 1,157 lb/h (2 to 525 kg/h). Higher capacities also available.
- ▶ Short non-wetting distance
- ▶ Pre-configured ESC controller manages sequence of operation
- ▶ 100% stainless steel construction (maintenance free)
- ▶ Optional pressurized condensate return (PCR) system

## Multi-Steam™ SD

- ▶ Lowest capital cost steam injection system
- ▶ Easiest installation...contractor's favorite
- ▶ Lowest heat transferred to the airstream
- ▶ Header with built-in slope for improved condensate elimination



## Multi-Steam™ HD

- ▶ Same as Multi-Steam™ SD plus: X-Stream™ Technology

## X-Stream™ Technology

- ▶ Included in Multi-Steam™ distributors
- ▶ High efficiency insulated steam distributor (channel and header) with patent pending steam ejector eyelets
- ▶ Double wall 304 stainless steel with encapsulated Armacell UT/Solaflex™ foam insulation
- ▶ Specially engineered silicone eyelets prevent condensate ejection on start up and any modulating humidity demand
- ▶ Wasted energy is reduced by 85%
- ▶ Reduces airstream heat gain and generated condensate
- ▶ For more details, refer to the X-Stream™ sales literature



# ■ Jacketed Tube Steam Distribution

This configuration consists of a single tube or multiple horizontal tubes on a common vertical header. Upon a demand for humidity, the ESC controller opens the isolating valve to preheat the outer jacket. This prevents any condensate from forming in the inner tube that could wet the duct or AHU floor when steam is flowing through the tubes' nozzles. When the jacket reaches its operating temperature, the ESC controller slowly opens the steam modulating valve feeding steam directly to the inner tube(s). The steam escapes the tube(s) through multiple calibrated nozzles and mixes with the airflow to maintain the desired humidity level.


## ■ Single Tube

- ▶ Mainly for duct installations
- ▶ Low capacity applications: 7 to 170 lb/h (2 - 77 kg/h)
- ▶ Average non-wetting distance
- ▶ Pre-configured ESC controller manages sequence of operation



## ■ Multi-Tube

- ▶ For duct or AHU installations
- ▶ Medium to high capacity applications: 7 to 1,157 lb/h (2 - 525 kg/h). Higher capacities also available
- ▶ Short non-wetting distances
- ▶ Pre-configured ESC controller manages sequence of operation
- ▶ Optional pressurized condensate return (PCR) system

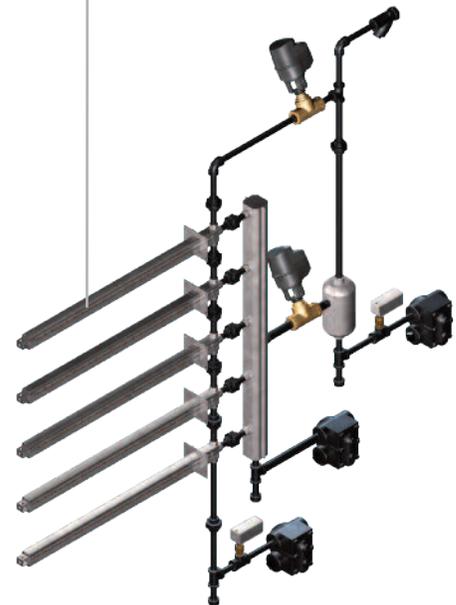

## ■ Mini Rack

Same as Multi-Tube plus:

- ▶ Designed for limited space installations such as reduced duct height
- ▶ Tubes pre-assembled on header

# Breakthrough Innovation for Direct Steam Injection Humidifiers



## PCR

The Neptronic pressurized condensate return (PCR) system returns condensate generated within the steam dispersion tubes of a direct steam humidifier back to the steam source. Presently, the only other available technology is a pressurized steam humidifier with a heat exchanger (or re-evaporator).

Why should you choose a humidifier with a PCR system?

Description	Neptronic PCR System (Pressurized Condensate Return)	Re-evaporators (Internal Heat Exchanger)
Why Use It?	No gravity drain required. Return humidifier condensate to steam source rather than waste to drain or complicated re-pressurization systems	
Real-time monitoring	Yes	No
BMS integration	BACnet or Modbus	No
Maintenance	Not required	Systematic verification is a must*
Cleaning	Not required	De-scaling*
Downtime	None	During maintenance or when equipment offline due to fouling*
Flooding of header	None	Possible due to reduced capacity due to fouling and standard piping configuration*
Accessibility	Outside the duct for easy access	Standard cleaning procedure requires access to the top of header often located in duct (may require duct access door)*
Compatibility	Insulated and non-insulated steam distributors and headers	Only insulated steam distributors and headers
Installation	Lowest clearance with simple and flexible installation due to small modular components	Higher clearance and integral design forces components below duct, resulting in potential ceiling clearance issues

Patent Pending

\*See manufacturer's manual for more information

# Humidifier Product Line



## ELECTRIC



### SK300

- ▶ Capacities from 6 - 270 lb/hr
- ▶ Permanent cleanable chamber
- ▶ Outdoor enclosure available

## RESIDENTIAL



### SKR

- ▶ Capacities from 4.5 - 12 lb/hr
- ▶ Permanent cleanable chamber
- ▶ Reliable Siphon drain

## GAS FIRED



### SKG3000

- ▶ Capacities from 110 - 810 lb/hr
- ▶ Modular design
- ▶ Outdoor enclosure available

## STEAM TO STEAM



### SKS

- ▶ Capacities from 33 - 1250 lb/hr
- ▶ Scale management system
- ▶ Insulated external panels

## DIRECT STEAM



### SKD

- ▶ Capacities from 7 - 1157 lb/hr
- ▶ Jacketed or Multi-Steam Type
- ▶ Unique Electronic Steam Controller
- ▶ Optional pressurized condensate return (PCR) system

## EVAPORATIVE



### SKV

- ▶ Free cooling up to 12 °C (22 °F)
- ▶ Custom design to fit your application
- ▶ Hygienic operation with silver ion dosing system

## HIGH PRESSURE ATOMIZER



### SKH

- ▶ Capacities up to 2600 lb/hr
- ▶ Up to 32 zones
- ▶ Installation In-duct or In-space

## STEAM DISTRIBUTION



### Distribution

- ▶ Multi-Steam distribution
- ▶ S.A.M & S.A.M.E2 wands
- ▶ SDU (Space distribution unit)

## HUMIDITY CONTROLS



### Controls

- ▶ Humidity controls / sensors
- ▶ Safety controls
- ▶ BACnet compatible



# HUMIDISOFT

## Design Your Humidifier Online



Our web-based tool saves you time when sizing and specifying Nepronic humidifiers.

MANUFACTURER OF



-  HVAC CONTROLS
-  ELECTRIC ACTUATORS
-  ACTUATED VALVES
-  HUMIDIFIERS
-  ELECTRIC HEATERS



[www.neptronic.com](http://www.neptronic.com)