




Feature:

- Mounts easy on round & square shaft (with option –8).
- External clutch for manual adjustments.
- Maintenance free.
- Position indicator.
- Fail safe by *Enerdrive System*¹ (on model 60S, 65S & 80S).
- Auxiliary switches (on model 20S & 80S).

ST100S
ST105S
ST120S
ST160S
ST165S
ST180S
ST200S
ST205S
ST220S
ST260S
ST265S
ST280S

Technical Data	ST100S	ST105S	ST120S	ST200S	ST205S	ST220S	ST160S	ST165S	ST180S	ST260S	ST265S	ST280S
Auxiliary switches	No	No	Yes (2)	No	No	Yes (2)	No	No	Yes (2)	No	No	Yes (2)
Feedback	No	Yes	No	No	Yes	No	No	Yes	No	No	Yes	No
Power supply	110 to 130 VAC 50/60Hz			220 to 250 VAC 50/60Hz			110 to 130 VAC 50/60Hz			220 to 250 VAC 50/60Hz		
Fail safe - Enerdrive	No						Yes					
Power consumption	8 VA						20VA Peak, 8VA					
Control signal	3 wire / 2 position, 4 wire / 3 point floating						2 wire / 2 position, 4 wire / 3 point floating					
Ingress protection	IP22 equivalent to Nema type 2, IP54 equivalent to Nema type 3R if water tight inlet bushings (not supplied NEP617) are installed						IP22 equivalent to Nema type 2					
Running time through 90°	90 - 110 sec (Fail-safe20-30 sec)											
Torque	70 in.lb. [8 Nm] at rated voltage											
Electrical connection	18 AWG [0.8 mm ²] minimum											
Inlet bushing	2 inlet bushing of 5/8 in [15.9 mm] & 7/8 in [22.2 mm]											
Angle of rotation	0 to 90 degrees, mechanically adjustable (factory set with 90° stroke)											
Direction of rotation	Reversible, Clockwise (CW) or Counterclockwise (CCW) (factory set with CW direction)											
Ambient temperature	-22°F to +122°F [-30° C to +50° C]											
Storage temperature	-22°F to +122°F [-30° C to +50° C]											
Relative Humidity	5 to 95 % non condensing.											
Weight	3 lbs. [1.4 kg]											
Warning: Do not press the clutch when actuator is powered												

Dimensions

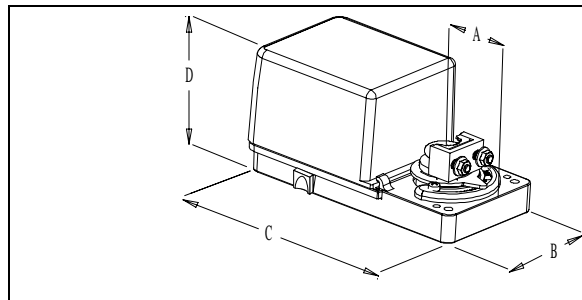


Dimension		Inches	Metric (mm)
A		1.50	38.1
B		3.26	82.8
C		6.60	167.5
D	model 00S, 05S & 20S	3.01	76.4
	model 60S, 65S & 80S	3.72	94.5

Caution

We strongly recommend that all neptronic® products be wired to a separate transformer and that transformer shall service only neptronic® products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.
When multiple actuators are wired on a single transformer, polarity must be observed. Long wiring runs create voltage drop which may affect the actuator performance.





¹ Enerdrive System U.S.A. Patent #5,278,454

Mechanical installation

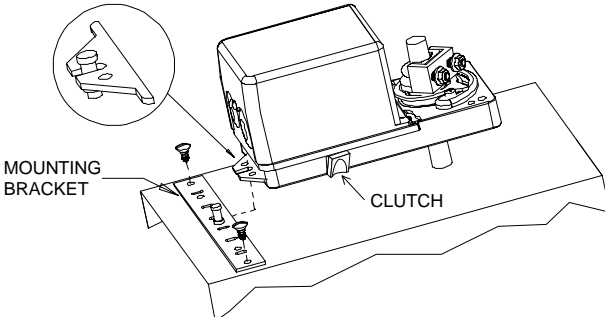


1. Manually close the damper blades and positioned the actuator at 0° or 90°.
2. Slide the actuator onto the shaft.
3. Tighten the nuts on the “U” bolt to the shaft with a 8mm wrench to a torque of 60 in.lb. [6,7 Nm].
4. Slide the mounting bracket under the actuator. Ensure free movement of the slot at the base of the actuator. The bracket pin must be placed in the mid distance of the slot.
5. Fix the bracket to the ductwork with #8 self-tapping screws.

Wiring Diagrams

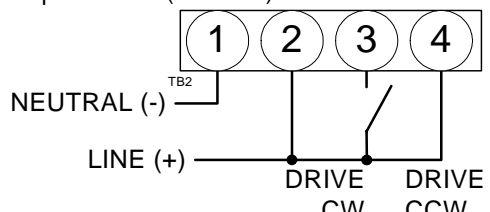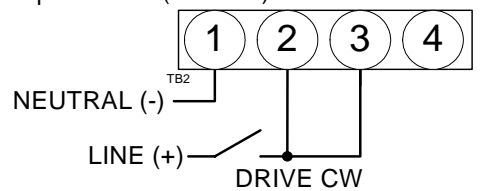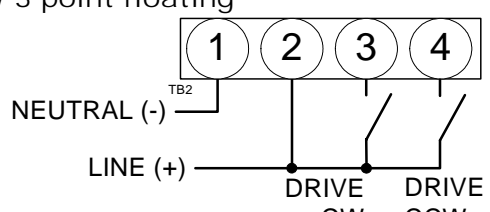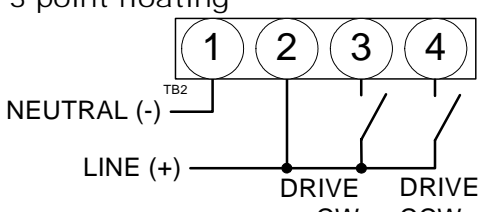Caution: Risk of electric shock. Remove power prior to connect.	
Models ST100S, 105S, 120S, 200S, 205S & 220S	Models ST160S, 165S, 180S, 260S, 265S & 280S
<p>3 wire / 2 position (ON-OFF)</p> 	<p>2 wire / 2 position (ON-OFF)</p> 
<p>4 wire / 3 point floating</p> 	<p>4 wire / 3 point floating</p> 

PC Board

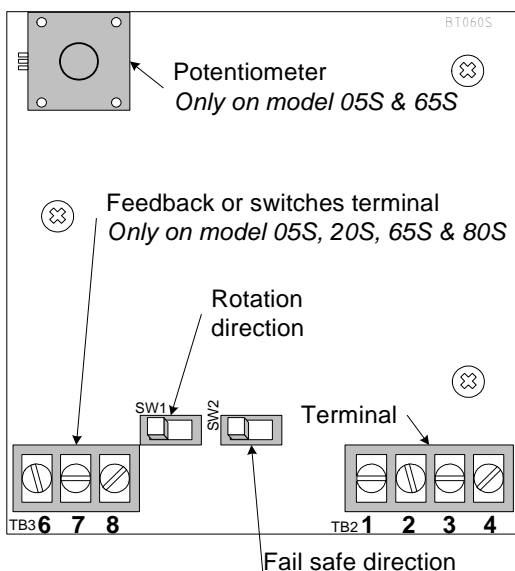

Potentiometer
Only on model 05S & 65S

Feedback or switches terminal
Only on model 05S, 20S, 65S & 80S

Rotation direction

SW1 SW2


Terminal

Fail safe direction
Only on model 60S, 65S & 80S


Dip switch settings

Rotation direction (SW1)

CW
(0 to 90°)




CCW
(90 to 0°)




Fail safe direction (SW2)

Fail safe
return at 0°



Fail safe
return at 90°



Stroke adjustment

To adjust the stroke, move the adjustment screws at the desired position.