



### Models

<b>EVCB14NIT0S</b>	(0 TRIACS / pressure independent)
<b>EVCB14NIT2S</b>	(2 TRIACS / pressure independent)
<b>EVCB14NIT4S</b>	(4 TRIACS / pressure independent)
<b>EVCB14NDT4S</b>	(4 TRIACS / pressure dependent)
<b>EVCB14NIT0SF</b>	(0 TRIACS / independent / feedback)
<b>EVCB14NIT4SF</b>	(4 TRIACS / independent / feedback)
<b>TRL24</b>	(Thermostat 2x4)




### Description

The EVCB Series is a combination controller and thermostat with support for networked communications via the BACnet MS/TP or Modbus protocol. The Networkable VAV Controller is designed for simple and accurate control of any variable air volume box in a number of zone control configurations. Its field configurable algorithms enable versatile implementation of required control sequences.



EVCB Series / TRL24

### Typical Application

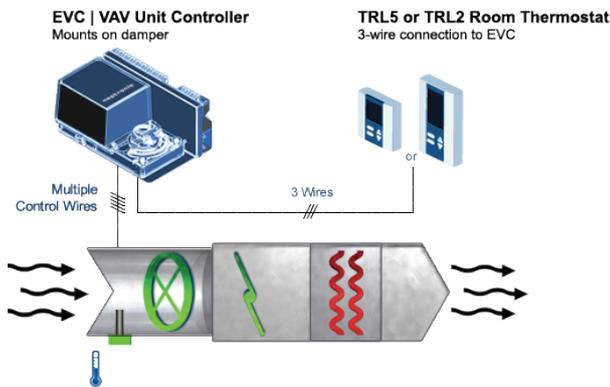

### Applications

- Single duct, cooling only
- Single duct cooling and/or heating
- Up to 4 stage reheat and/or cool
- Up to 4 On/Off heat and/or cool
- Up to 4 time proportioned (TPM) heat or reheat
- Up to 2 analog (0-10Vdc) reheat and/or cool
- Up to 2 floating heat and/or cool
- Pressure dependent or pressure independent
- With or without auto changeover
- Supply/exhaust (requires an additional EVC)

### Features

- Field configured VAV algorithms, inputs and outputs
- Built-in actuator (70 lb-in)
- On board differential pressure sensor (select models)
- Simple air balancing and commissioning via thermostat
- Automatically sets operation mode to pressure dependent or independent based on the presence of air flow
- Configurable PI (Proportional-Integral) function
- Independent, configurable proportional control band and dead band per ramp
- Selectable internal or external temperature sensor (10KΩ)
- External CO2 sensor input with integrated logic
- Changeover by contact or external temperature sensor
- Internal and external temperature sensor calibration
- Optional potentiometer feedback for increased precision of actuator position
- Freeze protection
- Removable, raising clamp, non-strip terminals

### Network Communication

- BACnet MS/TP or Modbus communication port (selectable via DIP switch)
- Select MAC address via DIP switch or via network
- Select direction on analog outputs
- Select thermostat's default display

#### BACnet MS/TP®

- Automatic baud rate detection
- Automatic device instance configuration
- Copy & broadcast configuration via thermostat menu or via BACnet to other controllers
- BACnet scheduler
- Firmware upgradeable via BACnet
- Support COV (change of value)


#### Modbus

- Modbus @ 9600, 19200, 38400 or 57600 bps
- RTU Slave, 8 bits (configurable parity and stop bits)
- Connects to any Modbus master

### Operational Features

- Backlit LCD with simple icon and text driven menus
- Network service port via on-board mini USB connector
- Manual night set back or no occupancy override
- Multi level lockable access menu and setpoint
- Selectable Fahrenheit or Celsius scale
- 3-wire connection to controller and 4 push buttons


### Controller Specifications

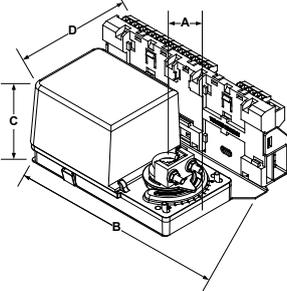Description	EVCB Series
Torque	70 in.lb. [8 Nm] at rated voltage
Power consumption	10 VA max
Running time through 90°	90 seconds
Power supply	22 to 26 Vac 50/60 Hz
Inputs	2 Universal inputs (Thermistor 10KΩ Type 3, digital 24Vac/dry contact, or 0-10Vdc) 2 digital inputs
On-board differential pressure sensor	0-1.0" WC (available on pressure independent models)
Outputs	2 analog outputs (0-10 Vdc or 2-10Vdc; selectable) Up to 4 TRIAC outputs 24 Vac, 500mA max fused (on/off, pulse, or 2 floating outputs)
Real Time Clock	Real-time clock (RTC) with super capacitor backup (approximately 3 days)
BACnet	BACnet® MS/TP @ 9600, 19200, 38400 or 76800 bps (BAS-C)
Modbus	Modbus RTU slave @ 9600, 19200, 38400 or 57600. Selectable parity and stop bit configuration: No parity, 2 stop bit Even parity, 1 stop bit Odd parity, 1 stop bit
Communication connection	24 AWG twisted-shield cable (Belden 9841 or equivalent)
Electrical connection	0.8 mm <sup>2</sup> [18 AWG] minimum
Operating temperature	0°C to 50°C [32°F to 122°F]
Storage temperature	-30°C to 50°C [-22°F to 122°F]
Relative Humidity	5 to 95% non condensing
Weight	1.8 kg. [4 lb]
A = 2.85"   73mm B = 4.85"   123mm C = 1.00"   24mm D = 2.36"   60mm E = 3.27"   83mm	




**The actuator performs an auto-stroke on power up. When changing the actuator adjustment screws, cycle power to initiate the auto-stroke. Auto-stroke is not available on EVC pressure independent without feedback.**

### Thermostat Specifications

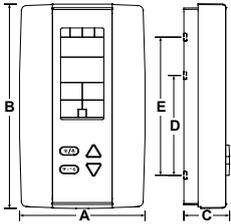Description	TRL24
Sensor	Temperature
Setpoint range	10°C to 40°C [50°F to 104°F]
Control accuracy	±0.5°C [0.9°F] @ 22°C [71.6°F] typical calibrated
Display resolution	±0.1°C [0.2°F]
Electrical connection	3 wires to EVCB controller and 2 wires to BACnet/Modbus network   0.8 mm <sup>2</sup> [18 AWG] minimum
Network service port	Mini USB connector
Power supply	24Vac or 24Vdc
Power consumption	1VA
Operating temperature	0°C to 50°C [32°F to 122°F]
Storage temperature	-30°C to 50°C [-22°F to 122°F]
Relative humidity	5 to 95 % non condensing
Enclosure protection	IP 30 (EN 60529)
Weight	120 g. [0.25 lb]
Dimensions	 <p>A = 2.85"   73mm B = 4.85"   123mm C = 1.00"   24mm D = 2.36"   60mm E = 3.27"   83mm</p>
<b>Note</b>	The thermostat functions only with the EVCB Series controller. All the inputs/outputs are located on the EVCB Series except for the temperature sensor built-in the thermostat.


## TRL24 Interface

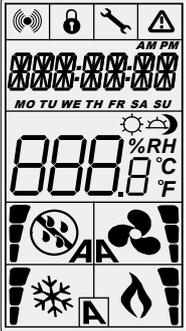

	Cooling ON A: Automatic		Communication Status		Alarm status
	Heating ON A: Automatic		Menu set-up Lock		Energy saving mode
	Fan ON A: Automatic		Programming mode (Technician setting)	°C or °F	°C: Celsius scale °F: Fahrenheit scale

## Mechanical Installation

1. Manually close the damper blades and position the actuator to 0° or 90°.
2. Slide the actuator onto the shaft.
3. Tighten the nuts on the “V” bolt to the shaft with an 8mm wrench to a torque of 60 in-lb [6.7 Nm].
4. Slide the mounting bracket under the actuator. Ensure free movement of the slot at the base of the actuator. Place the bracket pin at mid distance of the slot.
5. Affix the bracket to the ductwork with #8 self-tapping screws.

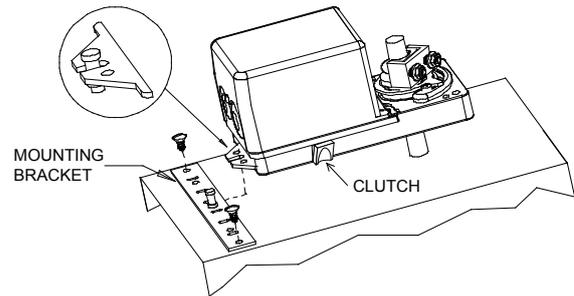


**Do not press the clutch when the actuator is powered.**

## Mounting Instructions

**CAUTION: Remove power to avoid a risk of malfunction.**

- A. Remove the captive screw that's holding the base and the front cover of the unit together.
- B. Lift the front cover of the unit to separate it from the base.
- C. Pull all wires through the holes in the base.
- D. Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- E. Mount the control module on the base and secure using the screw.

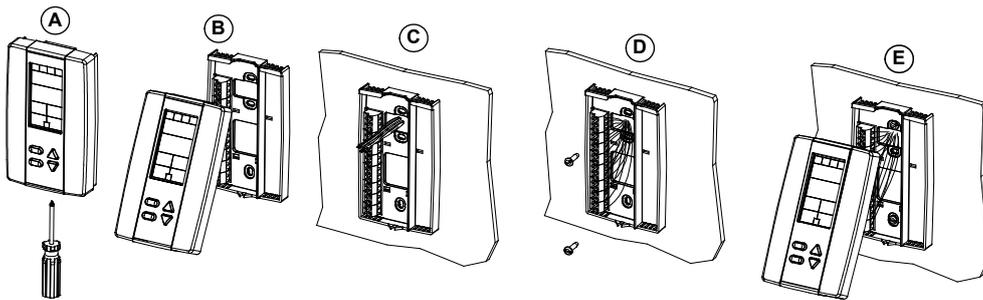

## BACnet or Modbus Address DIP Switch (DS1)

MAC address for communication, are selectable by DIP switch using binary logic. If you do not change device instance in program mode, it will be automatically modified according to the MAC address.


MAC Address	DS.1 = 1	DS.2 = 2	DS.3 = 4	DS.4 = 8	DS.5 = 16	DS.6 = 32	DS.7 = 64	DS.8 = 128	Default Device Instance
0	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	153000
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	153001
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	153002
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	153003
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	153004
...	...	...	...	...	...	...	...	...	...
126	OFF	ON	ON	ON	ON	ON	ON	OFF	153126
127	ON	ON	ON	ON	ON	ON	ON	OFF	153127

\* Slave addresses available by setting DS.8 to ON




**Wiring**

We strongly recommend that all Neptronic products be wired to a separate grounded transformer and that transformer shall service only Neptronic products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.

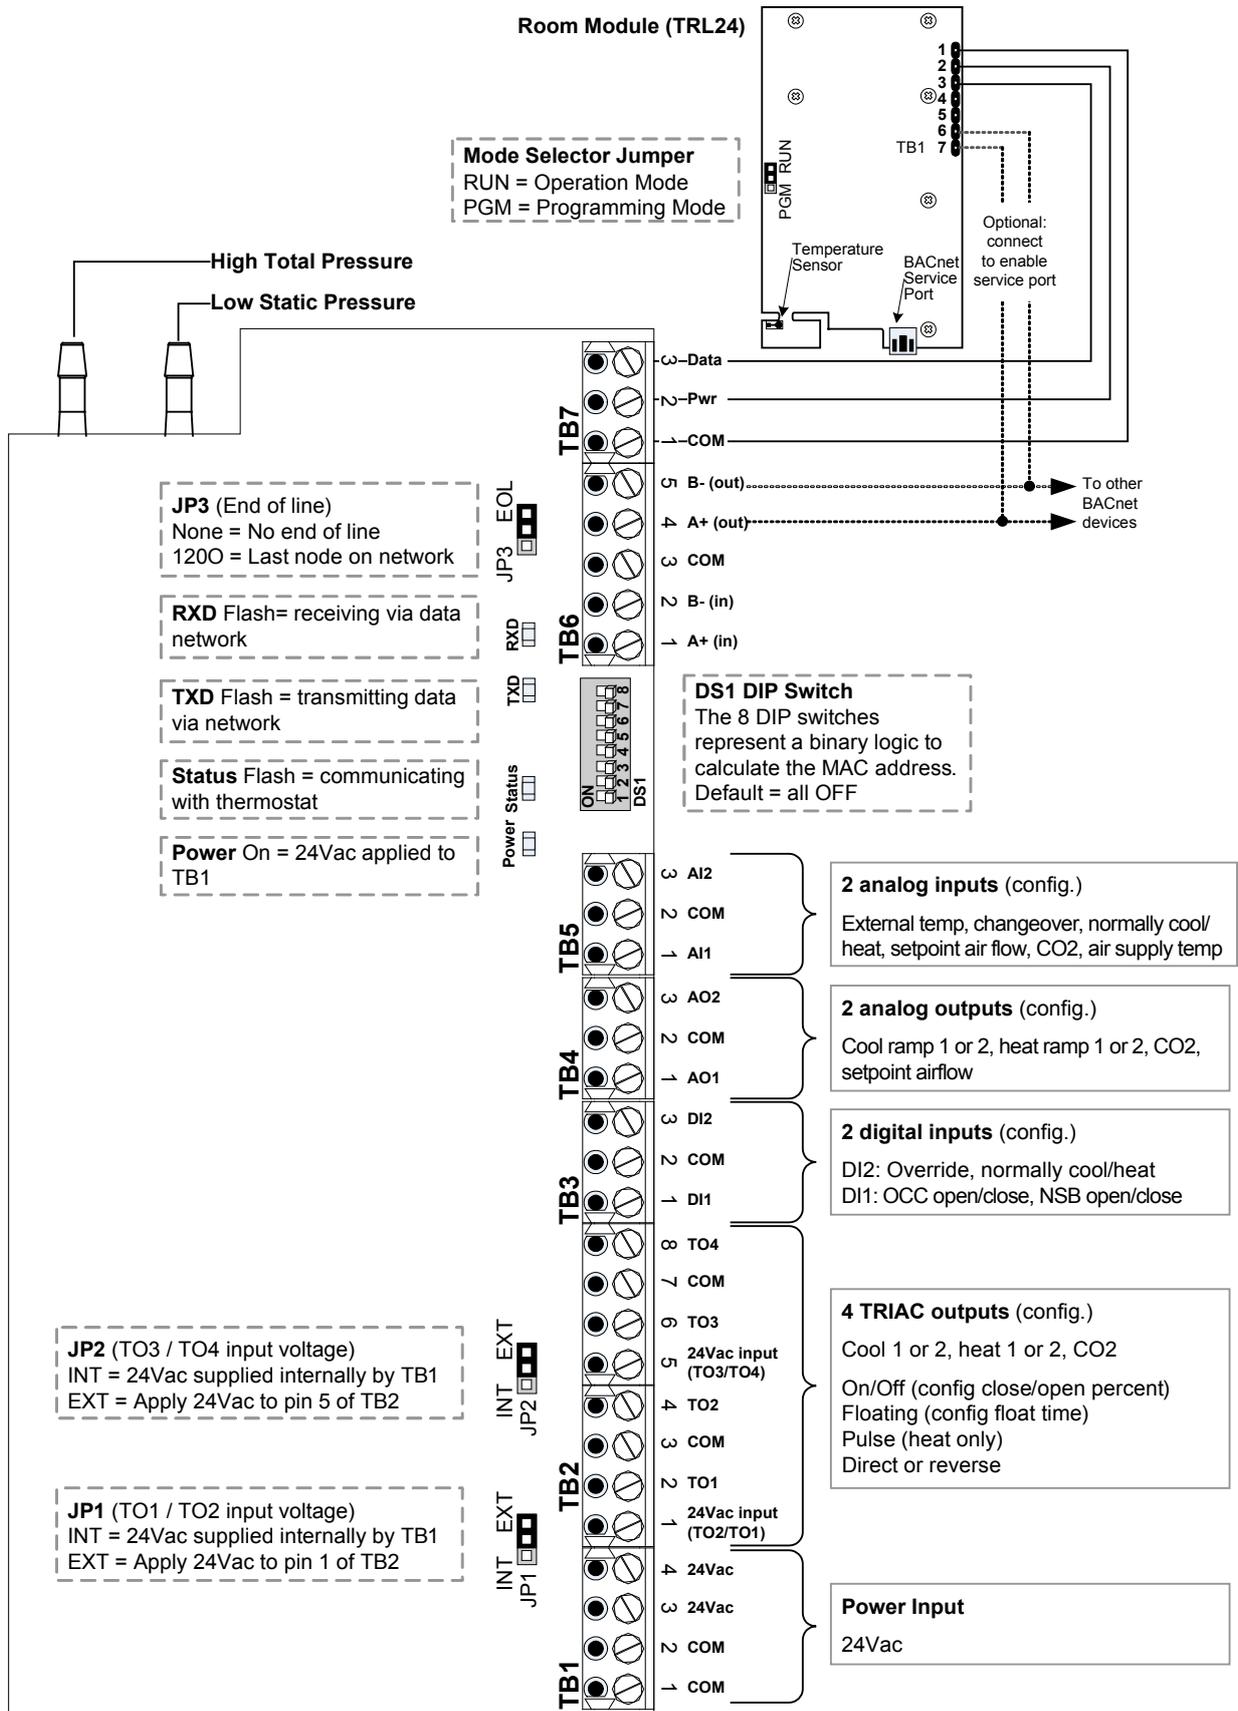


### Pressure & Applications – Menu Overview (1 of 6)


For a description of the default settings for each application refer to Annex A: Control Apps on page 14.

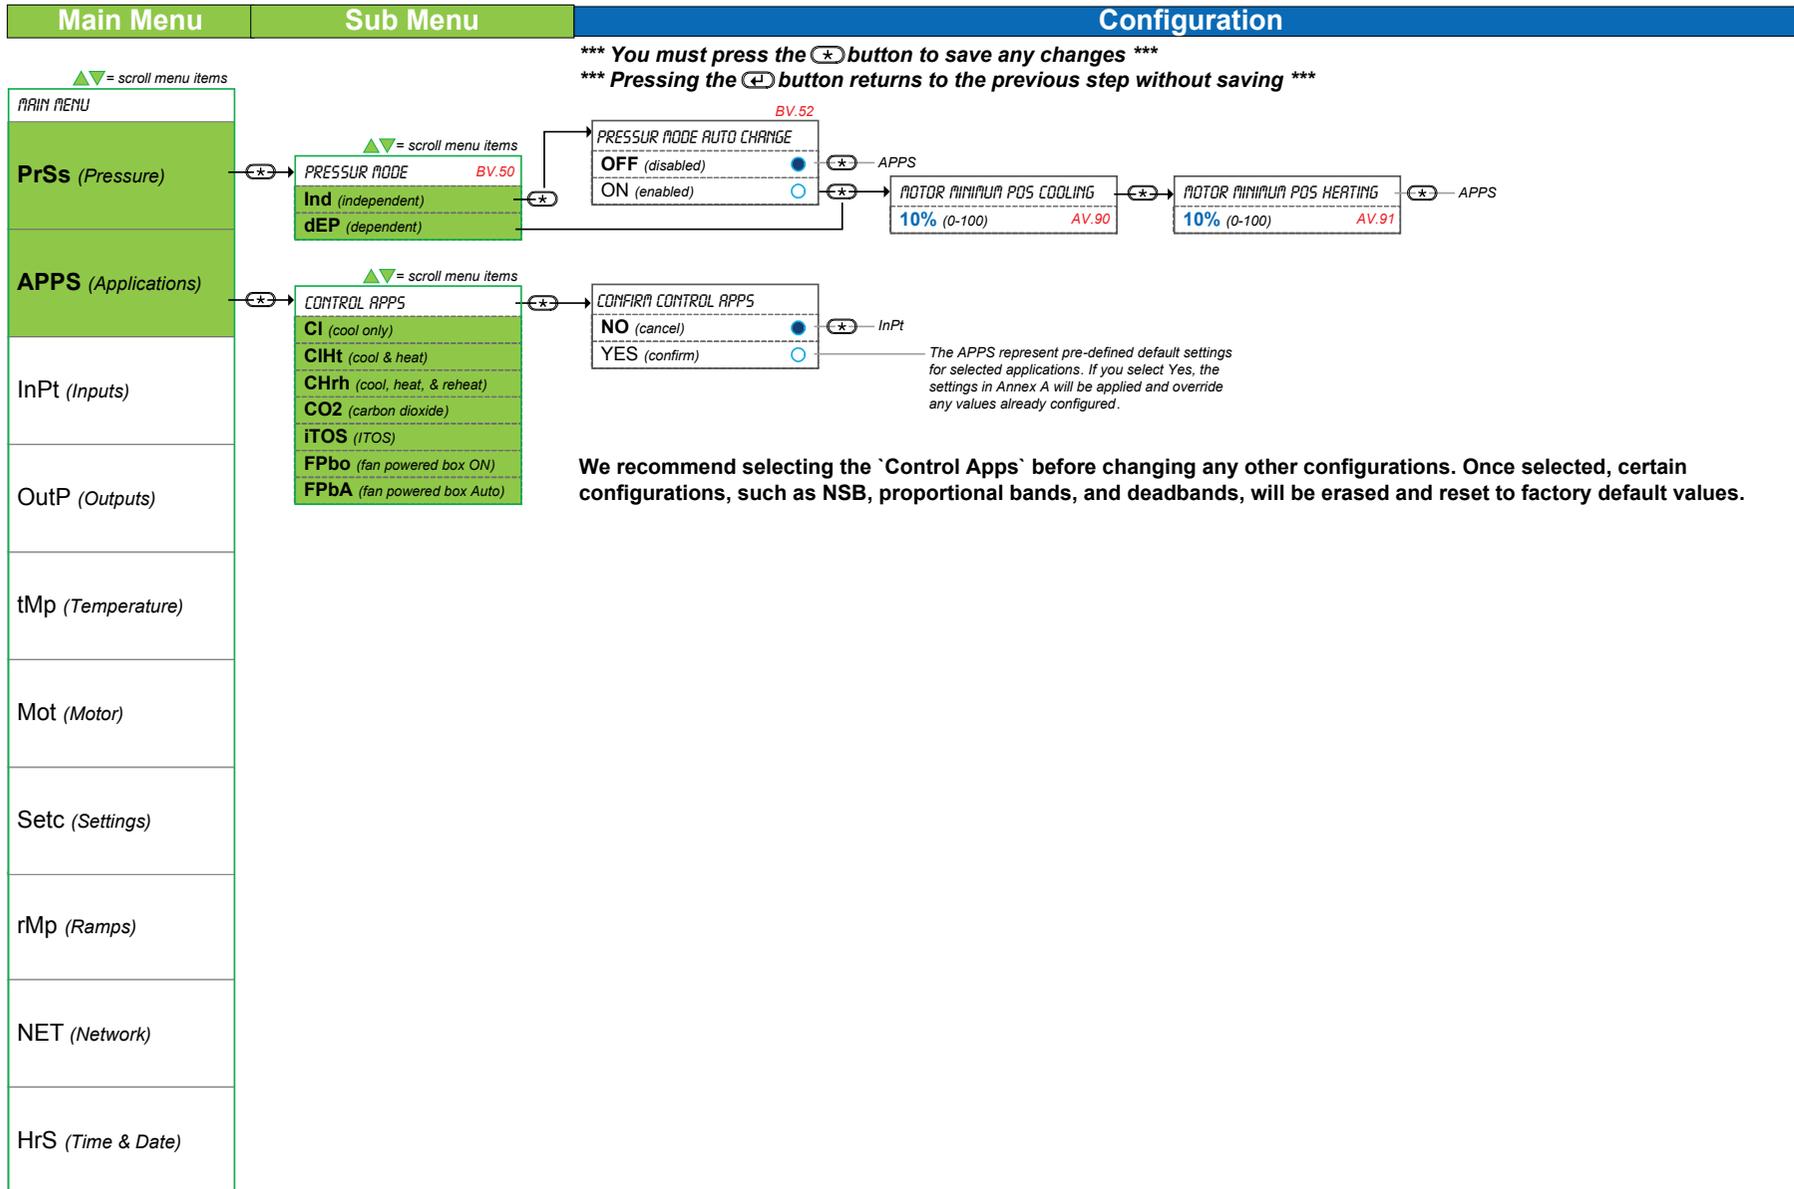

### Inputs – Menu Overview (2 of 6)

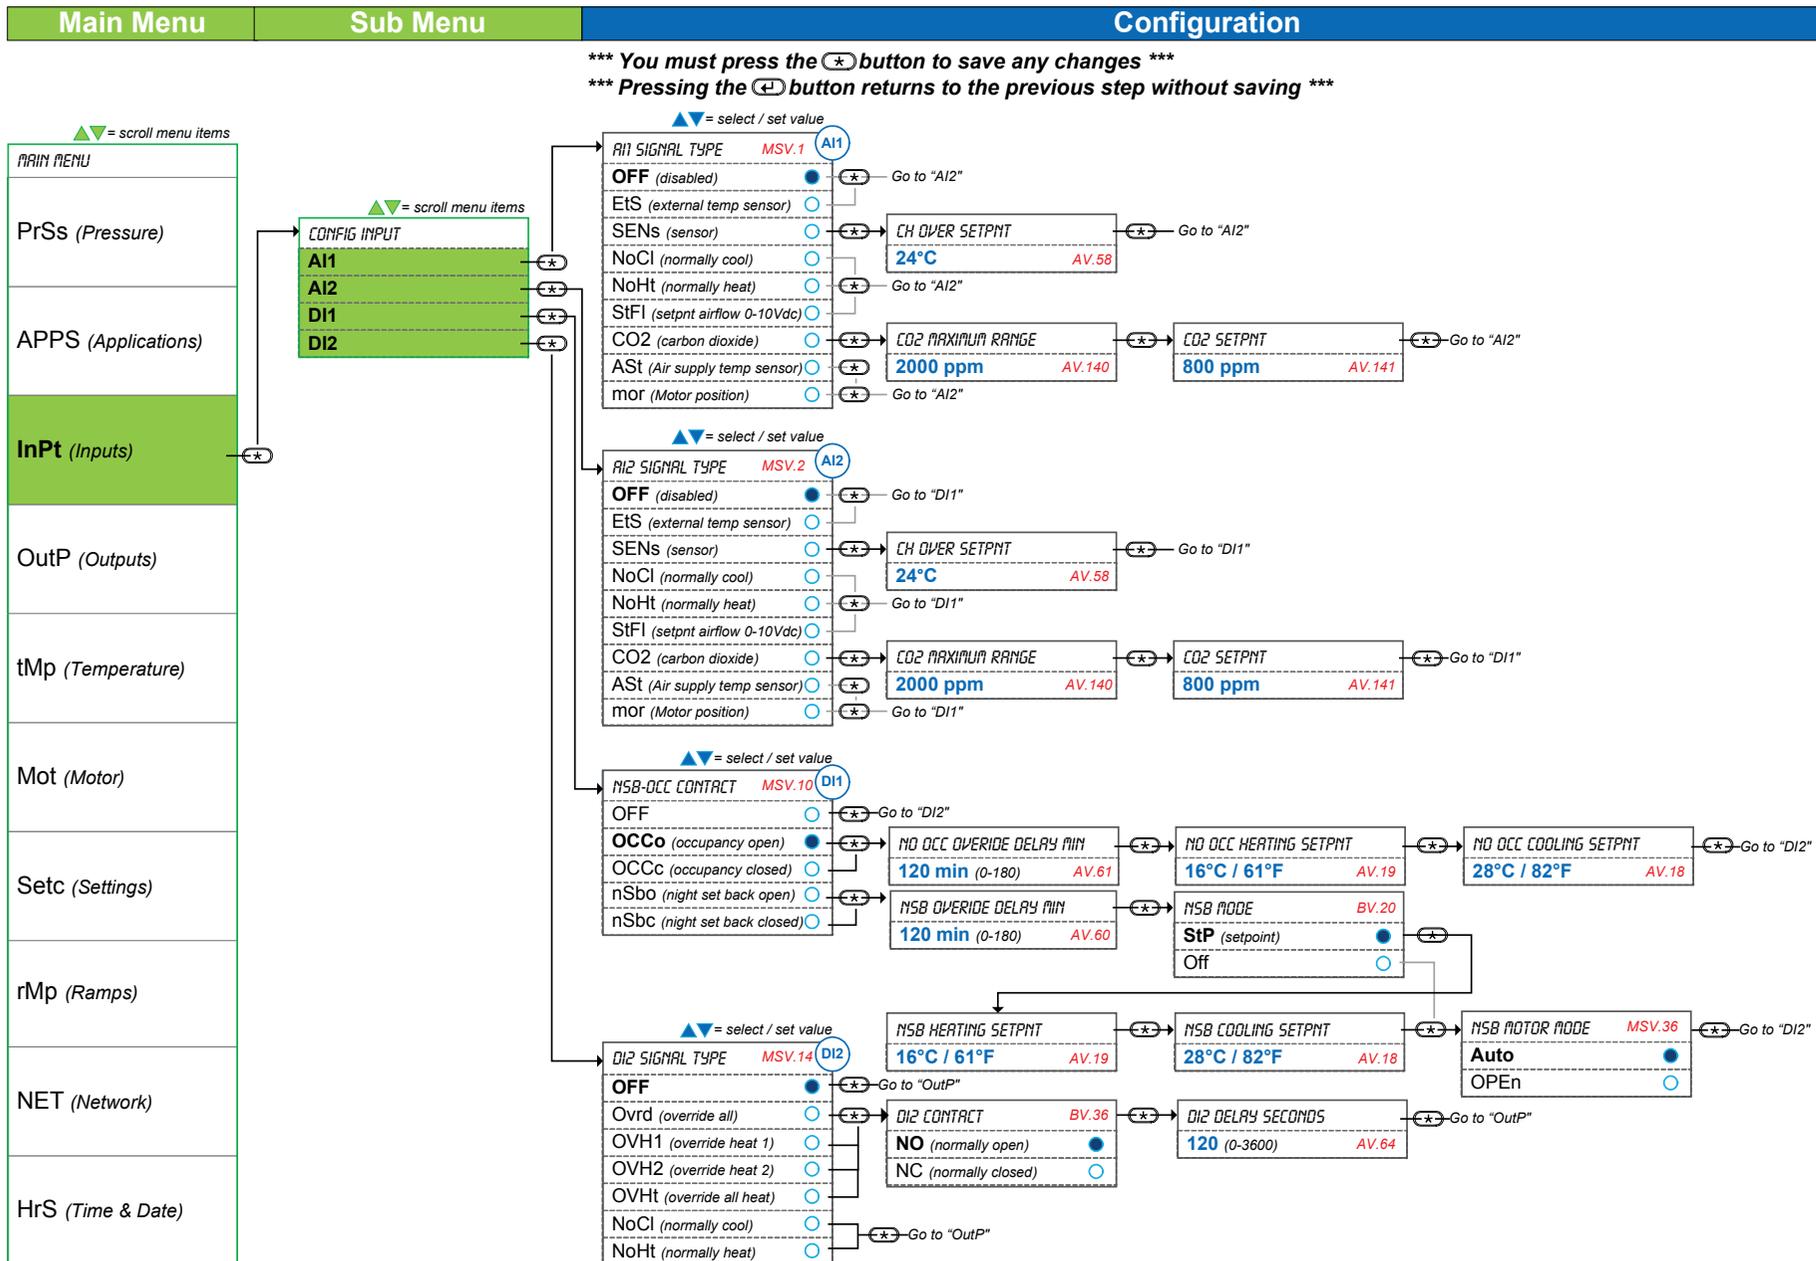


### TRIAC Outputs – Menu Overview (3 of 6)

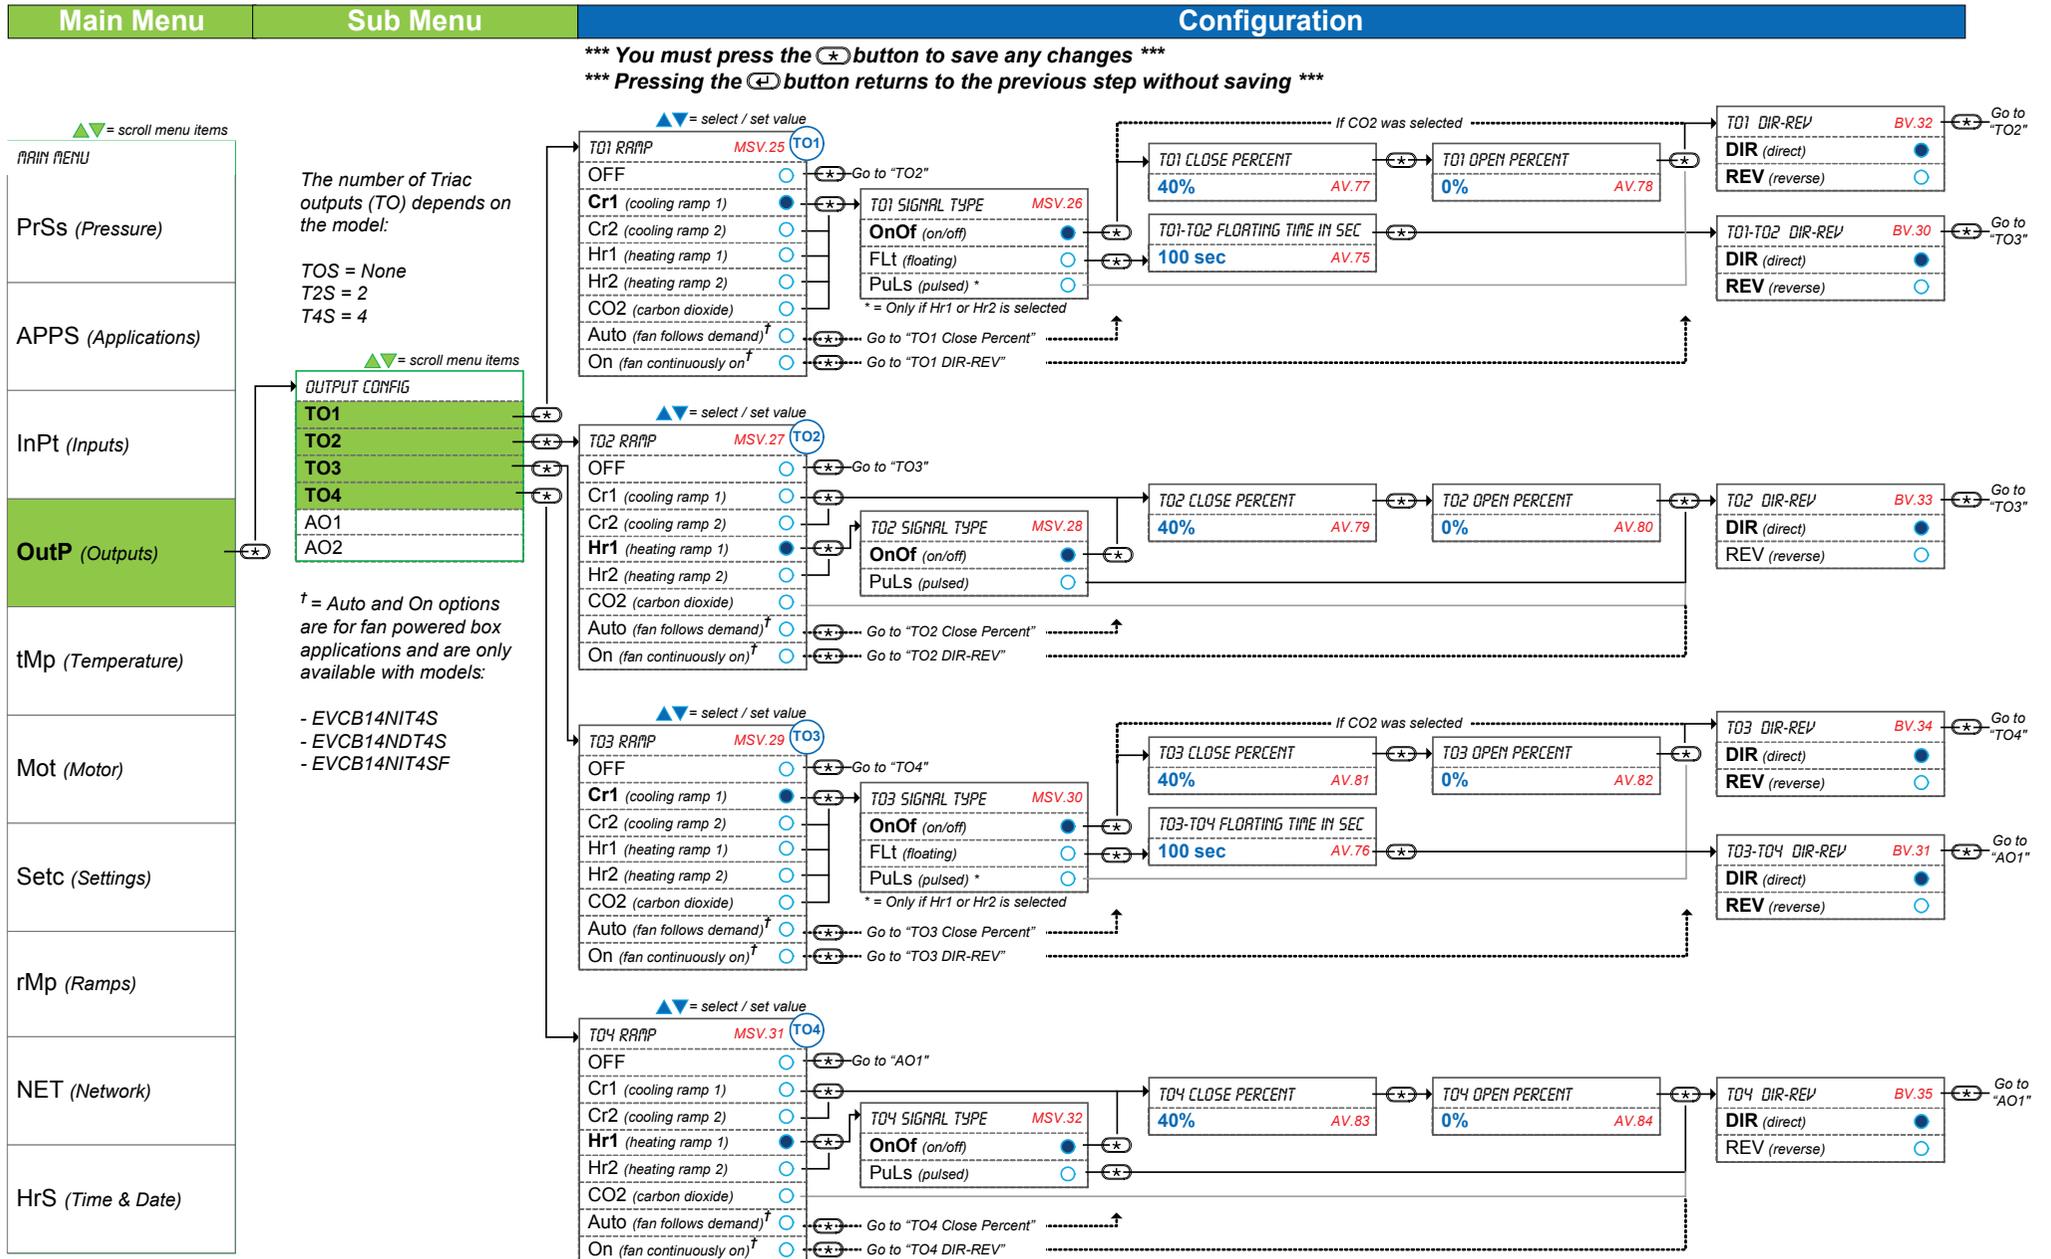


### Analog Outputs – Menu Overview (4 of 6)

Main Menu	Sub Menu	Configuration
-----------	----------	---------------

\*\*\* You must press the **(\*)** button to save any changes \*\*\*  
 \*\*\* Pressing the **(↶)** button returns to the previous step without saving \*\*\*

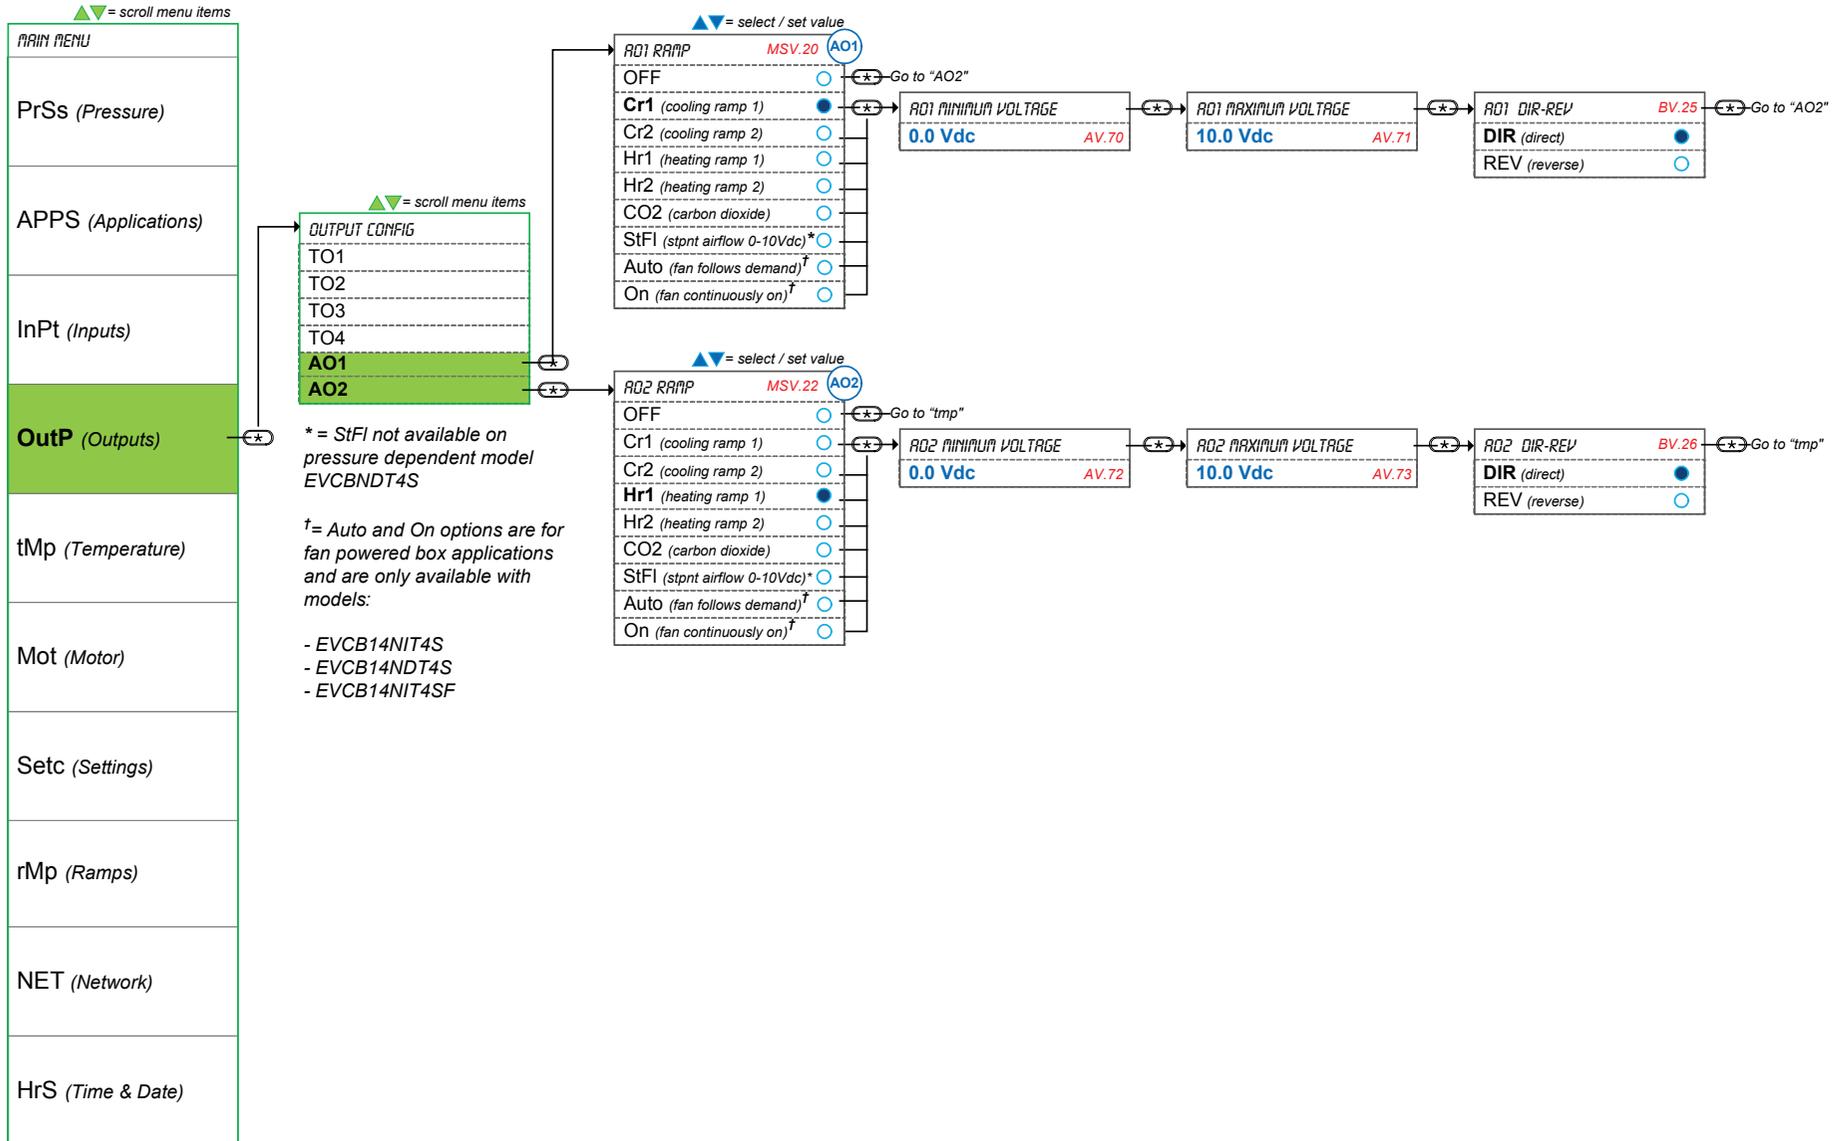


### Settings – Menu Overview (5 of 6)

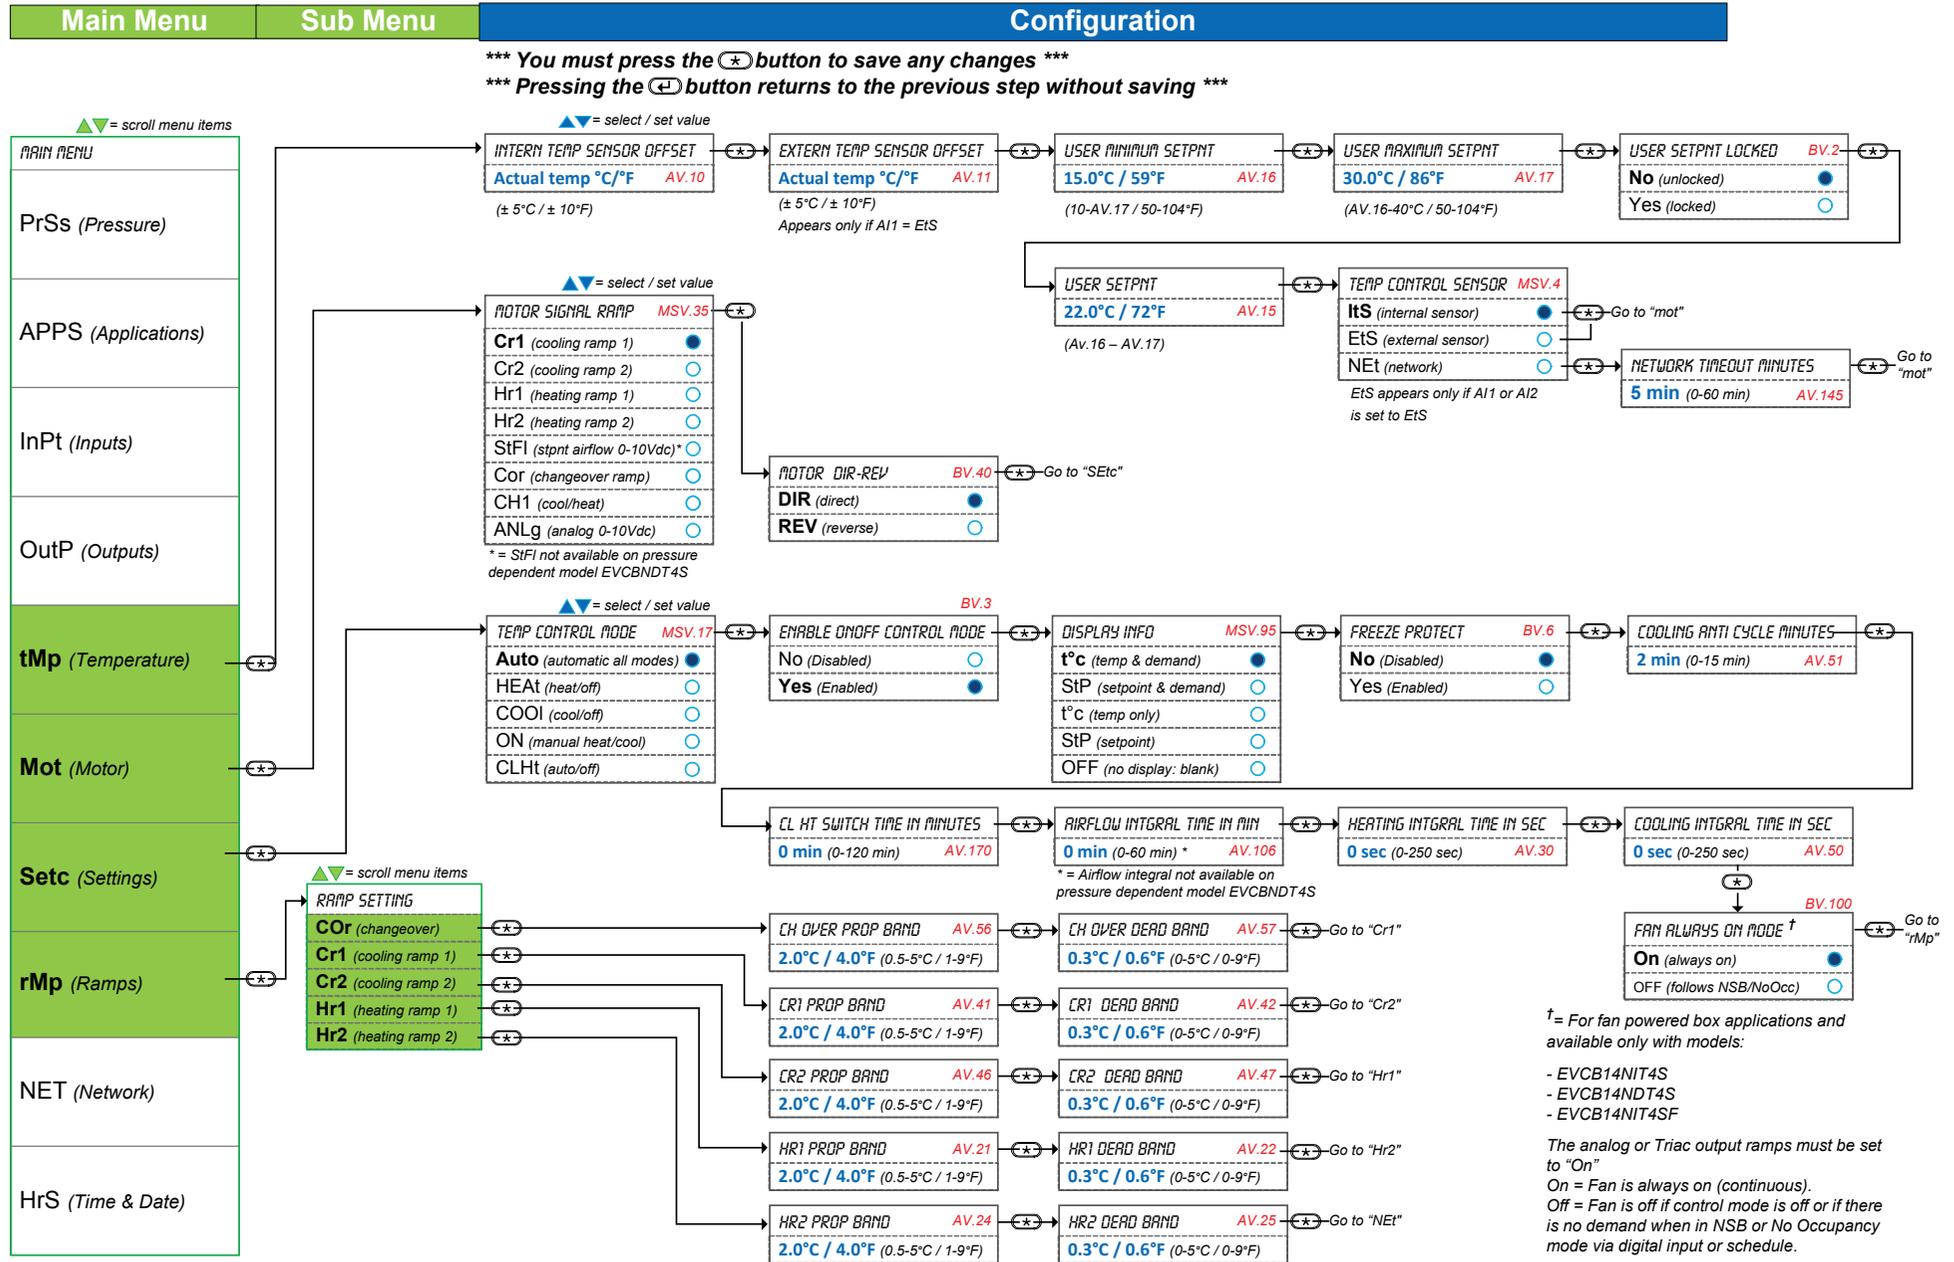

### Settings – Menu Overview (6 of 6)

Main Menu	Sub Menu	Configuration
-----------	----------	---------------

\*\*\* You must press the **(\*)** button to save any changes \*\*\*  
 \*\*\* Pressing the **(◀)** button returns to the previous step without saving \*\*\*

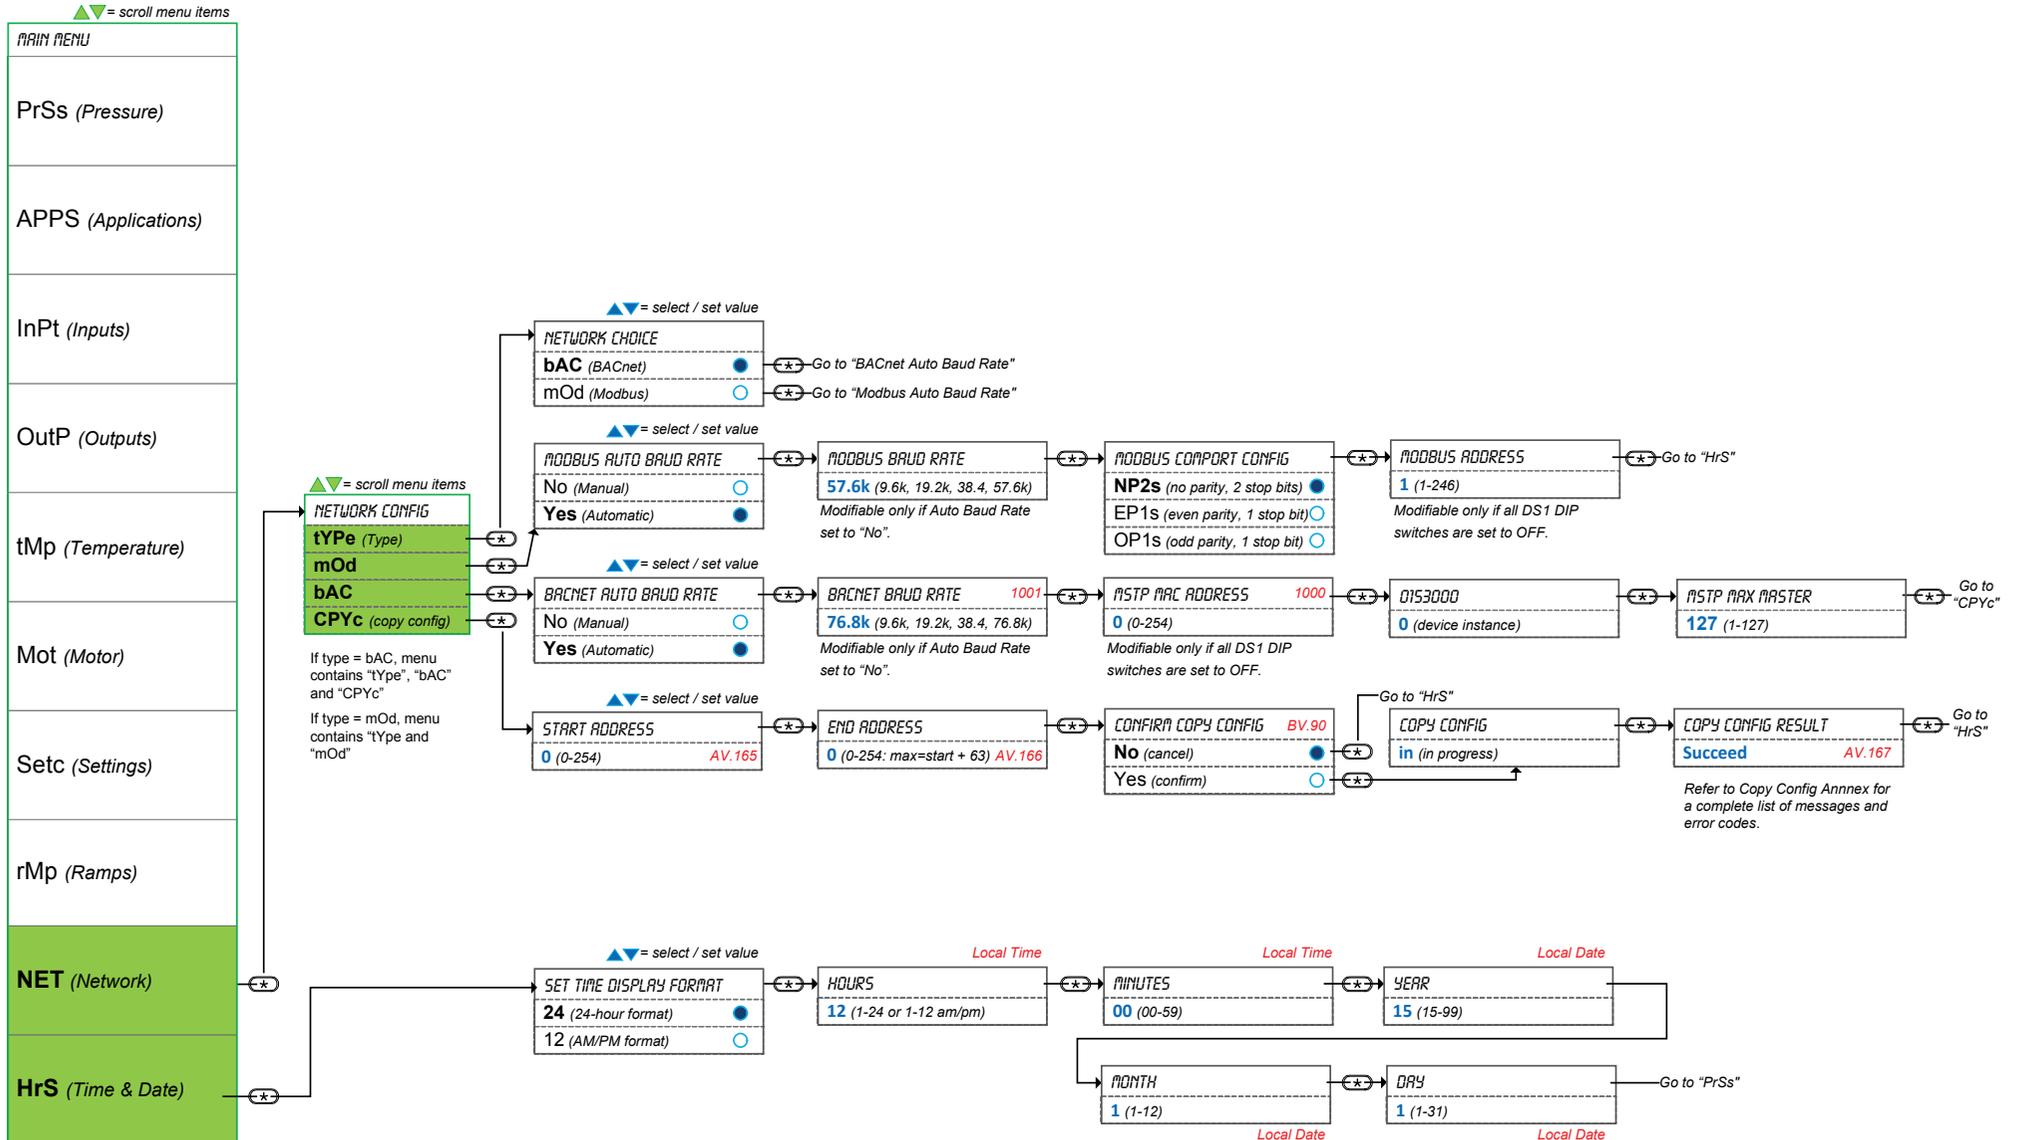







### Menu 757 – Air Balancing Mode

Pressure Independent: models EVCB14NIT0S, EVCB14NIT2S, and EVCB14NIT4S

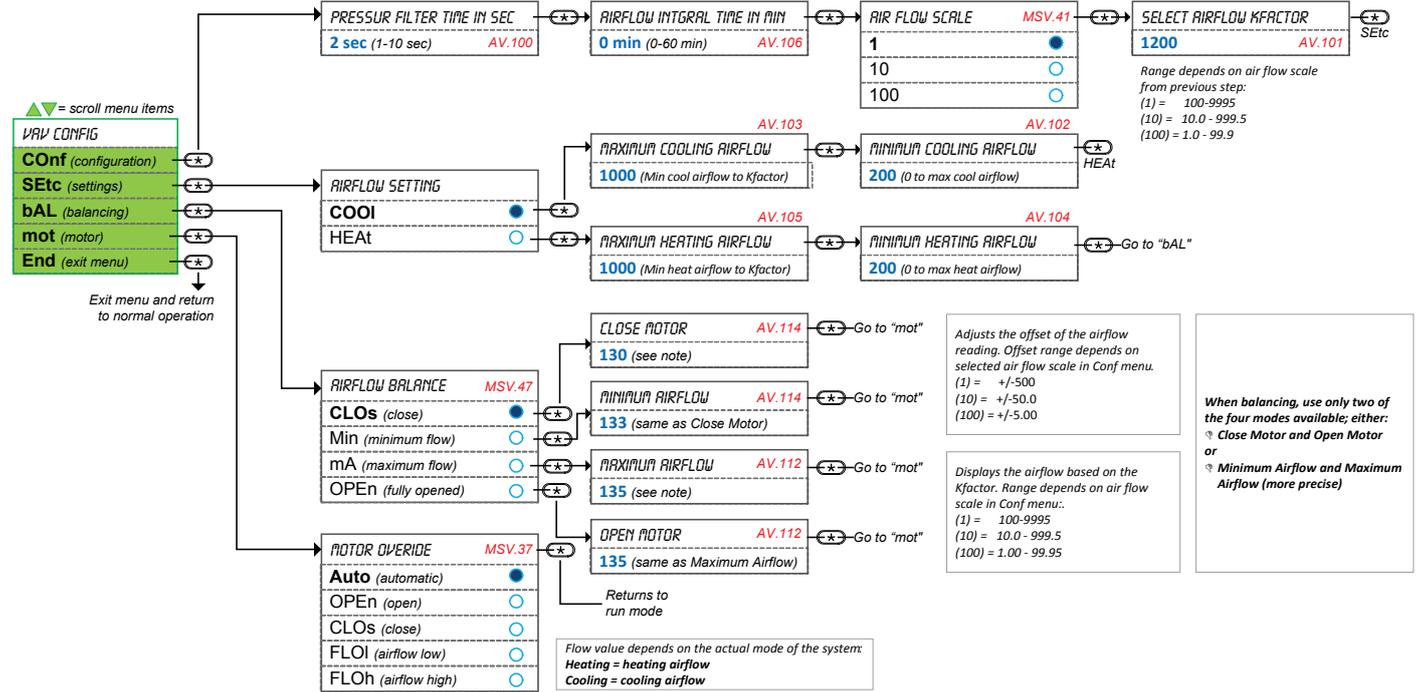

Pressure Dependent: model EVCB14NDT4S or other models if in pressure dependent mode

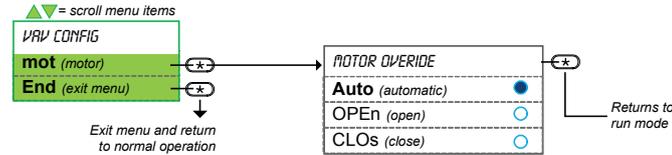

### Reset to Factory Default Settings



This will erase all actual configurations and replace them with the factory default settings.

1. The Mode Selector jumper (JP1) of the thermostat must be set to the "RUN" position (Operation Mode). Refer to Wiring on page 4.
2. During the power up sequence of the controller and thermostat (when the firmware versions are displayed), press and hold both the and .
3. The "ENTER PASSWORD" screen appears. Enter 372 within 1 minute by using the arrow keys to increase or decrease the value and the and buttons to toggle between the digits.
4. Use the arrow buttons to select YES and then press .

## Operation Mode

The Mode Selector Jumper (JP1) of the thermostat must be set to the “RUN” position (Operation Mode). Refer to Wiring on page 3.

## Power Up

Upon power up, the LCD illuminates and all segments appear for 2 sec. The thermostat then displays its current version of the thermostat for 2 seconds followed by the current version of the controller for 2 seconds. Pressing any key on the thermostat illuminates the LCD for 4 seconds.

## Temperature

The thermostat displays the temperature reading for 8 seconds. If the sensor is disconnected or short circuited, then “OFF”, “- - -” and alarm symbol  are displayed. To toggle the temperature scale between °C and °F, press the  button.

## Temperature Setpoint

To display the setpoint, press the  or  key twice. The set point appears for 5 seconds. To adjust the setpoint, press the arrow keys while the temperature is displayed. If the setpoint adjustment has been locked “SETPNT LOCKED”, the lock  symbol appears.

## Air Flow and Air Supply Temperature

Press the  button for 5 seconds and use the arrow keys to view the “AIRFLOW”, “AIRFLOW SETPNT”, and “AIR SUPPLY TEMP”. After 5 seconds without any action, the thermostat returns to operation mode. The air supply temperature appears only if analog input AI1 or AI2 are configured with the AST option.

## Control Mode

To access the Control Mode, press the  button. The Control Mode appears for 5 seconds. Press the  button to scroll through the following control modes. These options can vary depending on the options selected in “Temp Control Mode” and “Enable OnOff Control Mode.”

- Auto (Automatic Cooling or Heating)
- Cooling only (on, with cooling symbol)
- Heating only (on, with heating symbol)
- OFF (if it is not disabled in Programming Mode)


## Night Set Back (NSB) or Occupancy Mode

This function is only available if you set DI1 to **nSb** (Night set back contact) or **Occ** (occupancy mode). If the DI1 contact is triggered, the thermostat enters NSB or No Occupancy Mode (the  symbol appears) and uses the NSB or OCC heating and cooling setpoints.

If not locked, you can override the night set back or no occupancy mode for a predetermined period by pressing any of the 4 buttons. During the override period the  symbol will flash. If the  symbol does not flash, the override period is finished or the night set back or no occupancy override has been locked in programming mode.

## Set Time and Date

1. Ensure that JP1 on the thermostat is set to run.
2. Press and hold the  button for 5 seconds
3. Use the arrow keys to set the desired value. Press the  button to save and got to the next step. Press the  button to go to the previous step without saving.

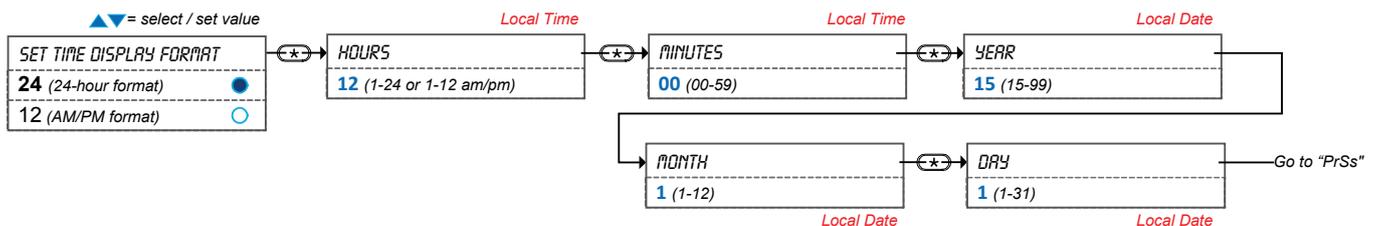



## Annex A: Control Apps

Refer to *Pressure & Applications – Menu Overview (1 of 6)* on page 5 for more information.

Description	CL (cool only)	CLHt (cool/heat)	CHrH (cool/heat/reheat)	CO2 (CO2)	ITOS (ITOS)	FPbo (fan powered ON)	FPbA (fan powered Auto)
Min. Setpoint	<b>20°C (68°F)</b>	<b>20°C (68°F)</b>	<b>20°C (68°F)</b>	<b>20°C (68°F)</b>	15°C (59°F)	15°C (59°F)	15°C (59°F)
Max. Setpoint	<b>28°C (82°F)</b>	<b>28°C (82°F)</b>	<b>28°C (82°F)</b>	<b>28°C (82°F)</b>	30°C (86°F)	30°C (86°F)	30°C (86°F)
Changeover Setpnt	24°C (75°F)	<b>20°C (68°F)</b>	<b>20°C (68°F)</b>	<b>20°C (68°F)</b>	24°C (75°F)	24°C (75°F)	24°C (75°F)
TO1 Ramp	<b>HR1</b>	CR1	<b>HR1</b>	CR1	<b>OFF</b>	<b>HR1</b>	<b>HR1</b>
TO1 Signal Type	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off
TO1 Close Pos.	40%	40%	40%	40%	40%	<b>35%</b>	<b>35%</b>
TO1 Open Pos.	0%	0%	0%	0%	0%	0%	0%
TO2 Ramp	HR1	HR1	HR1	<b>CO2</b>	<b>OFF</b>	HR1	HR1
TO2 Signal Type	<b>Pulse</b>	On/Off	<b>Pulse</b>	On/Off	On/Off	On/Off	On/Off
TO2 Close Pos.	40%	40%	40%	40%	40%	<b>70%</b>	<b>70%</b>
TO2 Open Pos.	0%	0%	0%	0%	0%	<b>35%</b>	<b>35%</b>
TO3 Ramp	<b>HR2</b>	<b>CR2</b>	<b>HR2</b>	<b>HR1</b>	<b>OFF</b>	<b>Fan ON</b>	<b>Fan Auto</b>
TO3 Signal Type	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off
TO3 Close Pos.	40%	40%	40%	40%	40%	40%	40%
TO3 Open Pos.	0%	0%	0%	0%	0%	0%	0%
TO4 Ramp	<b>HR2</b>	<b>HR2</b>	<b>HR2</b>	<b>HR1</b>	<b>OFF</b>	<b>HR1</b>	<b>OFF</b>
TO4 Signal Type	<b>Pulse</b>	On/Off	<b>Pulse</b>	On/Off	On/Off	On/Off	On/Off
TO4 Close Pos.	40%	40%	40%	40%	40%	40%	40%
TO4 Open Pos.	0%	0%	0%	0%	0%	0%	0%
Motor Ramp	CR1	<b>COr</b>	<b>COr</b>	<b>COr</b>	CR1	CR1	<b>COr</b>
AO1 ramp	<b>HR1</b>	CR1	<b>HR1</b>	CR1	<b>HR1</b>	<b>HR1</b>	<b>HR1</b>
AO2 Ramp	<b>HR2</b>	HR1	<b>HR2</b>	HR1	<b>OFF</b>	<b>HR2</b>	<b>Fan Auto</b>
AI1 Input	OFF	<b>SENS</b>	<b>SENS</b>	<b>SENS</b>	OFF	OFF	<b>SENS</b>
AI2 Input	OFF	OFF	OFF	<b>CO2</b>	OFF	OFF	OFF
DI1 Input	<b>nSb.o</b>	<b>nSb.o</b>	<b>nSb.o</b>	Occ.o	Occ.o	<b>nSb.o</b>	<b>nSb.o</b>
Heat Prop Band 2	2°C (4°F)	2°C (4°F)	2°C (4°F)	2°C (4°F)	2°C (4°F)	<b>1°C (2°F)</b>	<b>1°C (2°F)</b>
Heat Deadband 2	<b>1.3°C (2.6°F)</b>	<b>1.3°C (2.6°F)</b>	<b>1.3°C (2.6°F)</b>	<b>1.3°C (2.6°F)</b>	0.3°C (0.6°F)	<b>1.3°C (2.6°F)</b>	<b>1.3°C (2.6°F)</b>
Cool Deadband 2	<b>1.3°C (2.6°F)</b>	<b>1.3°C (2.6°F)</b>	<b>1.3°C (2.6°F)</b>	<b>1.3°C (2.6°F)</b>	0.3°C (0.6°F)	0.3°C (0.6°F)	0.3°C (0.6°F)

## Legend

Grey Text = Standard default value

**Bold Text** = Special default value for selected application

- HR = Heating ramp
- CR = Cooling ramp
- COr = Changeover ramp
- SENS = Changeover temperature sensor
- Fan ON = Fan powered box in continuous mode
- Fan Auto = Fan powered box in automatic mode (follows demand)
- nSb.o = Night Set Back (normally open)
- Occ.o = Occupancy mode (normally open)
  
- TO = Triac output
- AO = Analog output
- AI = Analog input
- DI = Digital input





Recycling at end of life: please return this product to your Neptronic local distributor for recycling. If you need to find the nearest Neptronic authorized distributor, please consult [www.neptronic.com](http://www.neptronic.com).



**neptronic**<sup>®</sup>

400 Lebeau Blvd, Montreal, Qc, H4N 1R6, Canada

[www.neptronic.com](http://www.neptronic.com)

Toll free in North America: 1-800-361-2308

Tel.: (514) 333-1433

Fax: (514) 333-3163

Customer service fax: (514) 333-1091

Monday to Friday: 8:00am to 5:00pm (Eastern time)