



Controller Models

EVCB14NIT0S (0 TRIACS / pressure independent)
EVCB14NIT2S (2 TRIACS / pressure independent)
EVCB14NIT4S (4 TRIACS / pressure independent)
EVCB14NDT4S (4 TRIACS / pressure dependent)
EVCB14NIT0SF (0 TRIACS / independent / feedback)
EVCB14NIT4SF (4 TRIACS / independent / feedback)

TDU Series Digital Room Sensor

TDU00 (Vertical Grey LCD, white enclosure)
TDU30 (Vertical Black LCD, black enclosure)
TDU60 (Vertical Black LCD, white enclosure)

TDU10 (Horizontal Grey LCD, white enclosure)
TDU40 (Horizontal Black LCD, black enclosure)
TDU70 (Horizontal Black LCD, white enclosure)

TRL Series Digital Room Sensor

TRL24 (With temperature sensor)
TRLH24 (With temperature and humidity sensor)
TRLG24 (With temperature and CO₂ sensor)
TRLGH24 (With temperature, CO₂, humidity sensors)
TRL54 (With temperature sensor)



EVCB14NS Series Controller



TDU00 / TDU30 / TDU60 Series



TDU10 / TDU40 / TDU70 Series



TRL24 Series



TRL54 Series

Contents

EVCB14NS Series Controller

Specifications
Mechanical Installation - Actuator
Wiring

Digital Room Sensors

Models
Specifications
Dimensions
Interface
Mounting Instructions

Programming Mode Menus

Accessing the Programming Mode
Navigating the Programming Menus

TRL24/TDU Programming Mode Menus

Pressure and Applications
Inputs - AI1, AI2, DI1, and DI2
TRIAC Outputs - TO1 to TO4
Analog Outputs - AO1 and AO2
Temp, Motor, Settings, and Ramps
Network, Time, Buttons, and Options

TRL54/TDU Programming Mode Menus

Pressure and Applications
Inputs - AI1, AI2, DI1, and DI2
TRIAC Outputs - TO1 to TO4
Analog Outputs - AO1 and AO2
Temp, Motor, Settings, and Ramps
Network, Time, and Buttons

Operation Mode Menus

Menu 372 – Temperature Offset - TRL24/TDU and TRL54
Menu 637 – Network Settings - TRL24 and TDU
Menu 757 – Airflow Balance Mode - TRL24 and TDU
Menu 637 – Network Settings - TRL54
Menu 757 – Airflow Balance Mode - TRL54

Reset to Factory Default Settings

Runtime User Interfaces - Digital Sensors

TRL24 – Runtime User Interface
TRL54 – Runtime User Interface
TDU10/TDU40/TDU70 Series – Runtime User Interface
TDU00/TDU30/TDU60 Series – Runtime User Interface

Operation Mode Settings

Annex A: Control Apps

EVCB14NS Series Controller

Overview

The EVCB14NS Series is a combination controller and digital room sensor with support for networked communications via the BACnet MS/TP or Modbus protocol. The EVCB Series controller is compatible with both TRL and TDU series digital room sensors. The Networkable VAV Controller is designed for simple and accurate control of any variable air volume box in a number of zone control configurations. Its field configurable algorithms enable versatile implementation of required control sequences.

Features

- Field configured VAV algorithms, inputs and outputs
- Built-in actuator, 70 lb-in
- On board differential pressure sensor (select models)
- Select direction on analog outputs
- Simple air balancing and commissioning via digital room sensor
- Automatically sets operation mode to pressure dependent or independent based on the presence of air flow
- Configurable PI (Proportional-Integral) function
- Independent, configurable proportional control band and dead band per ramp
- Selectable internal or external temperature sensor (10KΩ)
- Activate output with CO2 sensor from TRL/TDU or external sensor input
- Changeover by contact or external temperature sensor
- Internal and external temperature sensor calibration
- Optional potentiometer feedback for increased precision of actuator position
- Freeze protection
- Removable, raising clamp, non-strip terminals

Operational Features

- Backlit LCD with simple icon and text driven menus
- Select digital room sensor's default display
- Network service port via on-board mini USB connector
- Manual night setback or no occupancy override
- Multi level lockable access menu and setpoint
- Selectable Fahrenheit or Celsius scale
- 3-wire connection to controller and 4 push buttons

Applications

- Single duct, cooling only
- Single duct cooling and/or heating
- Up to 4 stage reheat and/or cool
- Up to 4 On/Off heat and/or cool
- Up to 4 time proportioned (TPM) heat or reheat
- Up to 2 analog (0-10Vdc) reheat and/or cool
- Up to 2 floating heat and/or cool
- Pressure dependent or pressure independent
- With or without auto changeover
- Supply/exhaust (requires an additional EVC)

Network Communication

- BACnet MS/TP or Modbus communication port
- Select MAC address via DIP switch or via network
- Automatic baud rate detection

BACnet MS/TP®

- Automatic device instance configuration
- Copy & broadcast configuration via digital room sensor menu or via BACnet to other controllers
- BACnet scheduler
- Firmware upgradeable via BACnet
- Support COV (change of value)

Modbus


- Modbus @ 9600, 19200, 38400 or 57600 bps
- RTU Slave, 8 bits (configurable parity and stop bits)
- Connects to any Modbus master



Specifications

| Description | | EVCB14NS Series Controller |
|---------------------------------|---|----------------------------|
| Torque | 70 in.lb. [8 Nm] at rated voltage | |
| Power consumption | 10 VA max | |
| Running time through 90° | 90 seconds | |
| Power supply | 22 to 26 Vac 50/60 Hz | |
| Inputs | 2 Universal inputs (Thermistor 10KΩ Type 3, digital 24Vac/dry contact, or 0-10Vdc) 2 digital inputs | |
| Outputs | 2 analog outputs (0-10 Vdc or 2-10Vdc; selectable) Up to 4 TRIAC outputs 24 Vac, 500mA max thermal fuse in series with each TRIAC output (on/off, pulse, or 2 floating outputs) | |
| Real Time Clock | Real-time clock (RTC) with super capacitor backup (approximately 3 days) | |
| BACnet | BACnet® MS/TP @ 9600, 19200, 38400 or 76800 bps (B-ASC) | |
| Modbus | Modbus RTU slave @ 9600, 19200, 38400 or 57600. Selectable parity and stop bit configuration: No parity, 2 stop bits Even parity, 1 stop bit Odd parity, 1 stop bit | |
| Electrical connection | Terminal Type: 22~12AWG pluggable rising clamp screw terminal blocks. Power Wiring: Insulated 2 core 0.8 mm ² [18 AWG] minimum power cable. Digital Room Sensor Wiring: Insulated 3 core multi-strand 22 or 24 AWG cable. Maximum 50ft (15m) between controller and digital room sensor. Communication Wiring: Low capacitance, EIA RS-485, 22 or 24 AWG shielded twisted pair multi-strand cables (Belden 9841 or equivalent). | |
| Operating temperature | 0°C to 50°C [32°F to 122°F] | |
| Storage temperature | -30°C to 50°C [-22°F to 122°F] | |
| Relative Humidity | 5 to 95% non-condensing | |
| Weight | 1.26 kg. [2.8 lb] | |

EVC with a built-in 70 in. lb. Actuator

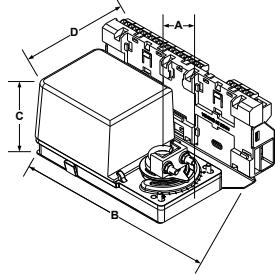

Dimensions

A = 1.50" | 39mm
 B = 7.25" | 185mm
 C = 3.25" | 83mm
 D = 5.50" | 140mm

Mechanical Installation - Actuator

- Manually close the damper blades and position the actuator to 0° or 90°.
- Slide the actuator onto the shaft.
- Tighten the nuts on the "U" bolt to the shaft with an 8mm wrench to a torque of 60 in-lb [6.7 Nm].
- Slide the mounting bracket under the actuator. Ensure free movement of the slot at the base of the actuator. Place the bracket pin at mid distance of the slot.
- Affix the bracket to the ductwork with #8 self-tapping screws.




Do not press the clutch when the actuator is powered.



The actuator performs an auto-stroke on power up.
When changing the actuator adjustment screws, cycle power to initiate the auto-stroke.


EVC with a built-in 70 in. lb. Actuator

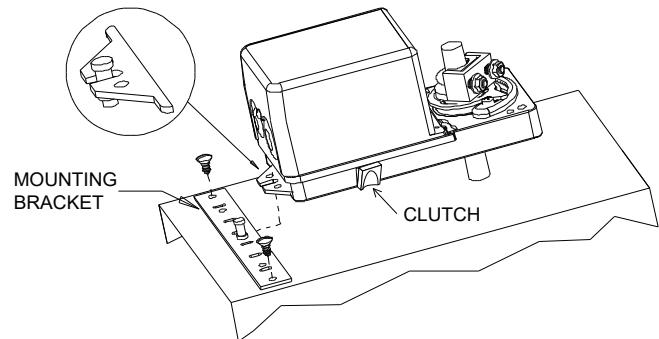



Wiring

We strongly recommend that all Neptronic products be wired to a separate grounded transformer and that transformer shall service only Neptronic products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.

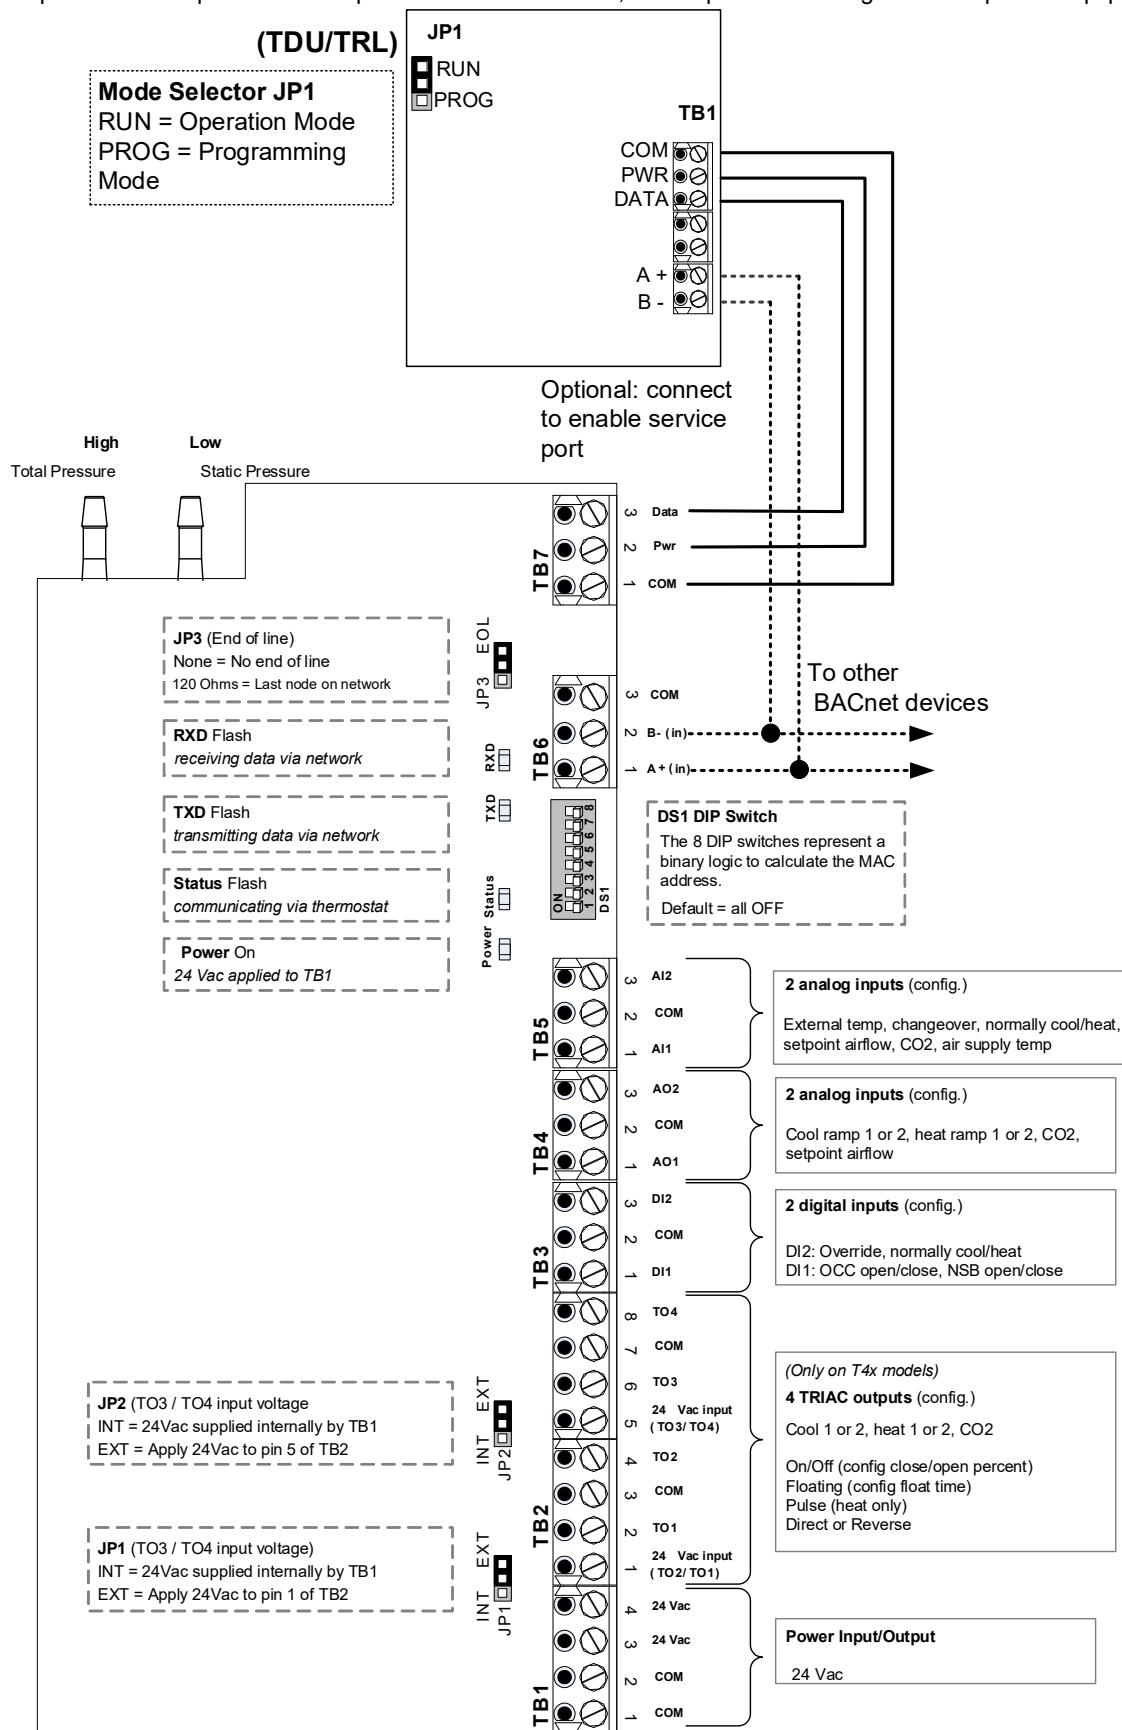

**BACnet or Modbus Address DIP Switch (DS1)**

MAC address for communication, are selectable by DIP switch using binary logic. If you do not change device instance in program mode, it will be automatically modified according to the MAC address.



Note: Avoid using addresses above 246 when selecting Modbus MAC address.

| MAC Address | DS.1 = 1 | DS.2 = 2 | DS.3 = 4 | DS.4 = 8 | DS.5 = 16 | DS.6 = 32 | DS.7 = 64 | DS.8 = 128 | Default Device Instance |
|-------------|----------|----------|----------|----------|-----------|-----------|-----------|------------|-------------------------|
| 0 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | 153000 |
| 1 | ON | OFF | OFF | OFF | OFF | OFF | OFF | OFF | 153001 |
| 2 | OFF | ON | OFF | OFF | OFF | OFF | OFF | OFF | 153002 |
| 3 | ON | ON | OFF | OFF | OFF | OFF | OFF | OFF | 153003 |
| 4 | OFF | OFF | ON | OFF | OFF | OFF | OFF | OFF | 153004 |
| ... | ... | ... | ... | ... | ... | ... | ... | ... | ... |
| 126 | OFF | ON | ON | ON | ON | ON | ON | OFF | 153126 |
| 127 | ON | ON | ON | ON | ON | ON | ON | OFF | 153127 |

* Slave addresses available by setting DS.8 to ON



Digital Room Sensors

Models

| Model # | Temp | RH | CO ₂ | PIR | VOC |
|-----------|------|----|-----------------|-----|-----|
| TDU00-100 | • | | | | |
| TDU30-100 | | | | | |
| TDU60-100 | | | | | |
| TDU00-101 | • | • | | | |
| TDU30-101 | | | | | |
| TDU60-101 | | | | | |
| TDU00-102 | • | • | • | | |
| TDU30-102 | | | | | |
| TDU60-102 | | | | | |
| TDU00-103 | • | | • | | |
| TDU30-103 | | | | | |
| TDU60-103 | | | | | |
| TDU00-104 | • | | | • | |
| TDU30-104 | | | | | |
| TDU60-104 | | | | | |
| TDU00-105 | • | • | | • | |
| TDU30-105 | | | | | |
| TDU60-105 | | | | | |
| TDU00-106 | • | • | • | | • |
| TDU30-106 | | | | | |
| TDU60-106 | | | | | |
| TDU00-107 | • | • | • | • | • |
| TDU30-107 | | | | | |
| TDU60-107 | | | | | |
| TDU00-108 | • | • | • | • | |
| TDU30-108 | | | | | |
| TDU60-108 | | | | | |



TDU00 Series



TDU30 Series



TDU60 Series

| Model # | Temp | RH | CO ₂ |
|-----------|------|----|-----------------|
| TDU10-100 | • | | |
| TDU40-100 | | | |
| TDU70-100 | | | |
| TDU10-101 | • | • | |
| TDU40-101 | | | |
| TDU70-101 | | | |
| TDU10-102 | • | • | • |
| TDU40-102 | | | |
| TDU70-102 | | | |
| TDU10-103 | • | | • |
| TDU40-103 | | | |
| TDU70-103 | | | |



TDU10 Series



TDU40 Series



TDU70 Series

| Model # | Type | Temp | RH | CO ₂ |
|---------|-------|------|----|-----------------|
| TRL24 | 2 x 4 | • | | |
| TRLG24 | 2 x 4 | • | | • |
| TRLH24 | 2 x 4 | • | • | |
| TRLGH24 | 2 x 4 | • | • | • |
| TRL54 | 3 x 3 | • | | |




TRL24 Series



TRL54




Specifications

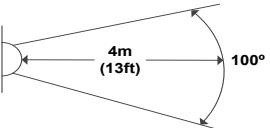
| Description | | TRL24, TRL54, and TDU Series |
|--|---|------------------------------|
| Temperature Sensor (TRL24, TRL54, and TDU) | | |
| Setpoint range | 10°C to 40°C [50°F to 104°F] | |
| Control accuracy | Temperature: $\pm 0.4^\circ\text{C}$ [0.8°F] | |
| Display resolution | $\pm 0.1^\circ\text{C}$ [0.2°F] | |
| Humidity Sensor (TRLH24, TRLGH24, and TDU models with Humidity Sensors) | | |
| Sensor range | 5 to 95%RH | |
| Display resolution | 0.1% | |
| CO₂ Sensor (TRLG24, TRLGH24, and TDU models with CO₂ Sensors) | | |
| Operating principle | Self-calibrating, Non-Dispersive Infrared (NDIR) | |
| Sensor Range | 0 to 2000 ppm | |
| Setpoint range | 100 to 2000 ppm | |
| Accuracy | $\pm 30 \text{ ppm} \pm 3\% \text{ of reading}$ | |
| Response time | 2 minutes by 90% | |
| Display resolution | 1 ppm | |
| PIR Motion Sensor (TDU00 / TDU 30 / TDU60 models with PIR Sensor) | | |
| Operating Principle | Passive Infrared (PIR) | |
| Detection Angle | 100° | |
| Detection Distance | 4m [13ft] | |
| Detection Area |  | |
| VOC Sensor (TDU00 / TDU30 / TDU60 models with VOC Sensor) | | |
| Operating Principle | Self-calibrating, Non-Dispersive Infrared (NDIR) | |
| Sensor Range | 0-1000 ppb isobutylene equivalent tVOCs | |
| Response Time | <5 seconds for tVOC | |
| Start up Time | 15 minutes | |
| Other | | |
| Terminal Type | TRL models: 28~14 AWG pluggable screw terminals TDU00/30/60 models without CO ₂ : 22~18 AWG pluggable push-button terminals TDU00/30/60 models with CO ₂ : 20~14 AWG pluggable rising cage clamp screw terminals TDU10/40/70 models: 26~14 AWG pluggable rising cage clamp screw terminals | |
| Electrical connection | Digital Room Sensor Wiring: Insulated 3 core multi-strand 22 or 24 AWG cable. Maximum 50ft (15m) between controller and digital room sensor. Communication Wiring: Low capacitance, EIA RS-485, 22 or 24 AWG shielded twisted pair multi-strand cables (Belden 9841 or equivalent). | |
| Network service port | Mini USB connector | |
| Power supply | 24Vac | |
| Power consumption | 1VA | |
| Operating temperature | 0°C to 50°C [32°F to 122°F] | |
| Storage temperature | -30°C to 50°C [-22°F to 122°F] | |
| Relative humidity | 5 to 95 % noncondensing | |
| Enclosure protection | IP 30 (EN 60529) | |
| Weight | 120 g. [0.25 lb] | |

**Dimensions**


A = 2.85" | 73mm
B = 4.85" | 123mm
C = 1.00" | 24mm
D = 2.36" | 60mm
E = 3.27" | 83mm

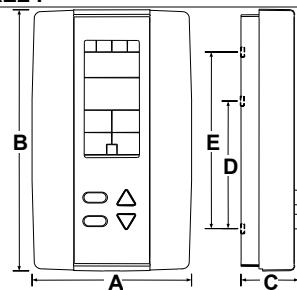TRL24


A = 3.00" | 78mm
B = 3.00" | 78mm
C = 1.00" | 24mm
D = 2.36" | 60mm

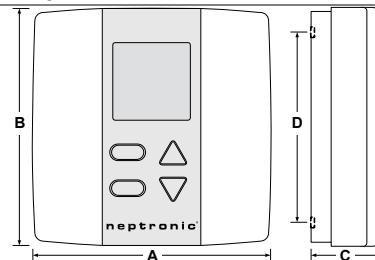TRL54

A = 5.24" | 133mm
B = 2.87" | 73mm
C = 3.74" | 95mm
D = 1.22" | 31mm
E = 0.75" | 19mm
F = 2.00" | 51mm
G = 2.18" | 55mm

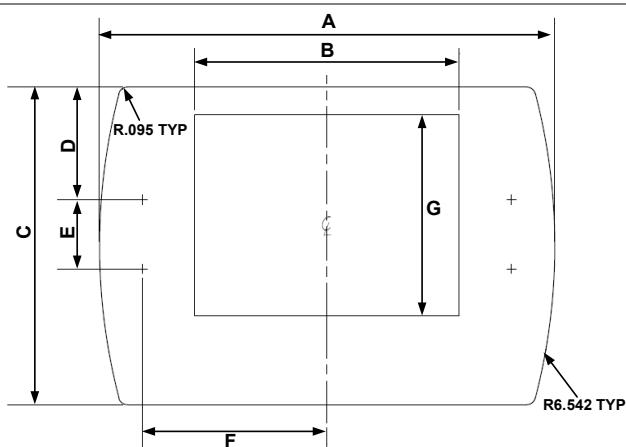TDU10 / TDU40 / TDU70 Series


A = 4.88" | 124mm
B = 3.25" | 83mm
C = 1.75" | 44mm
D = 0.96" | 24mm
E = 2.07" | 53mm
F = 2.36" | 60mm
G = 3.28" | 83mm
H = 0.78" | 20mm (without CO2)
0.95" | 24mm (with CO2)

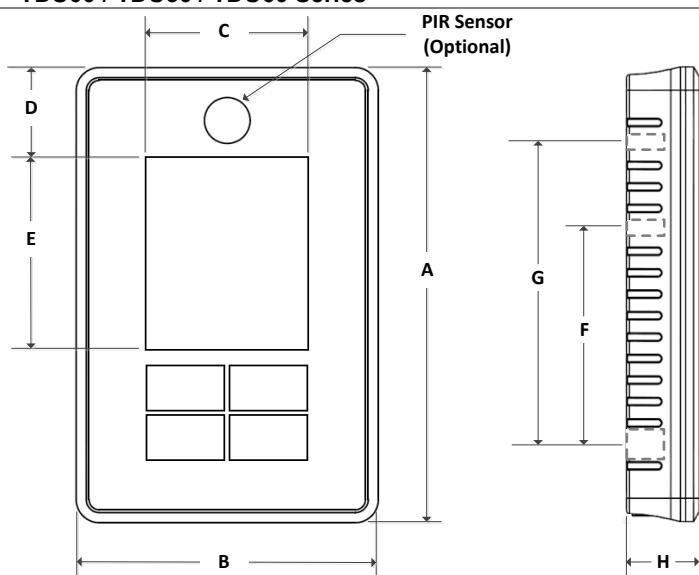TDU00 / TDU30 / TDU60 Series



Interface

TRL24

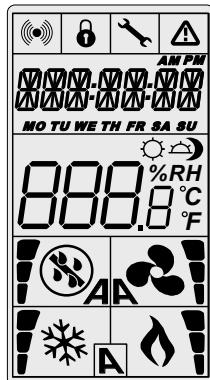

| | | | | | | |
|--|-------------------------|----|--|--|--|--|
| | Cooling A: Automatic | ON | | Communication Status | | Alarm status |
| | Heating A: Automatic | ON | | Menu Locked | | Energy saving mode (NSB or Occupancy) |
| | Fan A: Automatic | ON | | Programming mode (Technician setting) | | Percentage of humidity |


°C or °F
 °C: Celsius scale
 °F: Fahrenheit scale

TRL54




| | | | | | | |
|--|-------------------------|----|-----------|---|--|--------------------|
| | Cooling A: Automatic | ON | | Programming mode (Technician setting) | | Alarm status |
| | Heating A: Automatic | ON | | Menu set-up Lock | | Energy saving mode |
| | Minimum/Maximum | | °C or °F | °C: Celsius scale °F: Fahrenheit scale | | |

TDU10 / TDU40 / TDU70 Series

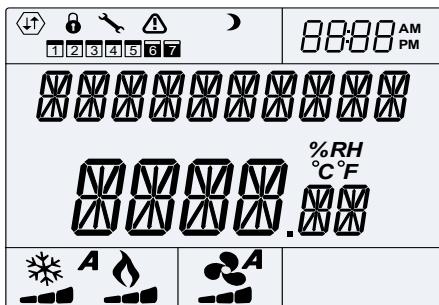

| | | | | | |
|---|-----------------------|--|------------------------------|-----------------|--|
| | Network Communication | | User Lock | | Programming Mode (Technician Setting) |
| | Alarm Status | | Energy Saving Mode (NSB/OCC) | | Schedule |
| | Time | | Parts Per Million | °C °F %RH | °C: Celsius Scale °F: Fahrenheit Scale %RH: Humidity |
| A | Automatic Mode | | Cooling | | Heating |

TDU00 / TDU30 / TDU60 Series

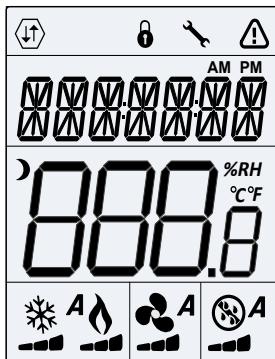

| | | | | | |
|-----------------|-----------------------|---|------------------------------|--|--|
| | Network Communication | | User Lock | | Programming Mode (Technician Setting) |
| | Alarm Status | | Energy Saving Mode (NSB/OCC) | | Time |
| °C °F %RH | Automatic Mode | A | Cooling | | Heating |
| | Heating | | Fan | | |




Mounting Instructions




CAUTION: Remove power to avoid a risk of malfunction.

- A. Remove the captive screw that's holding the base and the front cover of the unit together.
- B. Lift the front cover of the unit to separate it from the base.
- C. Pull all wires through the holes in the base.
- D. Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- E. Mount the control module on the base and secure using the screw.


TRL24

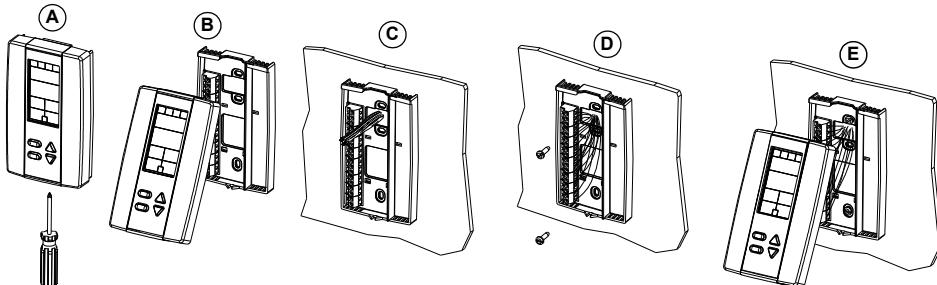


TRL54

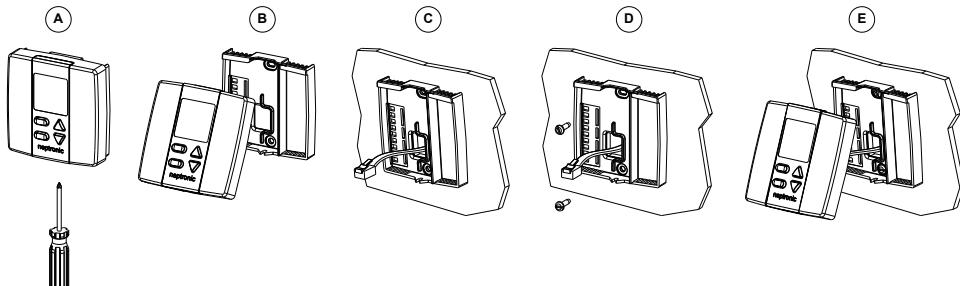

TDU10 / TDU40 / TDU70 Series

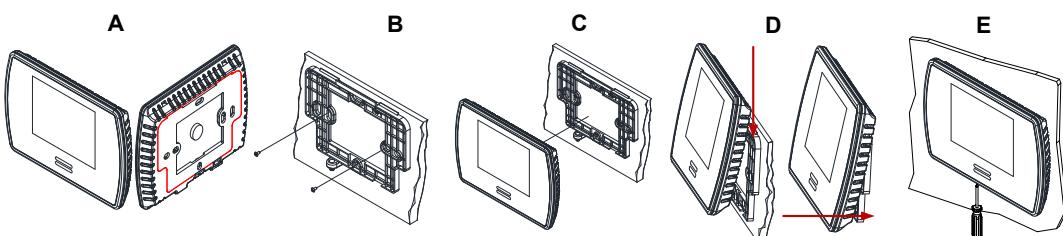

TDU00 / TDU30 / TDU60 Series

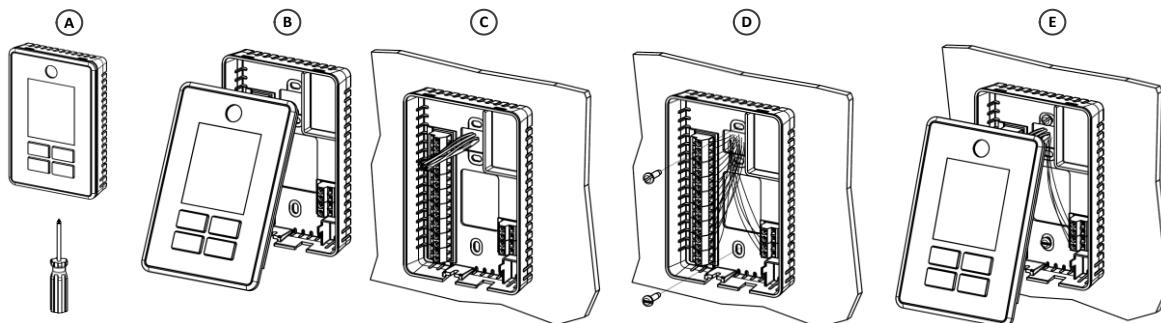

Programming Mode Menus

Accessing the Programming Mode

To access the programming mode, put the TDU/TRL in PROG mode. To do this:

- Remove the backplate of the TDU/TRL from its base
- Place the Mode Selector jumper (JP1) to PROG
- Replace the backplate

After making the changes to programming mode, put the TDU/TRL back in RUN mode to resume normal operation. To do this:

- Remove the backplate of the TDU/TRL from its base
- Place the Mode Selector jumper (JP1) to RUN
- Replace the backplate



*Note: If the **User Setpoint Locked** option in Temperature settings is set to **No** (TRL/TDU menus on page 16 and 22), the setpoint and control mode can be changed by the end user.*

Navigating the Programming Menus

The menu overviews and options are the same for both TRL and TDU digital room sensors. However, the action button or the button used to access the menus and save changes is different in the digital room sensors. Use the following menu overviews with the appropriate action button as per your digital room sensor.


Action Buttons on Digital Room Sensor


| Action Button | Task |
|---------------|---|
| TRL |  Press to access the programming menus and save any changes. |
| TDU |  Press to return to the previous step without saving. |



TRL24 and TDU Series – Pressure & Applications | Menu (1 of 6) | Pressure and Applications

For a description of the default settings for each application refer to [Annex A: Control Apps](#) on page 31.

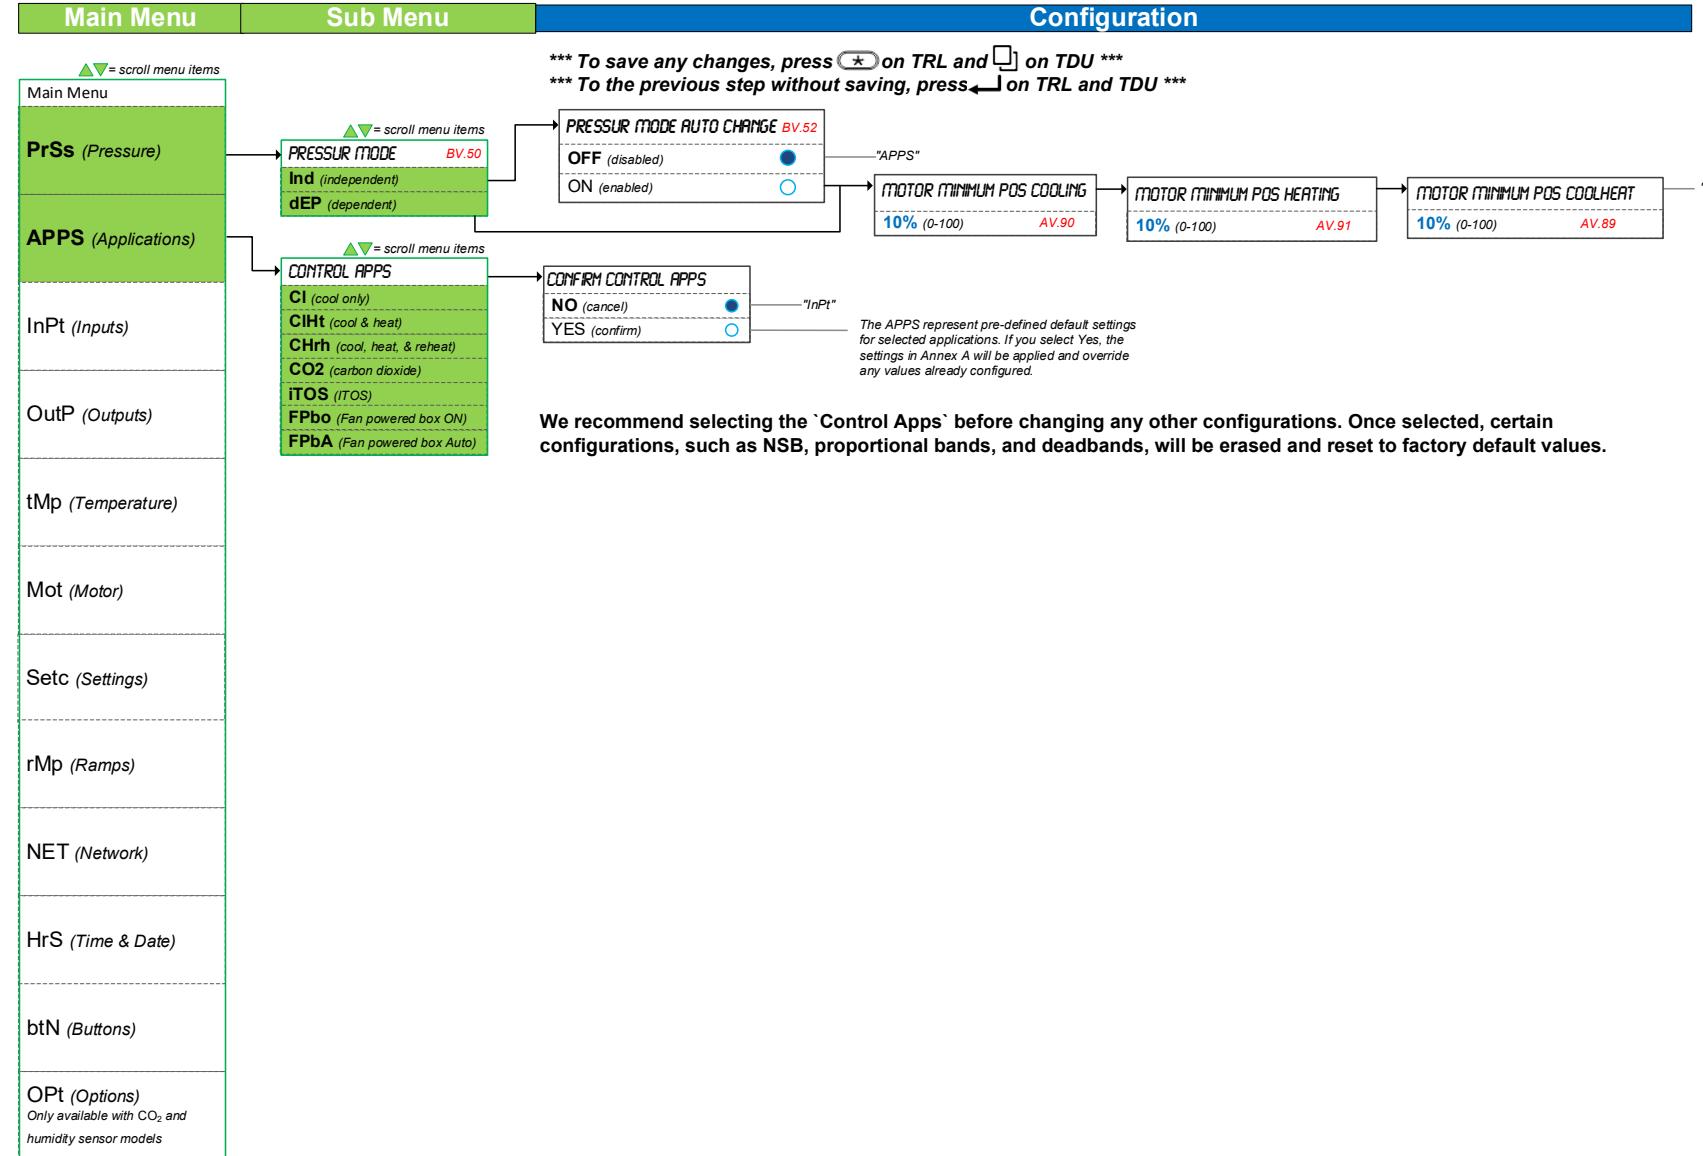

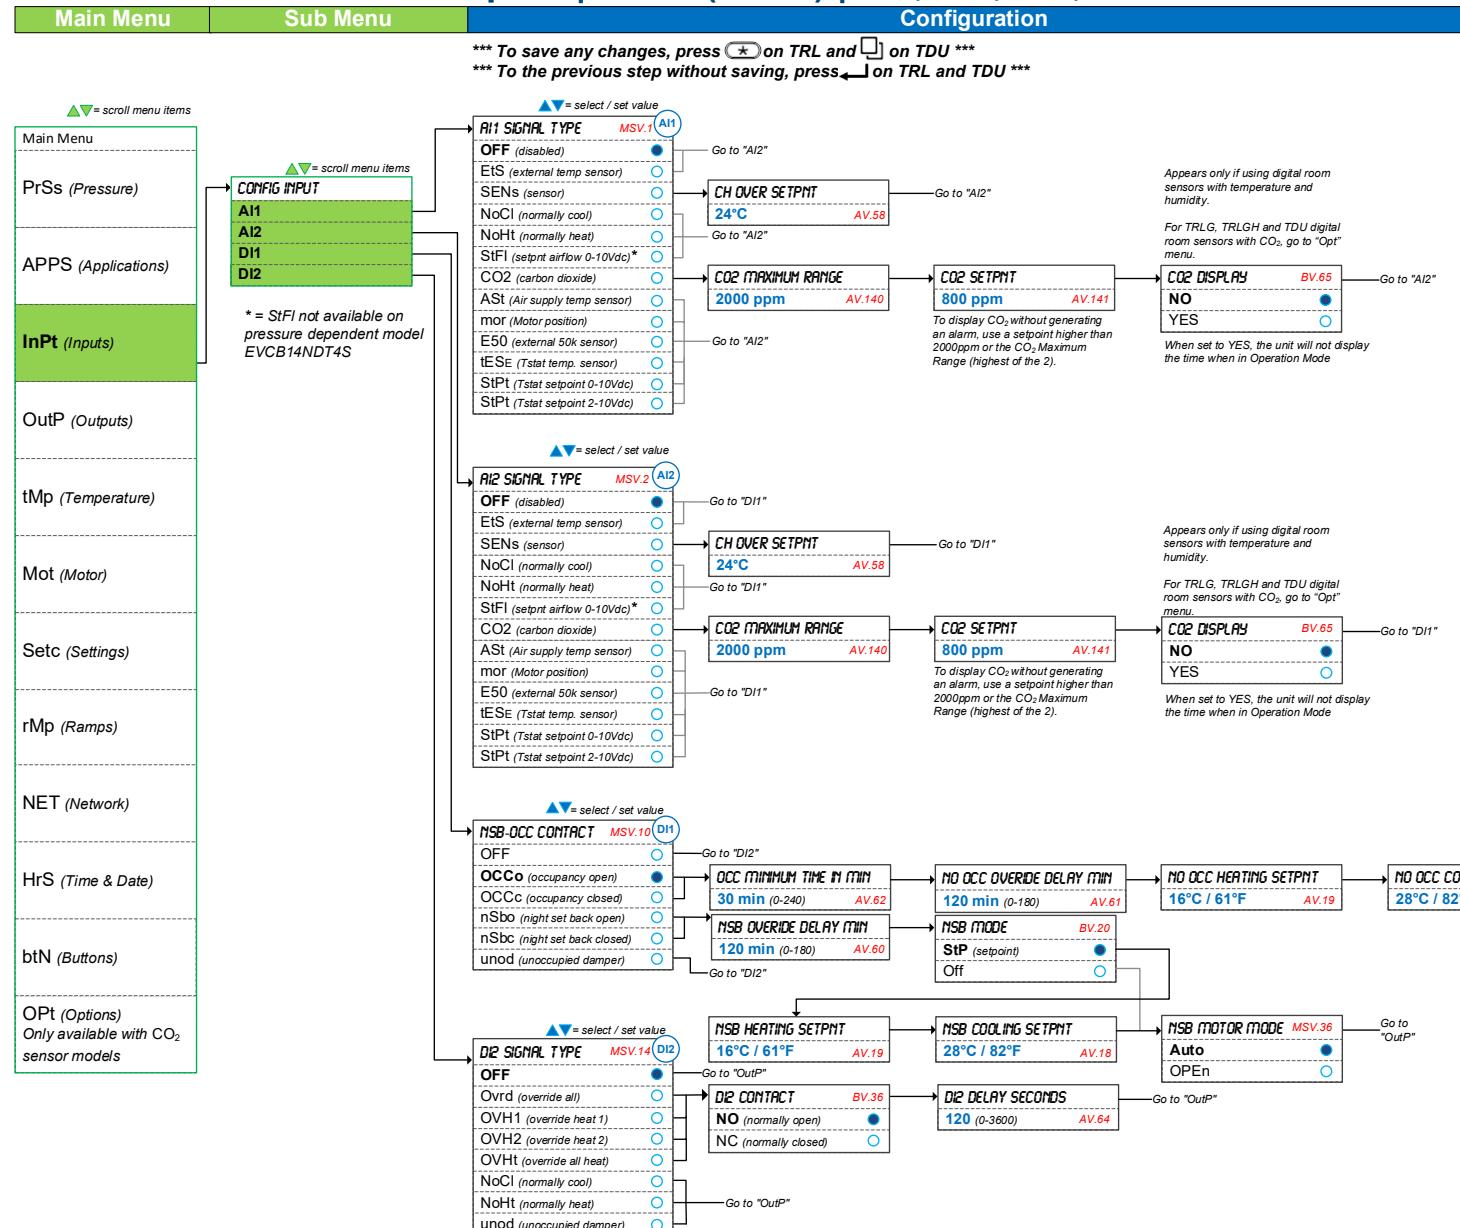TRL24 and TDU Series – Inputs | Menu (2 of 6) | AI1, AI2, DI1, and DI2


TRL24 and TDU Series – TRIAC Outputs | Menu (3 of 6) | *TO1 to TO4*

The configuration menu is organized into three main sections: Main Menu, Sub Menu, and Configuration.

Main Menu:

- Main Menu
- PrSS (Pressure)
- APPS (Applications)
- OutP (Outputs)** (highlighted in green)
- tMp (Temperature)
- Mot (Motor)
- Setc (Settings)
- rMp (Ramps)
- NET (Network)
- HrS (Time & Date)
- btN (Buttons)
- Opt (Options)

Sub Menu:

The number of Triac outputs (TO) depend on the model. S = motor/actuator.

TO(S) = None
T2(S) = 2
T4(S) = 4

Output Config:

- TO1** (highlighted in green)
- TO2
- TO3
- TO4
- AO1
- AO2

TO1 RAMP (MSV.25 TO1)

- OFF
- Cr1 (cooling ramp 1)
- Cr2 (cooling ramp 2)
- Hr1 (heating ramp 1)
- Hr2 (heating ramp 2)
- CO2 (carbon dioxide)
- Auto (fan follows demand)^t
- On (fan continuously on)^t

TO1 SIGNAL TYPE (MSV.26)

- OnOff (on/off)
- FLT (floating)
- PuLs (pulsed) *

TO1 CLOSE PERCENT (40% (15-80%) AV.77)

TO1-T2 FLOATING TIME IN SEC (100 sec (15 to 250 secs) AV.75)

TO1 OPEN PERCENT (0% [0-(TO1 cls pos-4)] AV.78)

TO1 DIR-REV (DIR (direct) REV (reverse))

TO2 RAMP (MSV.27 TO2)

- OFF
- Cr1 (cooling ramp 1)
- Cr2 (cooling ramp 2)
- Hr1 (heating ramp 1)
- Hr2 (heating ramp 2)
- CO2 (carbon dioxide)
- Auto (fan follows demand)^t
- On (fan continuously on)^t

TO2 SIGNAL TYPE (MSV.28)

- OnOff (on/off)
- FLT (floating)
- PuLs (pulsed)

TO2 CLOSE PERCENT (40% (15-80%) AV.79)

TO2 OPEN PERCENT (0% [0-(TO2 cls pos-4)] AV.80)

TO2 DIR-REV (DIR (direct) REV (reverse))

TO3 RAMP (MSV.29 TO3)

- OFF
- Cr1 (cooling ramp 1)
- Cr2 (cooling ramp 2)
- Hr1 (heating ramp 1)
- Hr2 (heating ramp 2)
- CO2 (carbon dioxide)
- Auto (fan follows demand)^t
- On (fan continuously on)^t

TO3 SIGNAL TYPE (MSV.30)

- OnOff (on/off)
- FLT (floating)
- PuLs (pulsed) *

TO3 CLOSE PERCENT (40% (15-80%) AV.81)

TO3-T4 FLOATING TIME IN SEC (100 sec (15 to 250 secs) AV.76)

TO3 OPEN PERCENT (0% [0-(TO3 cls pos-4)] AV.82)

TO3 DIR-REV (DIR (direct) REV (reverse))

TO4 RAMP (MSV.31 TO4)

- OFF
- Cr1 (cooling ramp 1)
- Cr2 (cooling ramp 2)
- Hr1 (heating ramp 1)
- Hr2 (heating ramp 2)
- CO2 (carbon dioxide)
- Auto (fan follows demand)^t
- On (fan continuously on)^t

TO4 SIGNAL TYPE (MSV.32)

- OnOff (on/off)
- FLT (floating)
- PuLs (pulsed)

TO4 CLOSE PERCENT (40% (15-80%) AV.83)

TO4 OPEN PERCENT (0% [0-(TO4 cls pos-4)] AV.84)

TO4 DIR-REV (DIR (direct) REV (reverse))

Legend:

- ▲▼ = select / set value**
- *** To save any changes, press ⌘ on TRL and ⌘ on TDU *****
- *** To the previous step without saving, press ⌘ on TRL and TDU *****
- If CO₂ was selected**
- ^t = Auto and On options are for fan powered box applications and are only available with models:**
- EVCB14NIT4S**
- EVCB14NDT4S**
- EVCB14NIT4SF**

TRL24 and TDU Series – Analog Outputs | Menu (4 of 6) | AO1 and AO2

Main Menu
Sub Menu
Configuration

▲▼ = scroll menu items

Main Menu

PrSS (Pressure)

APPS (Applications)

InPt (Inputs)

OutP (Outputs)

tMp (Temperature)

Mot (Motor)

Setc (Settings)

rMp (Ramps)


NET (Network)


HrS (Time & Date)

btN (Buttons)

OPt (Options)
Only available with CO₂ sensor models

*** To save any changes, press  on TRL and  on TDU ***
 *** To the previous step without saving, press  on TRL and TDU ***

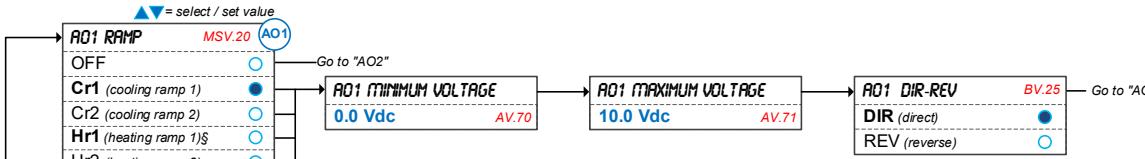

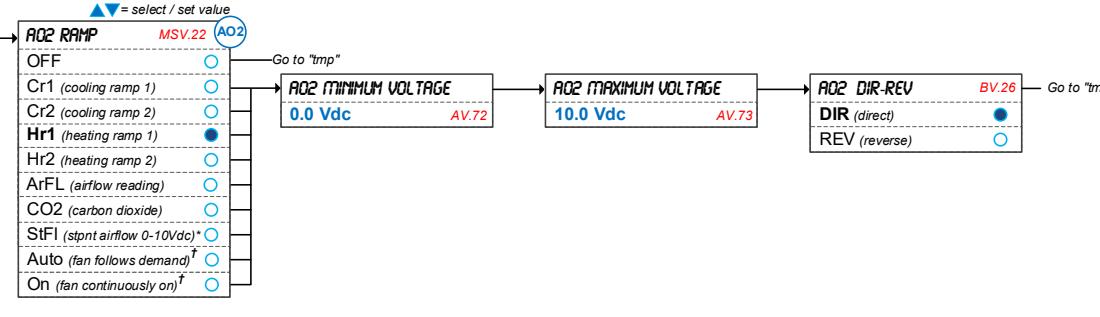

§ = For models EVCB14NIT0S, the default value is Hr1

* = StFl not available on pressure dependent model EVCB14NDT4S

^t = Auto and On options are for fan powered box applications are only available with models:

- EVCB14NIT4S
- EVCB14NDT4S
- EVCB14NIT4SF




TRL24 and TDU Series – Settings | Menu (5 of 6) | *Temp, Motor, Settings, and Ramps*


Main Menu

Sub Menu

Configuration


*** To save any changes, press on TRL and on TDU ***
*** To go to the previous step without saving, press on TRL and TDU **

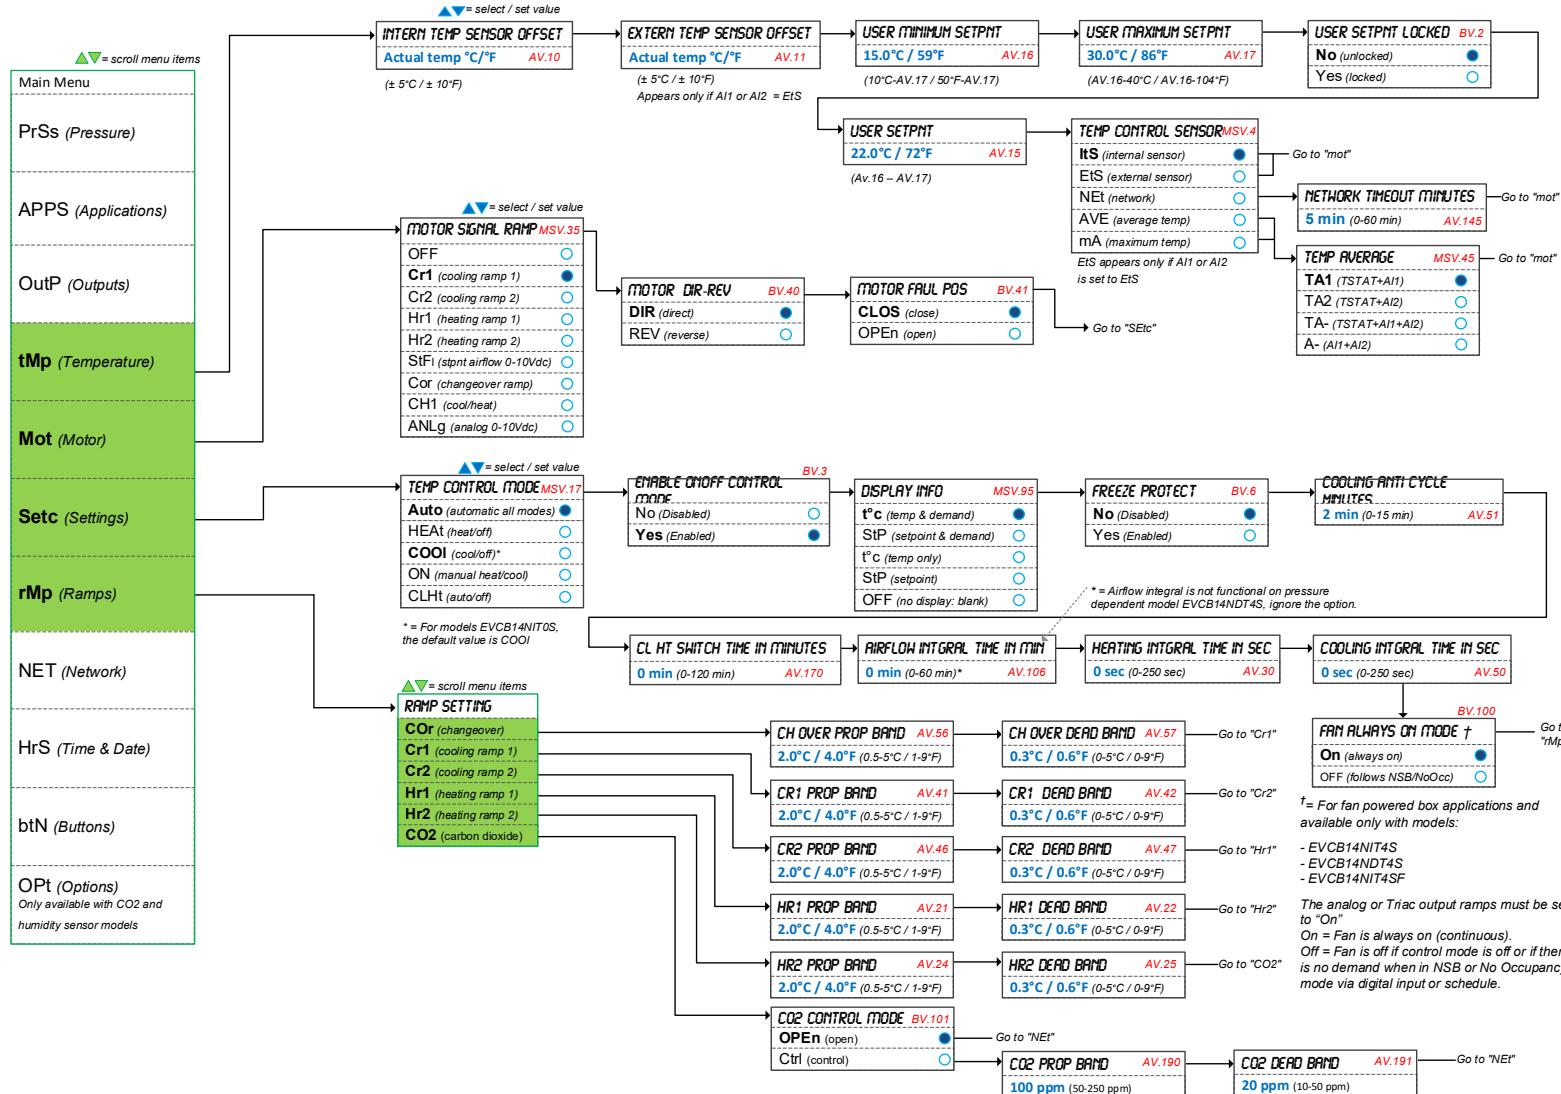


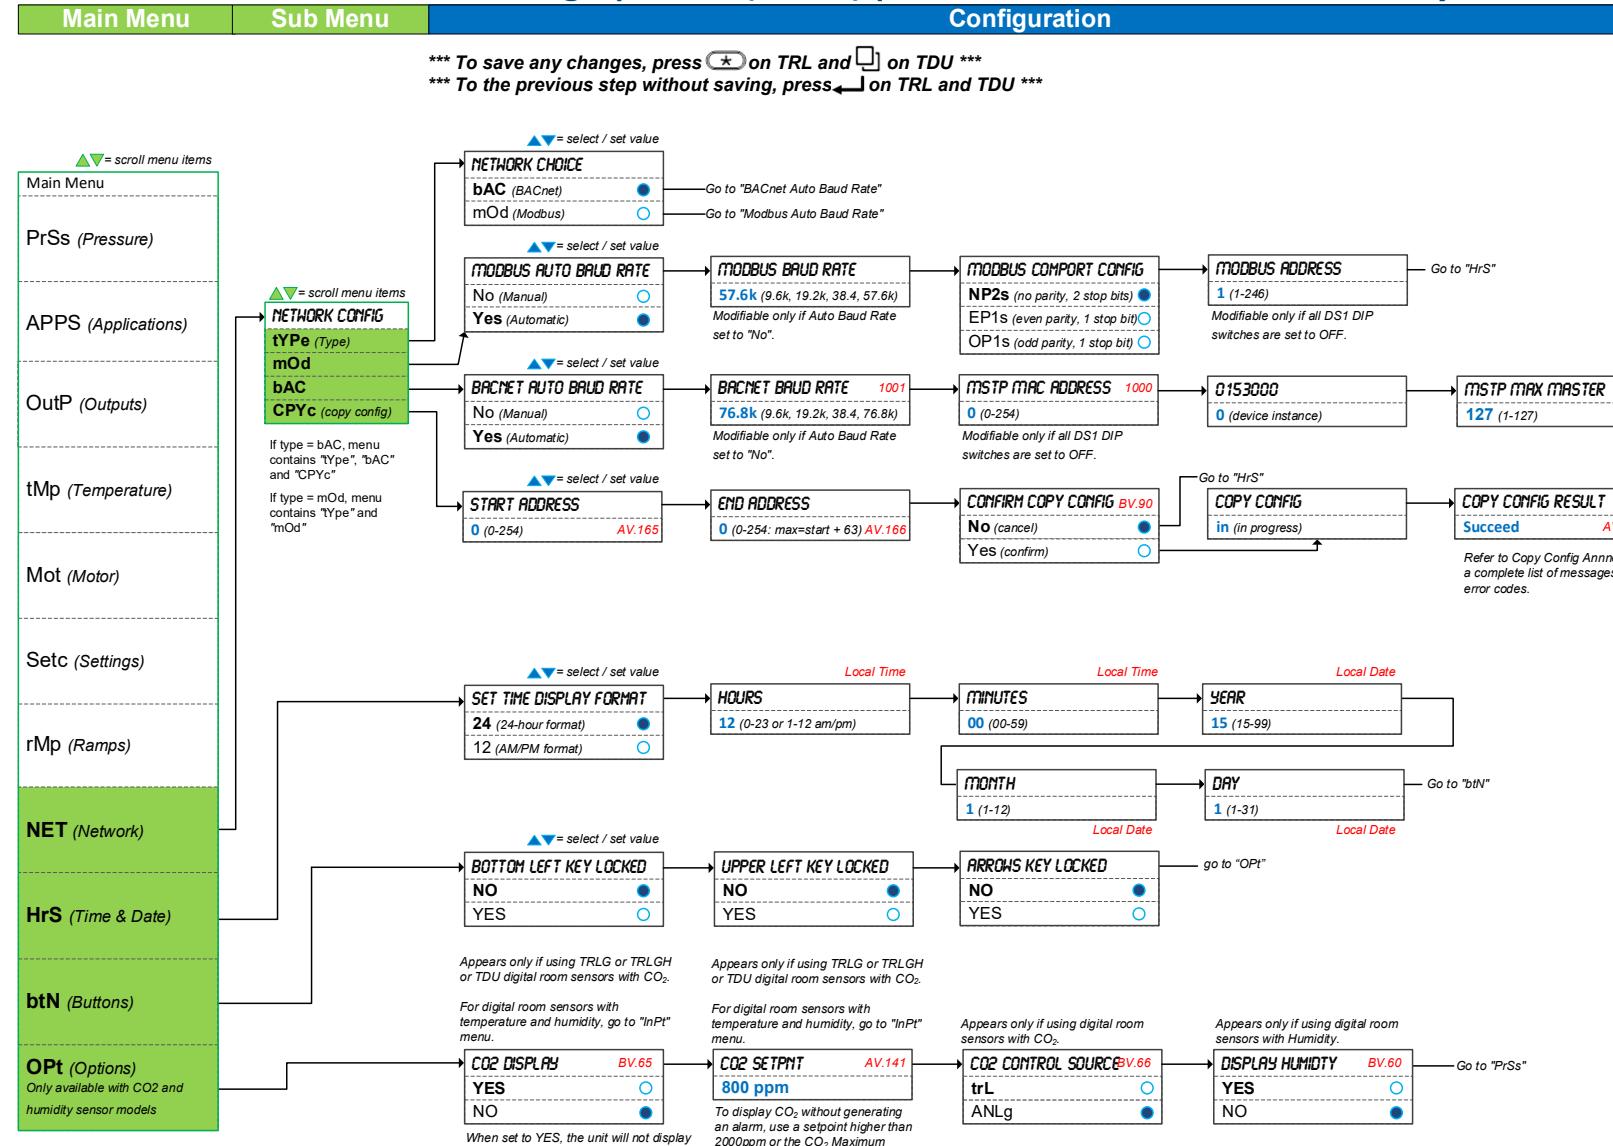
TRL24 and TDU Series – Settings | Menu (6 of 6) | Network, Time, Buttons, and Options


TRL54 Series – Pressure & Applications | Menu Overview (1 of 6) | Pressure and Applications


For a description of the default settings for each application refer to [Annex A: Control Apps](#) on page 31.

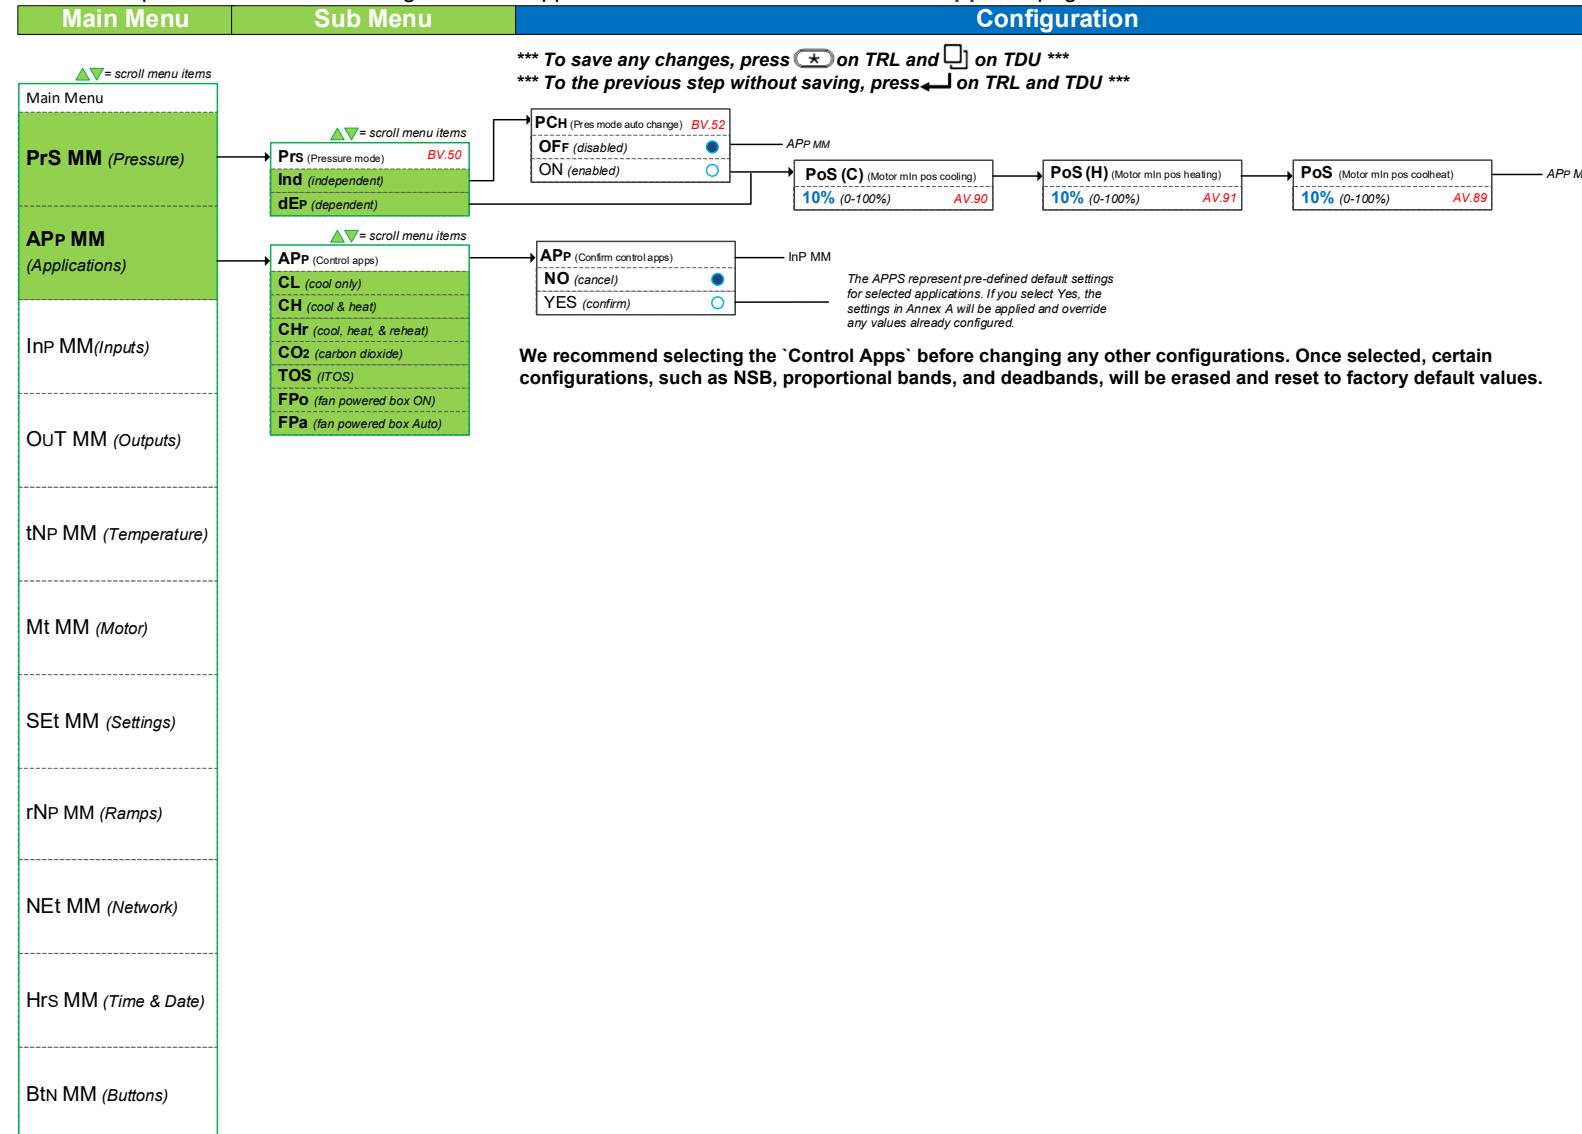


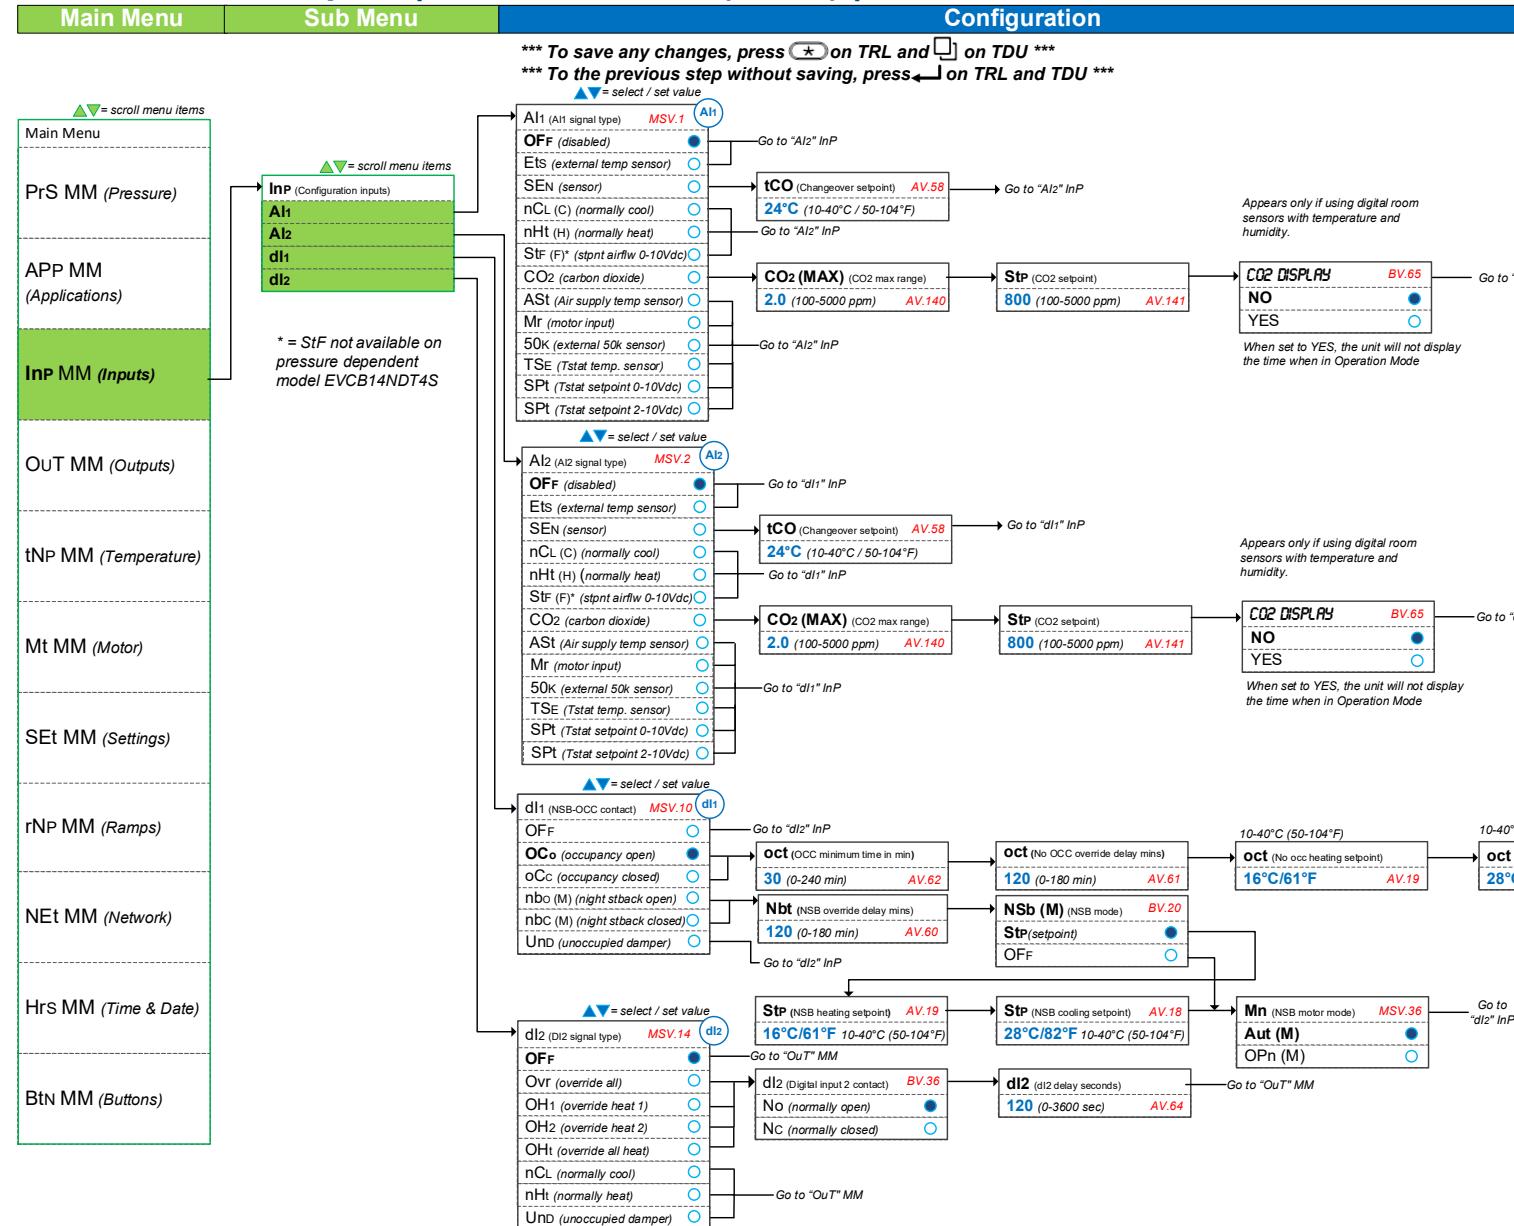TRL54 Series – Inputs | Menu Overview (2 of 6) | AI1, AI2, DI1, and DI2

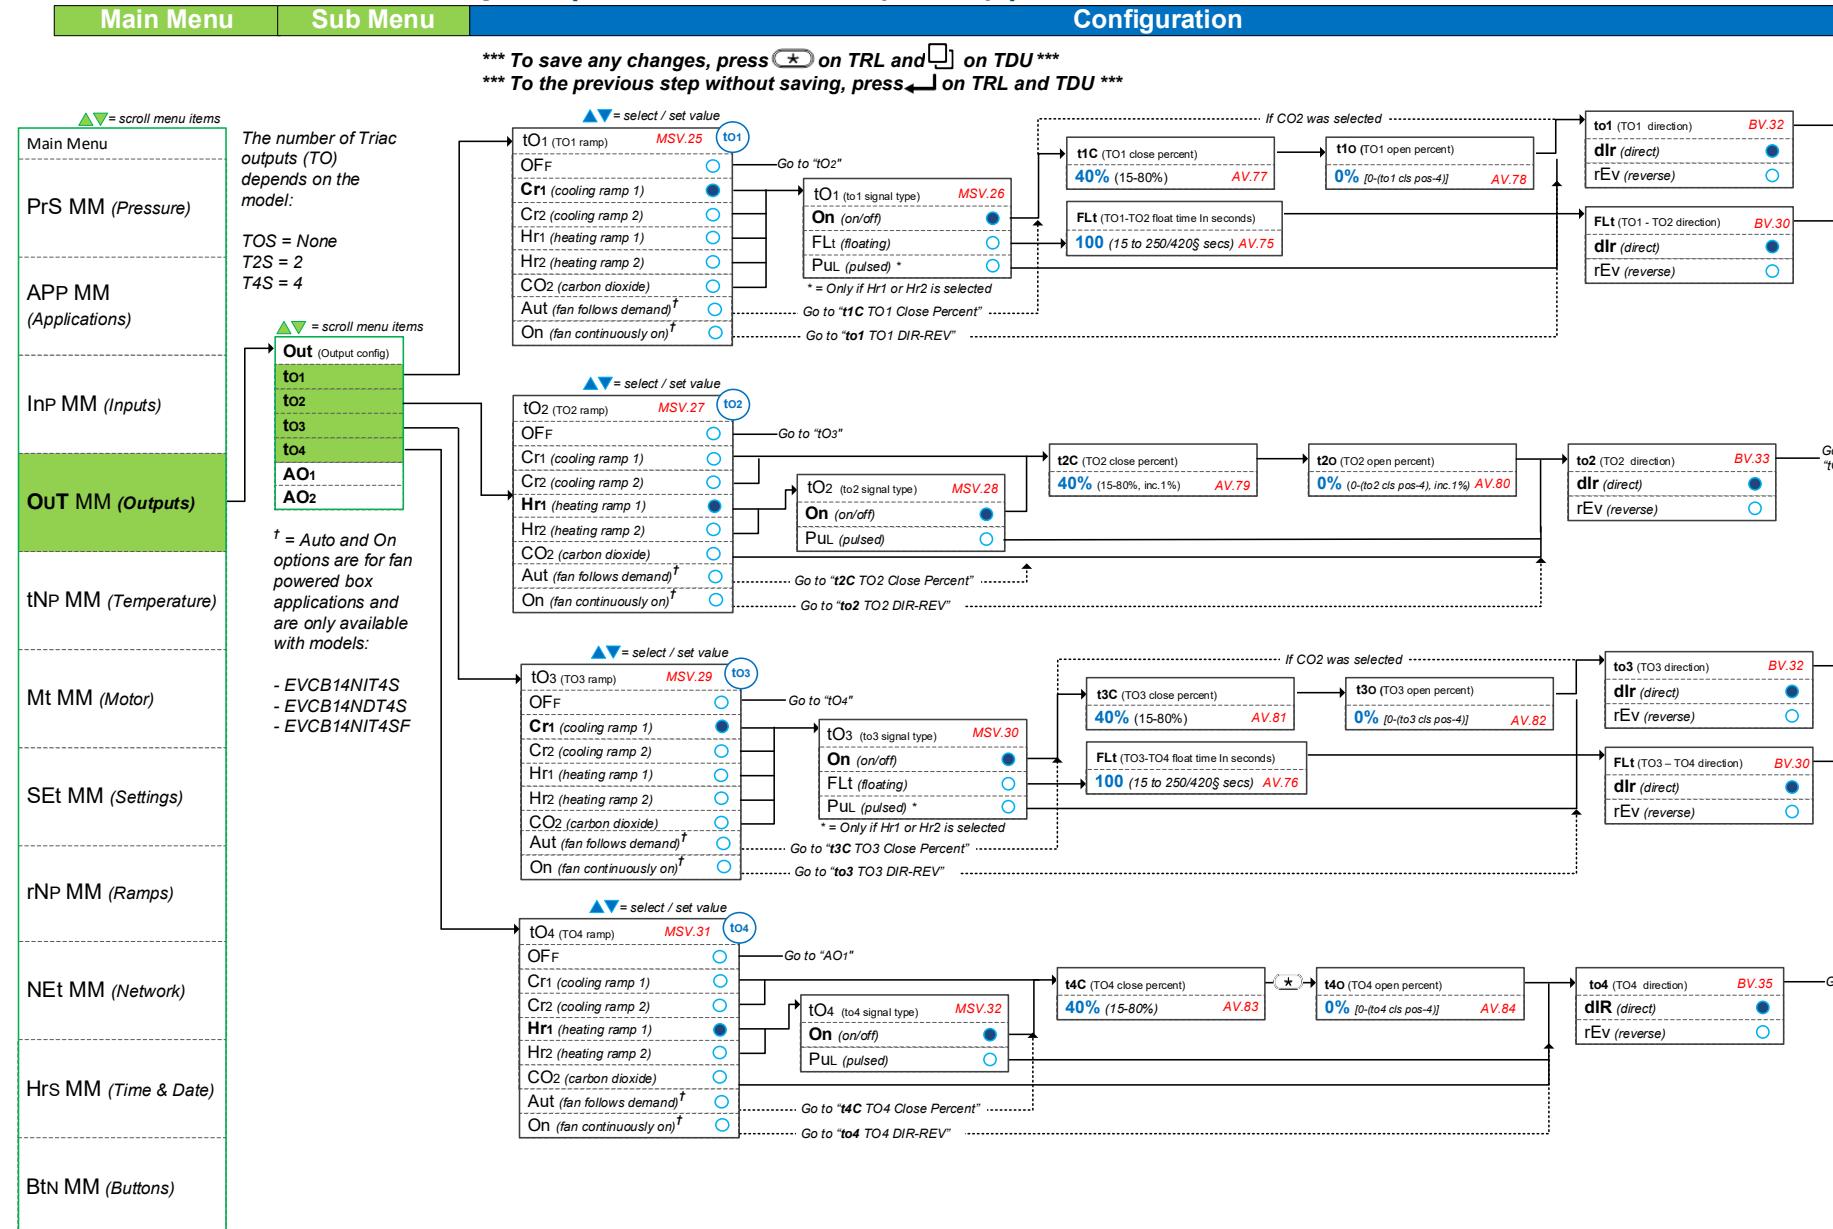
TRL54 Series – TRIAC Outputs | Menu Overview (3 of 6) | TO1 to TO4


TRL54 Series – Analog Outputs | Menu Overview (4 of 6) | AO1 and AO2

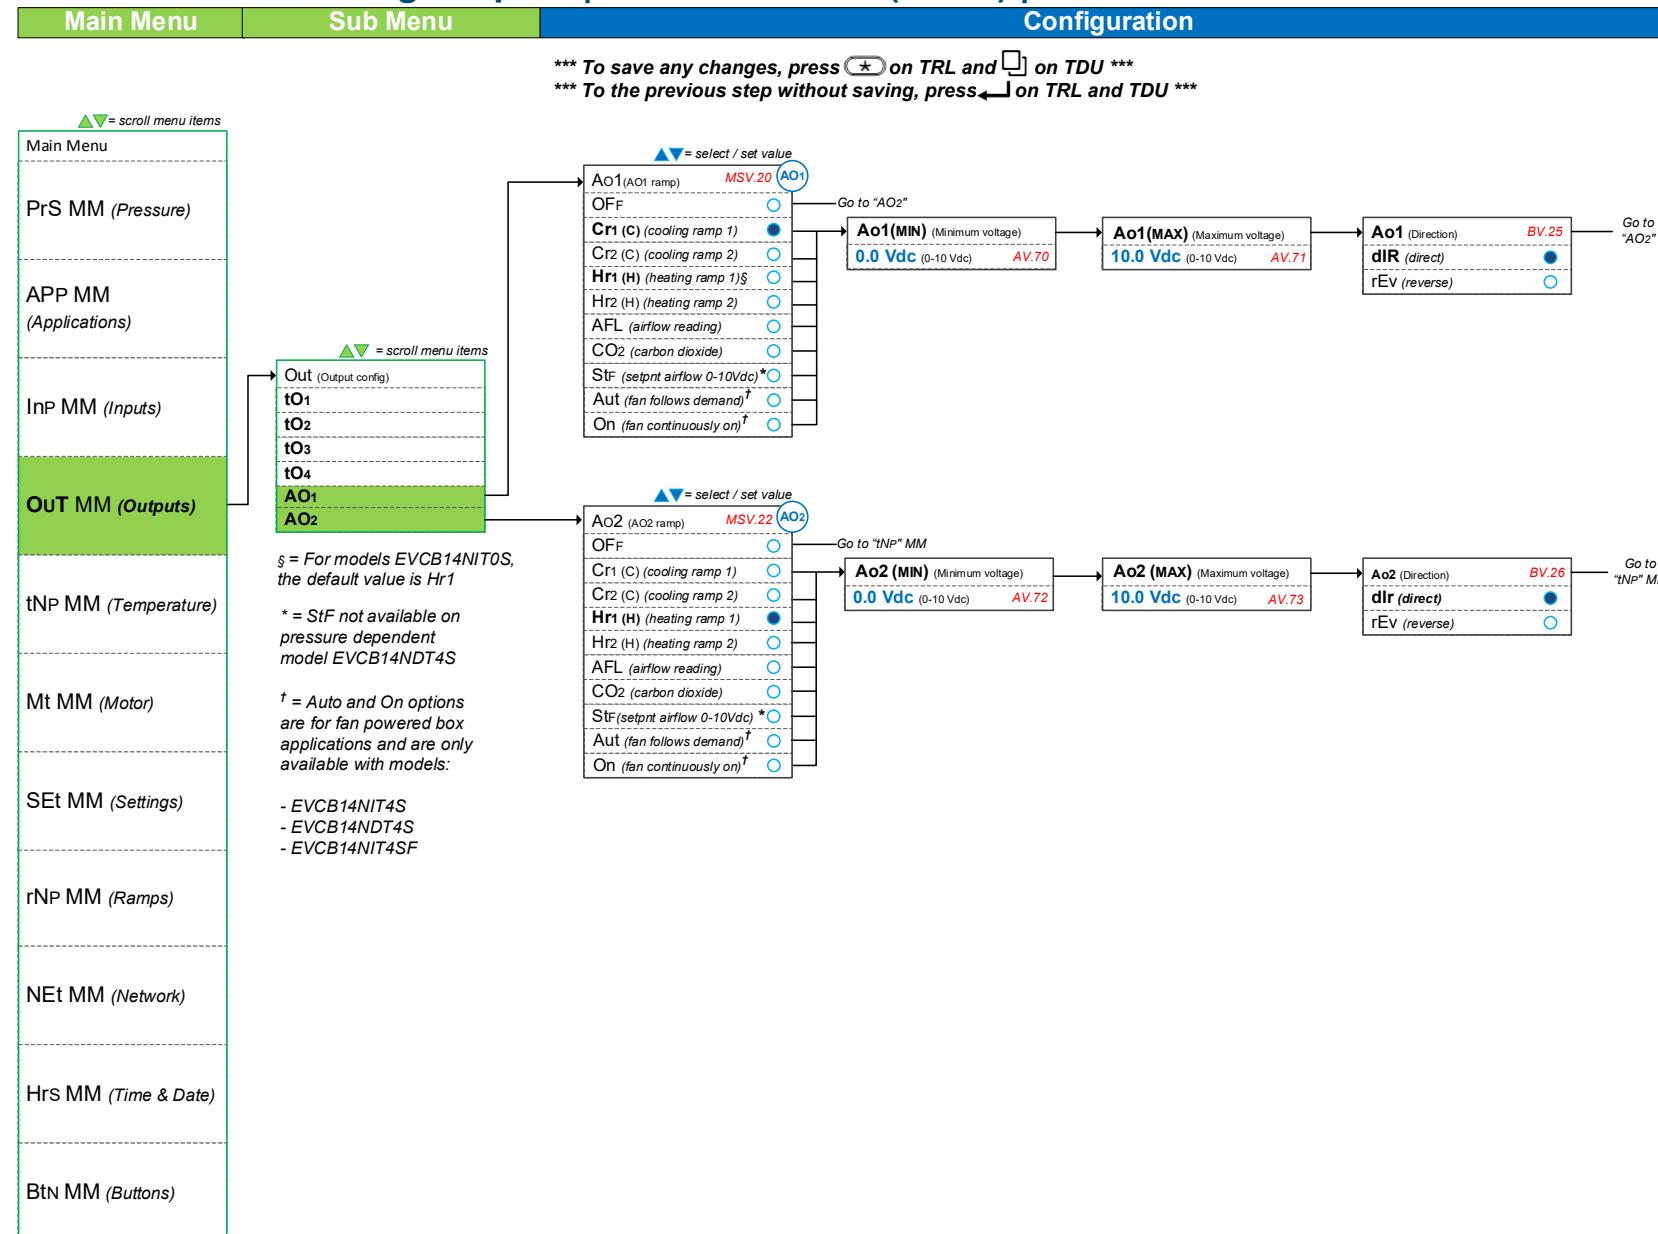

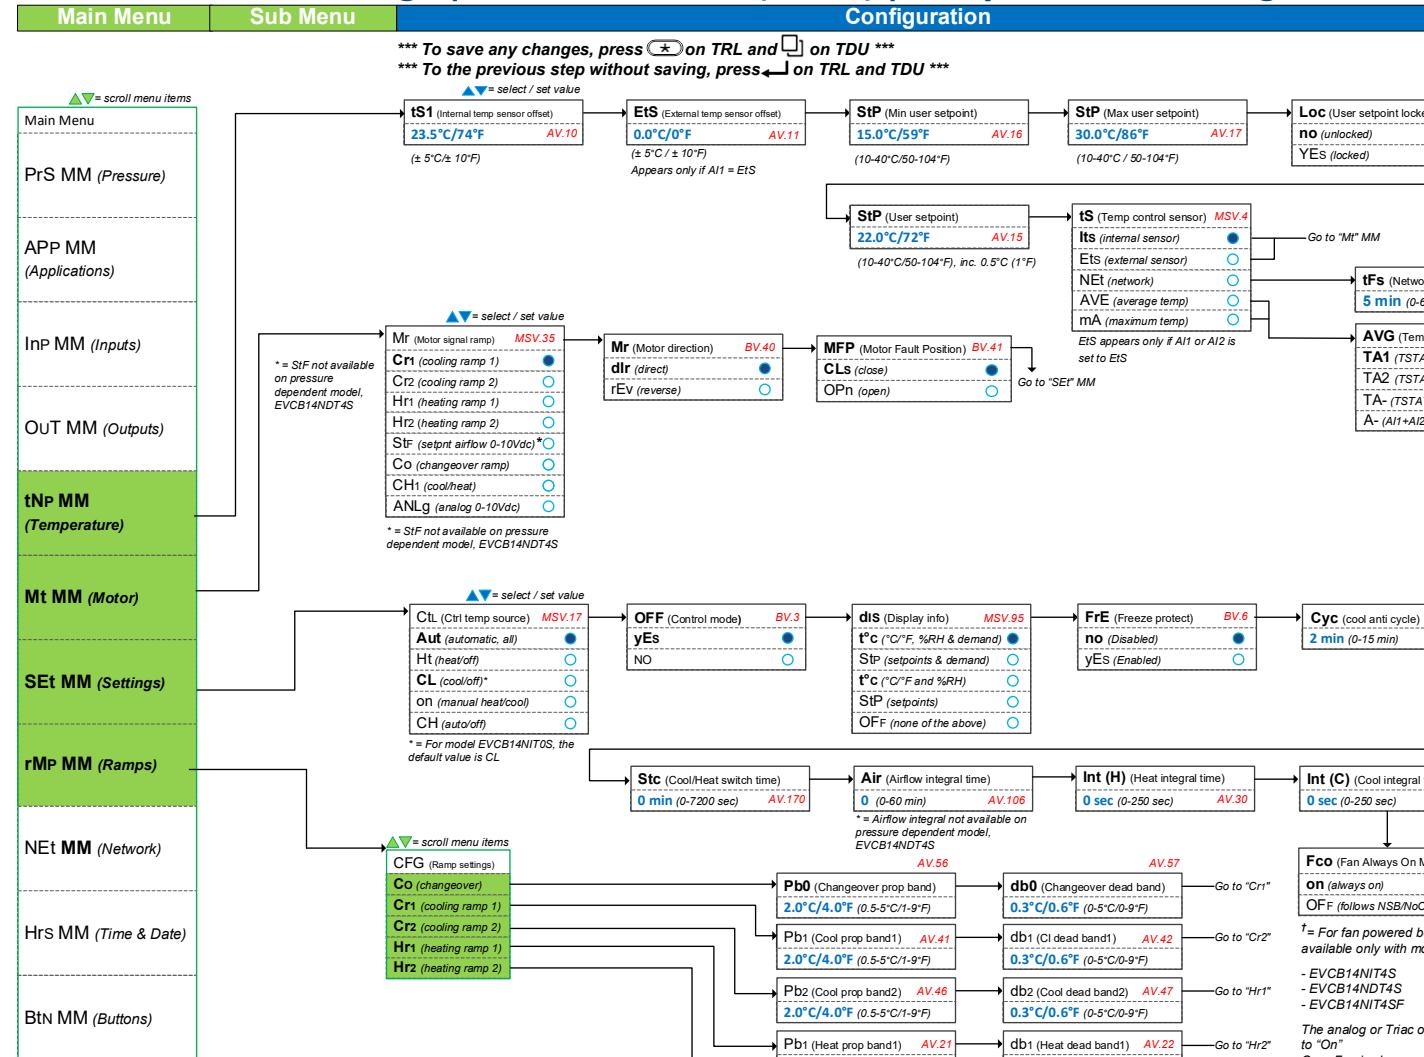TRL54 Series – Settings | Menu Overview (5 of 6) | Temp, Motor, Settings, and Ramps


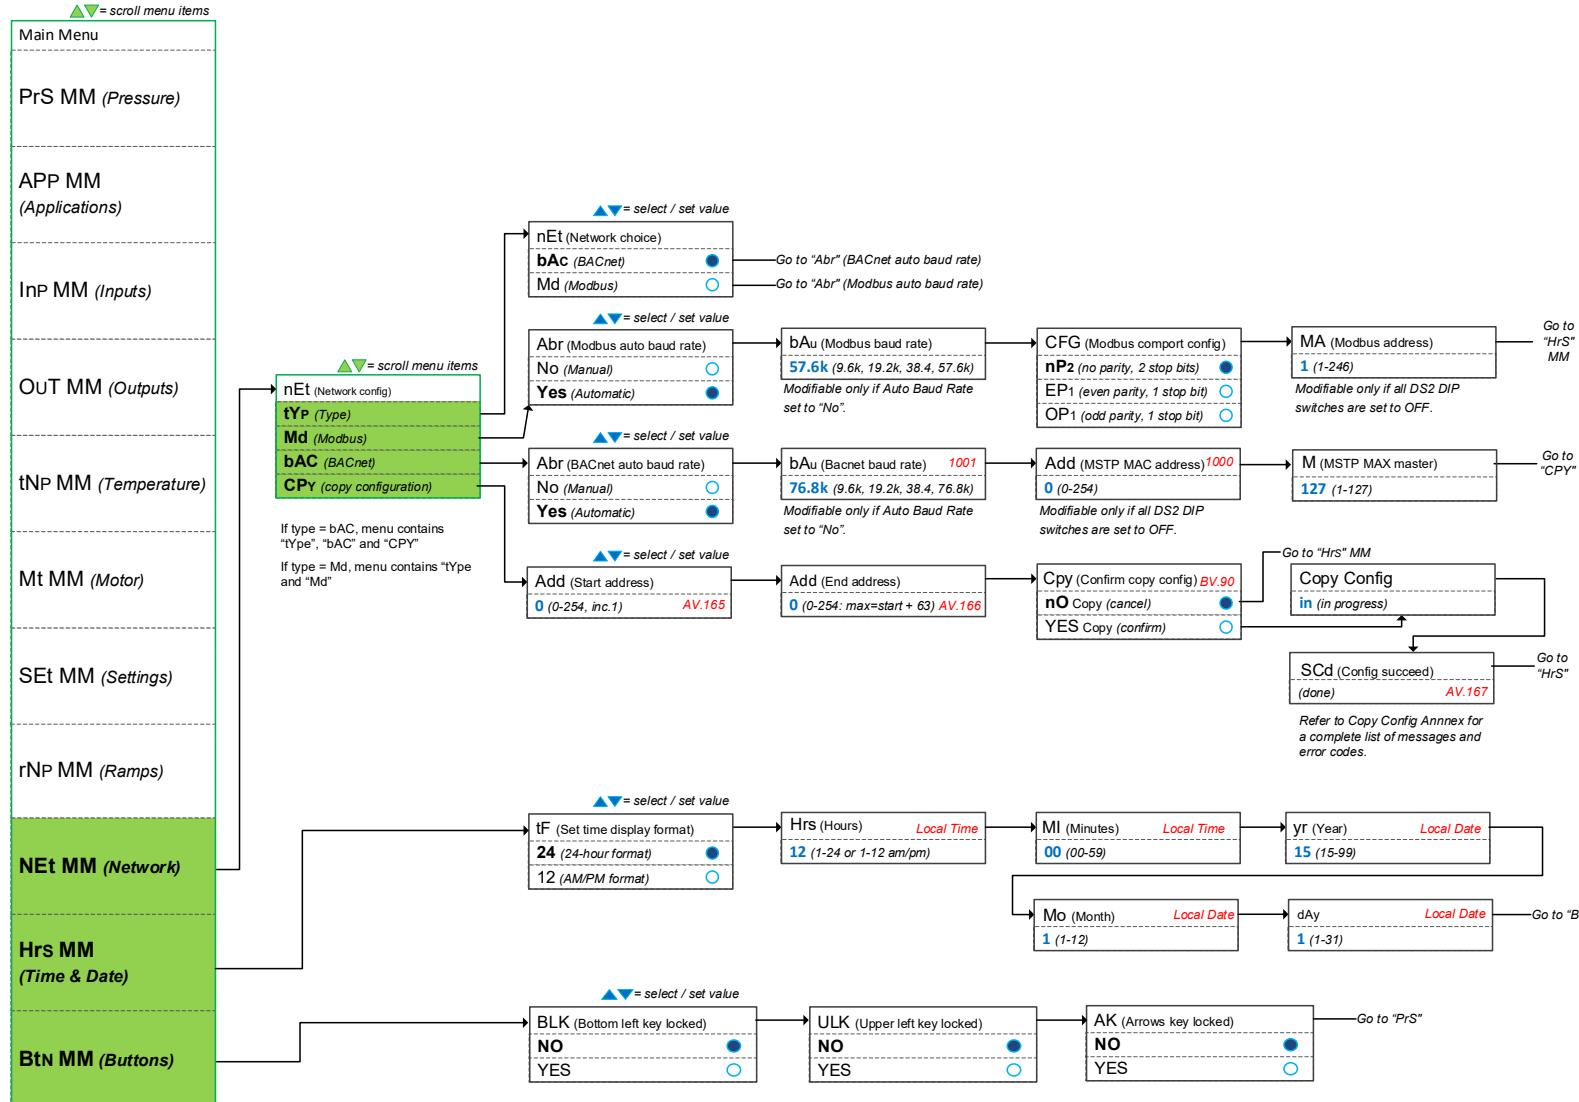
TRL54 Series – Settings | Menu Overview (6 of 6) | *Network, Time, and Buttons*

Main Menu

Sub Menu

Configuration

*** To save any changes, press  on TRL and  on TDU ***
*** To the previous step without saving, press  on TRL and TDU **





Operation Mode Menus

This menu is accessible through normal operation mode. The Mode Selector jumper (JP1) of the digital room sensor must be set to the “RUN” position (Operation Mode). Refer to [Wiring](#) on page 4.



Note Since the action buttons are different on TRL and TDU digital room sensor series, both buttons have been included in the instructions. Refer to the Action Buttons on Digital Room Sensor section to know and use the button as available on your digital room sensor.

1. Press the **[/]** and **[]** buttons simultaneously for 5 seconds. The “Enter Password” screen appears.
2. Enter the password within 1 minute by using the arrow keys to increase or decrease the value and the **[/]** and **[]** buttons to toggle between the digits.
 - a. Password **372** = Temperature Offset Menu
 - b. Password **637** = Network Settings Menu
 - c. Password **757** = Airflow Balance Mode
3. If you enter the wrong password, the digital room sensor displays “**Er0r**” and returns to Operation Mode. The digital room sensor will return to normal mode if you navigate through the entire menu and do not make any selection, or if you do not press any key for 5 minutes. The changed values will be saved automatically.

Menu 372 – Temperature Offset – TRL24/TDU and TRL54

1. “**INTERN TEMP SENSOR OFFSET**” | “**TS1**” (temperature sensor offset)



Range: 10 to 40°C [50 to 104°F]
Offset: Max \pm 5°C
Increment: 0.1°C [0.2°F]

Compare the displayed temperature reading with a known value from a digital room sensor. To offset or calibrate the sensor, use the arrows key to set the desired temperature reading. This is useful for digital room sensors installed in areas where the temperature read is slightly different than the room's actual temperature. For example, a digital room sensor placed right under the air diffuser.

If the digital room sensor is set to use an external temperature sensor (EtS), the digital room sensor displays “OFF”.

2. “**EXTERN TEMPER SENSOR OFFSET**” | “**ETS**” (external temperature sensor offset)



Range: 0 to 50°C [41 to 122°F]
Offset: Max \pm 5°C
Increment: 0.1°C [0.2°F]

This option appears if you've set one of the analog inputs to **EtS** (External temperature sensor). When the digital room sensor is connected to the appropriate analog input, the display shows the temperature read by the external temperature sensor. Adjust the offset by comparing it with a known value (e.g. thermometer). If the sensor is not connected or short circuited, then the unit displays the sensor's limit.


3. “**INPUT3 READING**” | “**PRS**” (input 3 reading)



Range: 250mV (0") to 4000mV (1")


Displays the voltage output value in mV of the pressure sensor. Does not appear for EVCB14NDT4S (pressure dependent) model.

Menu 637 – Network Settings - TRL24 and TDU

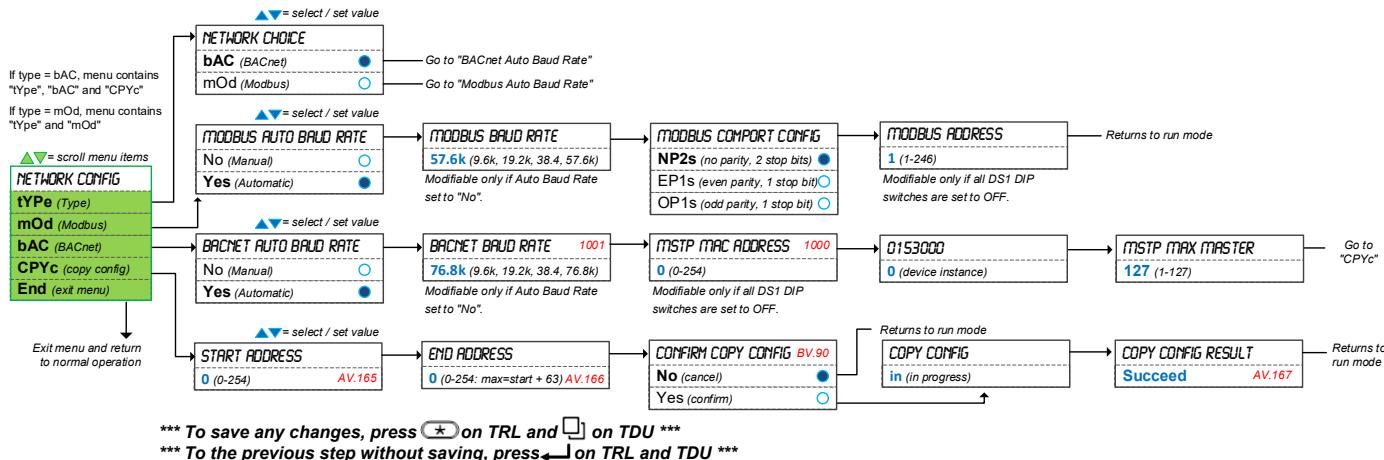


Menu 757 – Airflow Balance Mode - TRL24 and TDU

Pressure Independent: models EVCB14NIT0S, EVCB14NIT2S, and EVCB14NIT4S

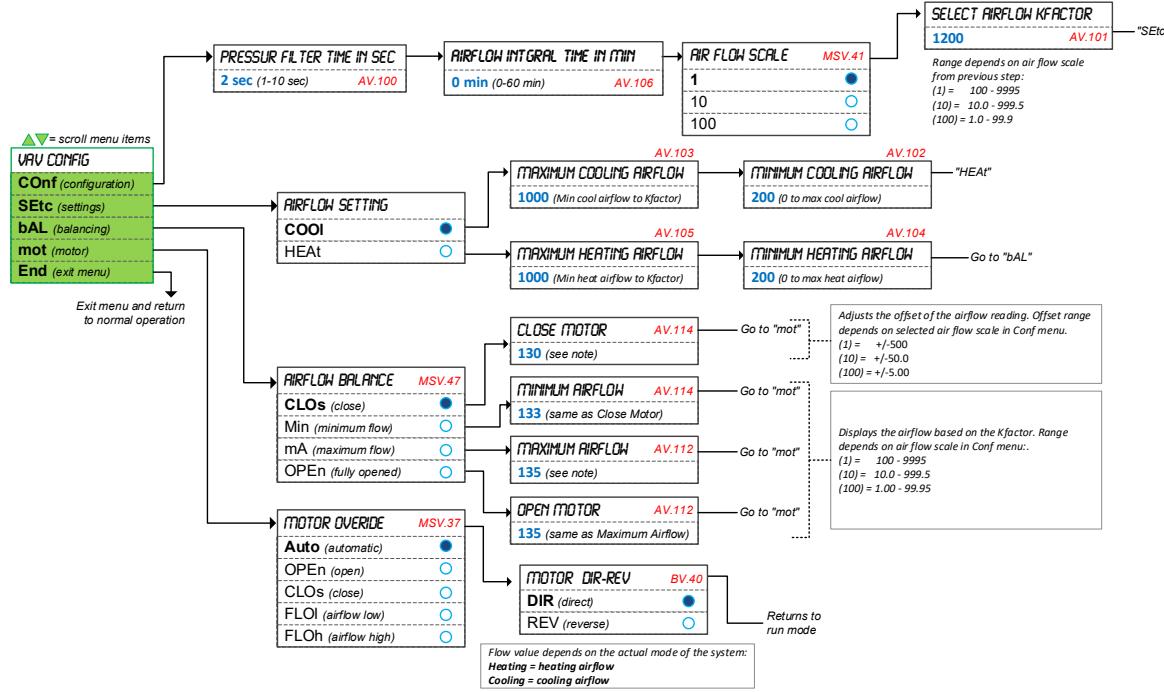

Note: Refer to [EVCR-Airflow Balance Instructions](#) on Neptronic website for further information on airflow balancing function.


Pressure dependent model EVCB14NDT4S or other models if in pressure dependent mode

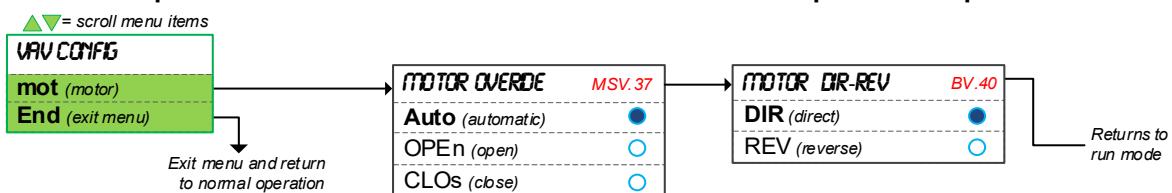

*** To save any changes, press  on TRL and  on TDU ***
*** To the previous step without saving, press  on TRL and TDU ***




Menu 637 – Network Settings - TRL54

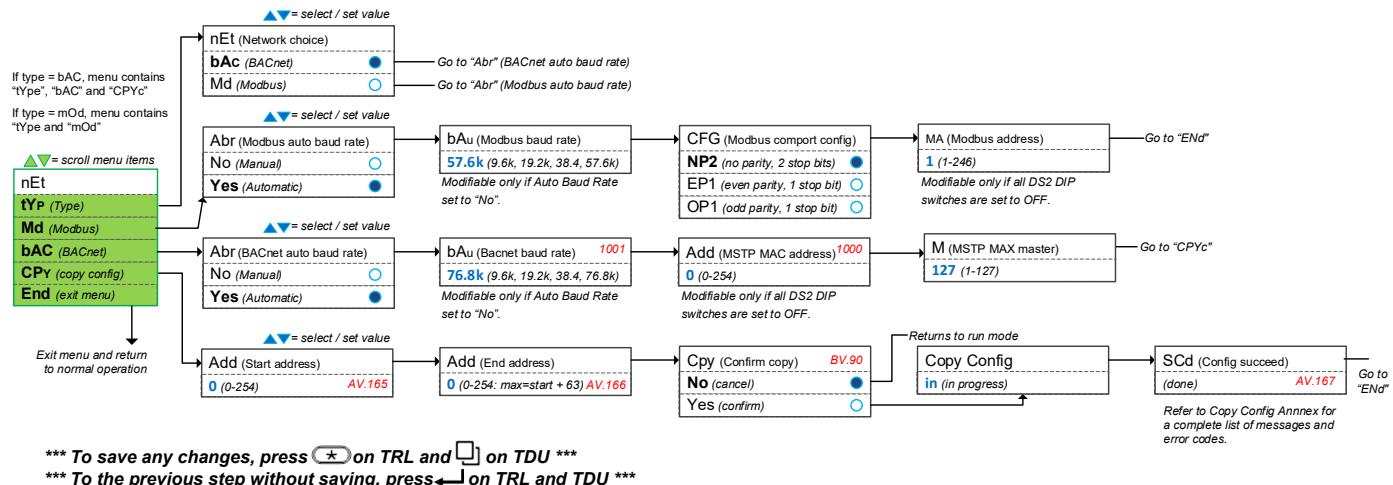

Menu 757 – Airflow Balance Mode - TRL54

Pressure Independent: models EVCB14NIT0S, EVCB14NIT2S, and EVCB14NIT4S

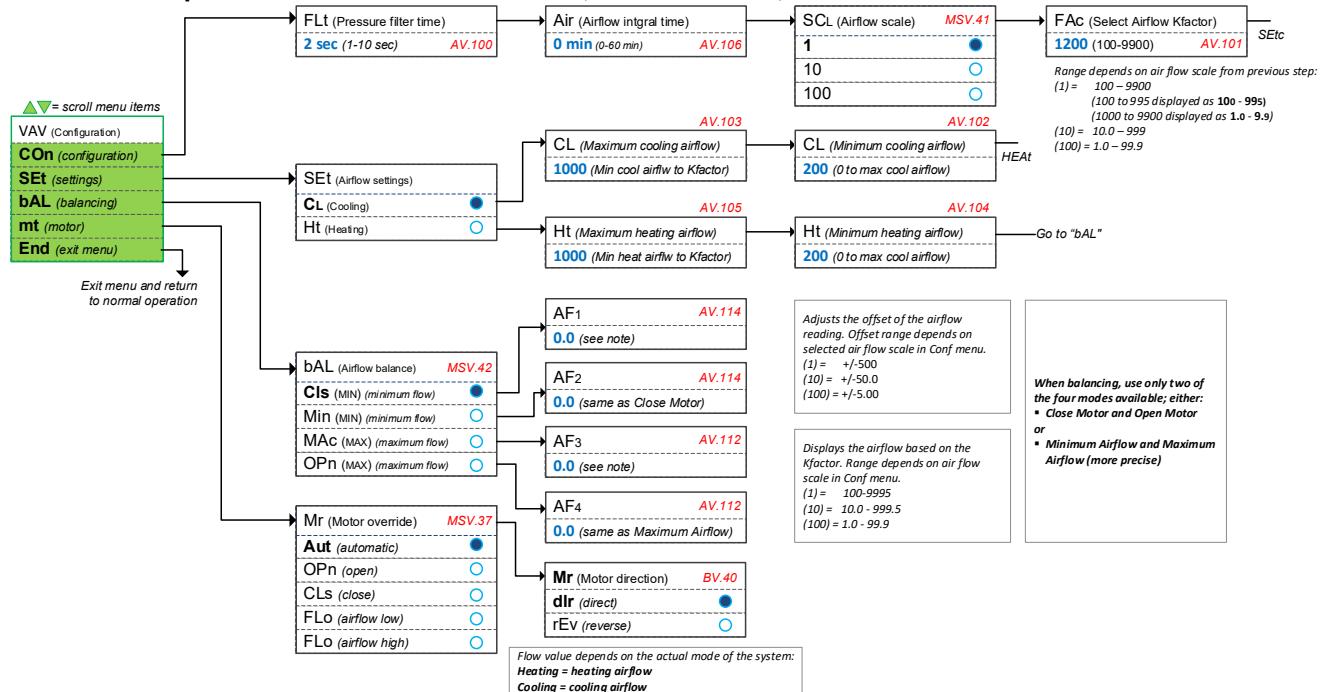


*** To save any changes, press ***** on TRL and **□** on TDU ***
*** To the previous step without saving, press **←** on TRL and TDU ***



Note: Refer to [EVCB-Airflow Balance Instructions](#) on Neptronic website for further information on the airflow balancing function.

Pressure dependent model EVCB14NDT4S or other models if in pressure dependent mode

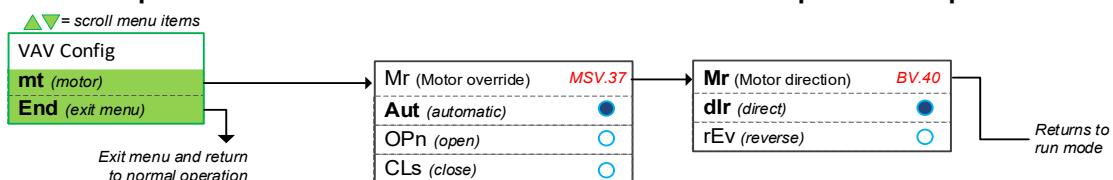

*** To save any changes, press ***** on TRL and **□** on TDU ***
*** To the previous step without saving, press **←** on TRL and TDU ***

Reset to Factory Default Settings



This will erase all actual configurations and replace them with the factory default settings.


1. The Mode Selector jumper (JP1) of the digital room sensor must be set to the "RUN" position (Operation Mode). Refer to [Wiring](#) on page 4.
2. During the power up sequence of the controller and digital room sensor, press and hold both the and buttons.
3. The "Enter Password" screen appears. Enter **372** within 1 minute by using the arrow keys to increase or decrease the value and the / and buttons to toggle between the digits.
4. Use the arrow buttons to select YES and then press / .




Operation Mode



The Mode Selector Jumper (JP1) of the digital room sensor must be set to the "RUN" position (Operation Mode). Refer to [Wiring](#) on page 4.

TRL24 - Runtime User Interface

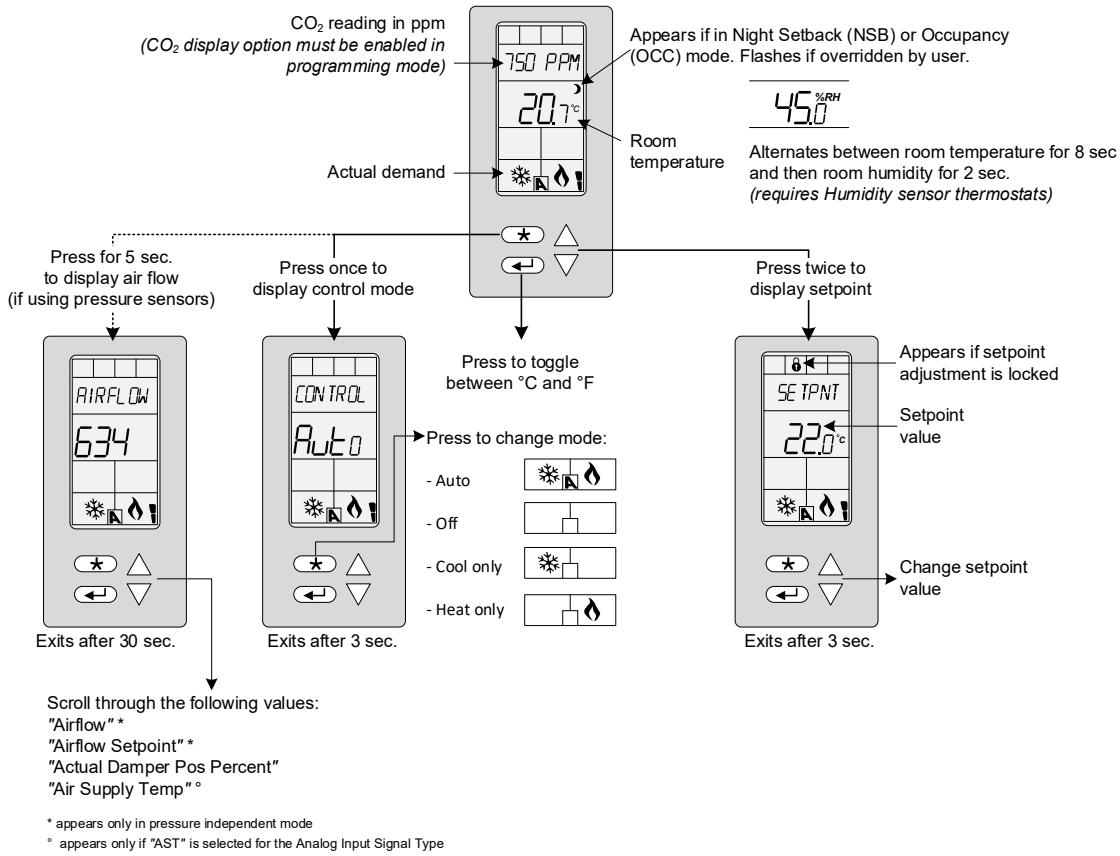

TRL54 – Runtime User Interface

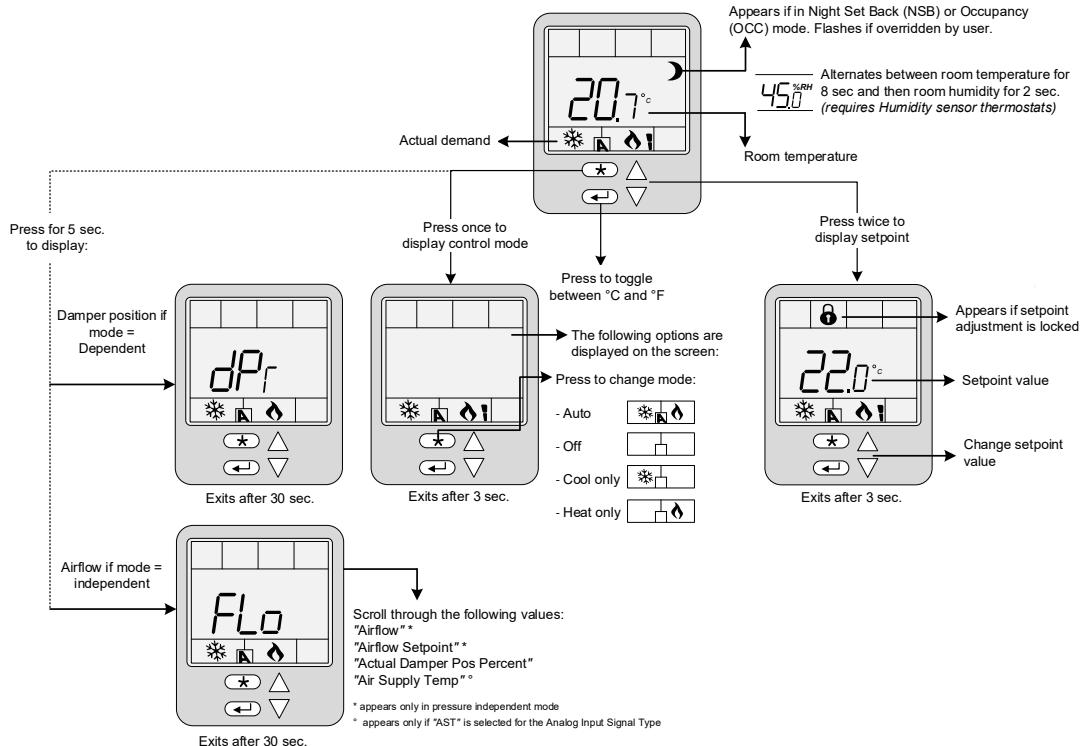

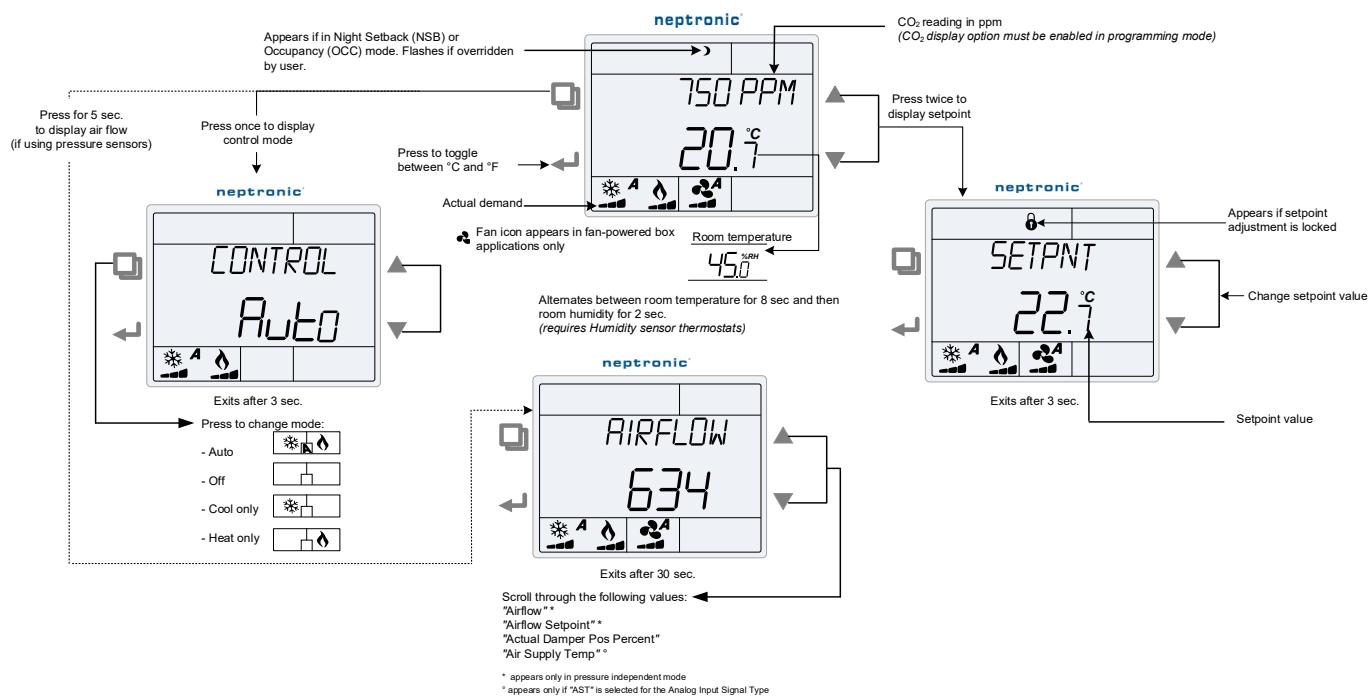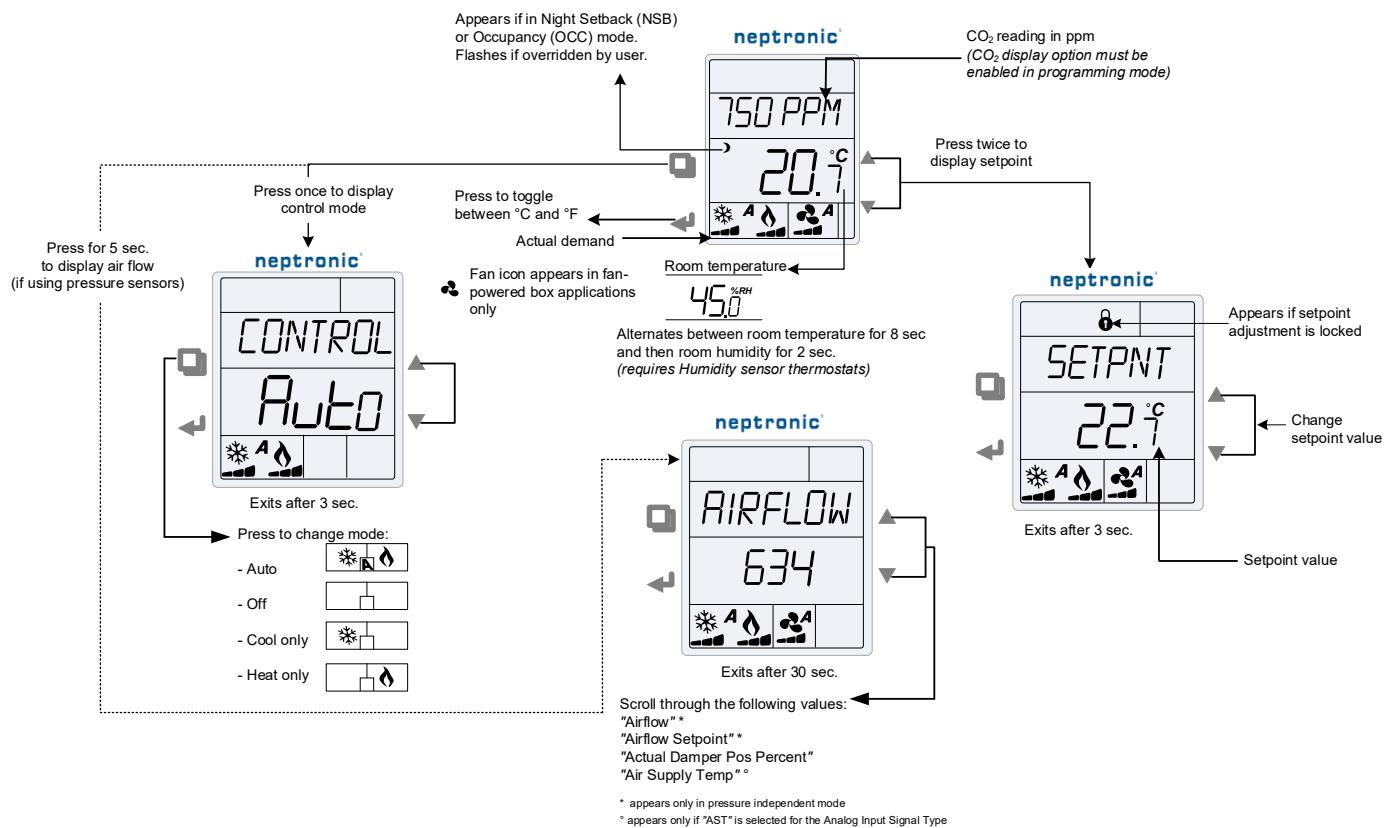**TDU10 / TDU40 / TDU70 Series – Runtime User Interface****TDU00 / TDU30 / TDU60 Series – Runtime User Interface**



Operation Mode Settings

Power Up

Upon power up, the LCD illuminates and all segments appear for 2 seconds. The digital room sensor then displays its current version of the digital room sensor for 2 seconds followed by the current version of the controller for 2 seconds. Pressing any key on the digital room sensor illuminates the LCD for 4 seconds.

CO₂ (Digital Room Sensors with CO₂)

If enabled via the configuration menu, the digital room sensor displays the CO₂ reading on the first line above the temperature reading. If CO₂ display is enabled, the time will not be displayed.

Select Temperature Scale

To toggle the temperature scale between °C and °F, press the button.

Temperature Display and Setpoint

If enabled in the "Display Info" menu of the *Temp, Motor, Settings, and Ramps* of TRL24/TDU or TRL54 on pages 16 or 22, the digital room sensor displays the temperature reading for 8 seconds.

If the sensor is disconnected or short circuited, then the unit displays the sensor's limit.

To display the setpoint, press the or key twice. The setpoint appears for 3 seconds.

To adjust the setpoint, press the arrow keys while the temperature is displayed. If the setpoint adjustment has been locked "Setptn Locked" option in **Temperature settings** (TRL/TDU menus on page 16 or 22), the lock symbol appears.

Humidity Display

If enabled in the "Options" menu of the *Network, Time, Buttons, and Options* of TRL24/TDU on page 17, the digital room sensor displays the temperature reading for 8 seconds and then displays the humidity reading for 2 seconds.

If the sensor is disconnected or short circuited, then the unit displays the sensor's limit.

Airflow and Air Supply Temperature

Press and hold the / button for 5 seconds and use the arrow keys to view the "airflow", "airflow Setptn", "actual damper pos percent" and "air Supply Temp". After 30 seconds without any action, the digital room sensor returns to operation mode. The air supply temperature appears only if analog input AI1 or AI2 are configured with the AST option.

Not available on the following pressure dependent model *EVCB14NDT4S*.

Control Mode

To access the Control Mode, press the / button. The Control Mode appears for 3 seconds.

Press the / button to scroll through the following control modes. These options can vary depending on the options selected in "Temp Control Mode" and "Enable OnOff Control Mode".

- Auto (Automatic Cooling or Heating)
- OFF (if it is not disabled in Programming Mode)
- Cooling only (on, with cooling symbol)
- Heating only (on, with heating symbol)


Night Setback (NSB) or Occupancy Mode

This function is only available if you set DI1 to **nSb** (Night setback contact) or **Occ** (occupancy mode). If the DI1 contact is triggered, the digital room sensor enters NSB or No Occupancy Mode (the symbol appears) and uses the NSB or OCC heating and cooling setpoints.

If not locked, you can override the night setback or no occupancy mode for a predetermined period by pressing any of the 4 buttons. During the override period the symbol will flash. If the symbol does not flash, the override period is finished or the night setback or no occupancy override has been locked in programming mode.

Set Time and Date

1. Ensure that JP1 on the digital room sensor is set to run.
2. Press and hold the button for 5 seconds
3. Use the arrow keys to set the desired value. Press the / button to save and go to the next step. Press the button to go to the previous step without saving.

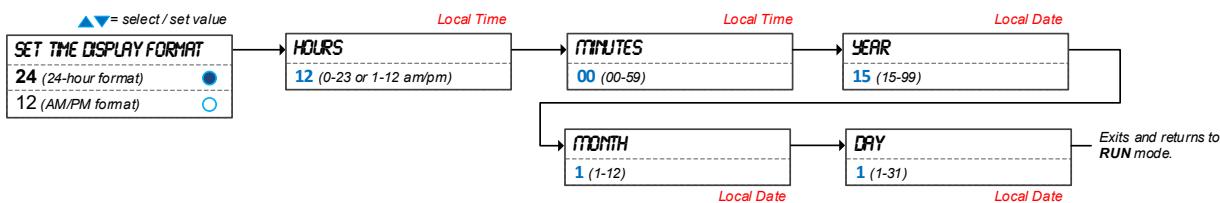

*** To save any changes, press on TRL and on TDU ***

*** To the previous step without saving, press on TRL and TDU ***



Note Time will only be displayed on the TDU when the BACnet scheduler is active. To achieve this, set the proper BACnet Object present value to Yes (1): EVCB BV.70 – Cfg_ActiveSchedule.

Annex A: Control Apps

Refer to *Pressure and Applications* menus of TRL24/TDU or TRL54 on pages 12 and 18 for more information. The available **Control Apps** vary according to the model.

| Description | CL (cool only) | CLHt (cool/heat) | CHRH (cool/heat/reheat) | CO ₂ (CO ₂) | ITOS (ITOS) | FPbo (fan powered ON) | FPbA (fan powered Auto) |
|-------------------|----------------------|-----------------------|----------------------------|---------------------------------------|----------------|--------------------------|----------------------------|
| Min. Setpoint | 20°C (68°F) | 20°C (68°F) | 20°C (68°F) | 20°C (68°F) | 15°C (59°F) | 15°C (59°F) | 15°C (59°F) |
| Max. Setpoint | 28°C (82°F) | 28°C (82°F) | 28°C (82°F) | 28°C (82°F) | 30°C (86°F) | 30°C (86°F) | 30°C (86°F) |
| Changeover Setptn | 24°C (75°F) | 20°C (68°F) | 20°C (68°F) | 20°C (68°F) | 24°C (75°F) | 24°C (75°F) | 24°C (75°F) |
| TO1 Ramp | HR1 | CR1 | HR1 | CR1 | OFF | HR1 | HR1 |
| TO1 Signal Type | On/Off | On/Off | On/Off | On/Off | On/Off | On/Off | On/Off |
| TO1 Close Pos. | 40% | 40% | 40% | 40% | 40% | 35% | 35% |
| TO1 Open Pos. | 0% | 0% | 0% | 0% | 0% | 0% | 0% |
| TO2 Ramp | HR1 | HR1 | HR1 | CO₂ | OFF | HR1 | HR1 |
| TO2 Signal Type | Pulse | On/Off | Pulse | On/Off | On/Off | On/Off | On/Off |
| TO2 Close Pos. | 40% | 40% | 40% | 40% | 40% | 70% | 70% |
| TO2 Open Pos. | 0% | 0% | 0% | 0% | 0% | 35% | 35% |
| TO3 Ramp | HR2 | CR2 | HR2 | HR1 | OFF | Fan ON | Fan Auto |
| TO3 Signal Type | On/Off | On/Off | On/Off | On/Off | On/Off | On/Off | On/Off |
| TO3 Close Pos. | 40% | 40% | 40% | 40% | 40% | 40% | 40% |
| TO3 Open Pos. | 0% | 0% | 0% | 0% | 0% | 0% | 0% |
| TO4 Ramp | HR2 | HR2 | HR2 | HR1 | OFF | HR1 | HR1 |
| TO4 Signal Type | Pulse | On/Off | Pulse | On/Off | On/Off | On/Off | On/Off |
| TO4 Close Pos. | 40% | 40% | 40% | 40% | 40% | 40% | 40% |
| TO4 Open Pos. | 0% | 0% | 0% | 0% | 0% | 0% | 0% |
| Motor Ramp | CR1 | CO₂ | CO₂ | CO₂ | CR1 | CR1 | CO₂ |
| AO1 ramp | HR1 | CR1 | HR1 | CR1 | HR1 | HR1 | HR1 |
| AO2 Ramp | HR2 | HR1 | HR2 | HR1 | OFF | HR2 | Fan Auto |
| AI1 Input | OFF | SENS | SENS | SENS | OFF | OFF | SENS |
| AI2 Input | OFF | OFF | OFF | CO ₂ | OFF | OFF | OFF |
| DI1 Input | nSb.o | nSb.o | nSb.o | Occ.o | Occ.o | nSb.o | nSb.o |
| Heat Prop Band 2 | 2°C (4°F) | 2°C (4°F) | 2°C (4°F) | 2°C (4°F) | 2°C (4°F) | 1°C (2°F) | 1°C (2°F) |
| Heat Deadband 2 | 1.3°C (2.6°F) | 1.3°C (2.6°F) | 1.3°C (2.6°F) | 1.3°C (2.6°F) | 0.3°C (0.6°F) | 1.3°C (2.6°F) | 1.3°C (2.6°F) |
| Cool Deadband 2 | 1.3°C (2.6°F) | 1.3°C (2.6°F) | 1.3°C (2.6°F) | 1.3°C (2.6°F) | 0.3°C (0.6°F) | 0.3°C (0.6°F) | 0.3°C (0.6°F) |

Legend

Grey Text = Standard default value

Bold Text = Special default value for selected application

HR = Heating ramp
 CR = Cooling ramp
 CO₂ = Changeover ramp
 SENS = Changeover temperature sensor
 Fan ON = Fan powered box in continuous mode
 Fan Auto = Fan powered box in automatic mode (follows demand)
 nSb.o = Night Setback (normally open)
 Occ.o = Occupancy mode (normally open)

TO = TRIAC output
 AO = Analog output
 AI = Analog input
 DI = Digital input

Notes



Recycling at end of life: please return this product to your Neptronic local distributor for recycling. If you need to find the nearest Neptronic authorized distributor, please consult www.neptronic.com.



neptronic®

400 Lebeau blvd, Montreal, Qc, H4N 1R6, Canada

www.neptronic.com

Toll free in North America: 1-800-361-2308

Tel.: (514) 333-1433

Fax: (514) 333-3163

Customer service fax: (514) 333-1091

Monday to Friday: 8:00am to 5:00pm (Eastern time)